

5.8 ASManager

5.8.1 Introduction

ASManager is the main access control software that stores the card and card holder database. The software also receives the status and events from each ASController (AS100/AS110, AS200, and AS400) for up to 255 controller connections. From ASManager, user may configure each door on each panel to operate according to certain schedule and input status.

- ASRemote is a remote application that connects to ASManager for remote control and viewing.
- ASWeb is a remote application that connects to ASManager for remote event log browsing.
- TA Web is a remote application that manages time and attendance of each employee.
- VM Web is a remote application that provides visitor management capability.

Basic ASManager can connect to one access controller without additional license. The ASManager USB key must be upgraded in order to accommodate more controllers (up to 255 controllers max). ASManager software can be installed from **Access Control Installation Disk**.

5.8.2 System Requirements

OS	32-bit	Windows 2000 / XP / Server 2003 / Vista / 7 / Server 2008
	64-bit	Windows Vista / 7 / Server 2008
CPU	Pentium 4, 3.0 GHz with Hyper-Threading	
Memory	2 x 256 MB Dual Channels	
Hard Disk	2.0 GB	
VGA	NVIDIA GeForce 7300 GT 128MB (PCI slot), or ATI Radeon 9550 / 9600 / X1050 Series 256MB (AGP slot) No support for onboard VGA	
DirectX	End-User Runtimes (November 2008)	
Software	.NET Framework 3.5 SQL Server 2005 Express (optional)	
Browser	Internet Explorer 7.0 or later	
Note: The software programs End-User Runtimes (November 2008) and .NET Framework 3.0 are necessary to run the GV-ASManager. The software programs can be found in the accompanying software CD.		

5.8.3 Main Features


- Control up to 255 GV-AS Controllers
- Up to 256 time zones and weekly schedules
- Up to 40,000 cards
- Up to 1,000 system users
- Holiday planning for 14 months
- Multiple cards per user
- Four (4) access mode options: Card only mode (default), Card and PIN Code mode, Card or Common mode, Release mode
- Enroll cards in batch mode
- Door alarms: door held open, door forced entry, tamper, access denied
- Duress operation
- Anti-Passback capabilities
- Man trap in double door configuration
- Import/export of card and cardholder data in Access or Excel file format
- User-defined matrix of 16-channel multi-views
- User-defined screen layout and dual monitor display support
- SMS or E-Mail notification with user-defined content, video snapshot and cardholder photo
- Video integration with GeoVision IP devices (GV-System, GV-NVR, GV-Video Server, GV-Compact DVR, GV-IP Camera) and third-party IP cameras
- Support Microsoft Access or SQL database

5.8.4 Software Installation

1. Insert “Access Control Installation Disk” into DVD-ROM.
2. In the menu, select “**1. Install or Remove GeoVision GV-Series Driver**”, then select “**Install GeoVision USB Devices Driver**”.



3. Click and install “**2. Install DirectX 9.0c**” then follow on-screen instructions.
4. Click and install “**3. Install Microsoft DirectX End-User runtimes (November 2008)**” then follow on-screen instructions.
5. Click and install “**4. Install Microsoft .NET Framework 3.5 (Not compatible with Windows 2000)**” then follow on-screen instructions.
6. Select “**6. Install GeoVision Access Control System**”.


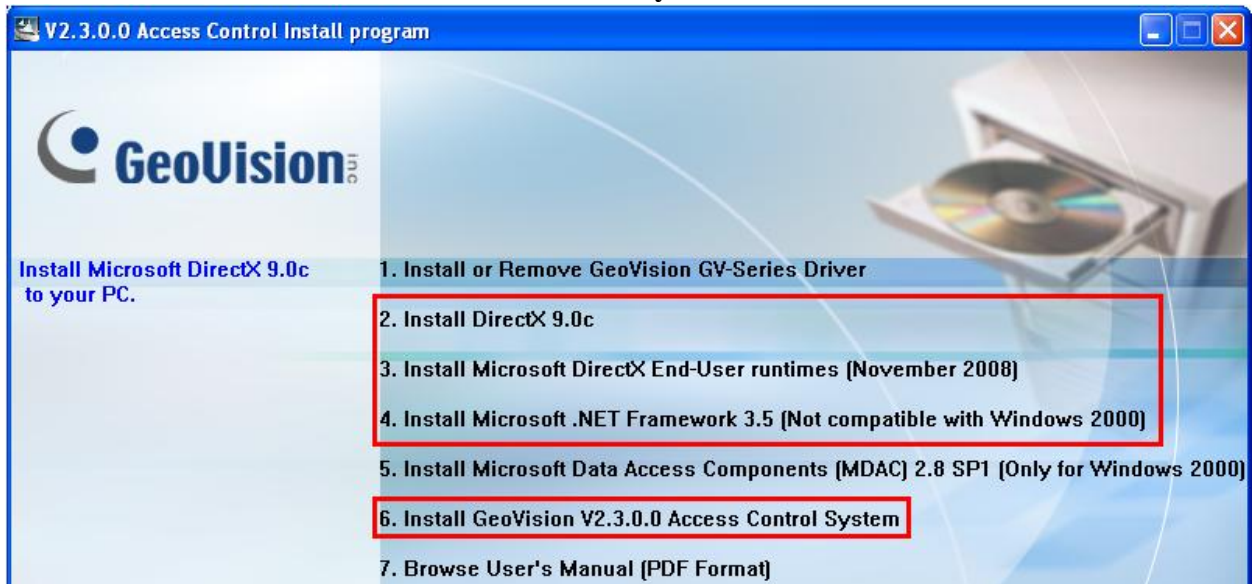


7. Select “**GeoVision Access Control System**” then follow on-screen instructions to **disable UAC** and install **ASManager** software.




5.8.5 Initialize Database

1. On Windows desktop, click on “Start”, “All Programs”, “Access Control”, “ASManager”.
2. If ASManager is installed for the first time, create a default set of **ID**, **Password**, **Password Confirmation**, and **Hint**.
 - ✓ Check “**Auto Login**” to allow ASManager to automatically login using the default set of ID and password whenever ASManager starts.
 - ✓ Check “**Allowing removing password system**” to enable PassUninstall.exe in case user may lose the supervisor ID and password to the system.
 - ✓ *If the option was not checked and user cannot retrieve his/her supervisor ID and password, the only option to remove password database would be to reformat system hard drive and reinstall Windows operating system.*
3. Click “**OK**” to proceed.
4. Click “**Yes**” to setup or upgrade database.
5. Select “**ASManager Database Setting**” icon.

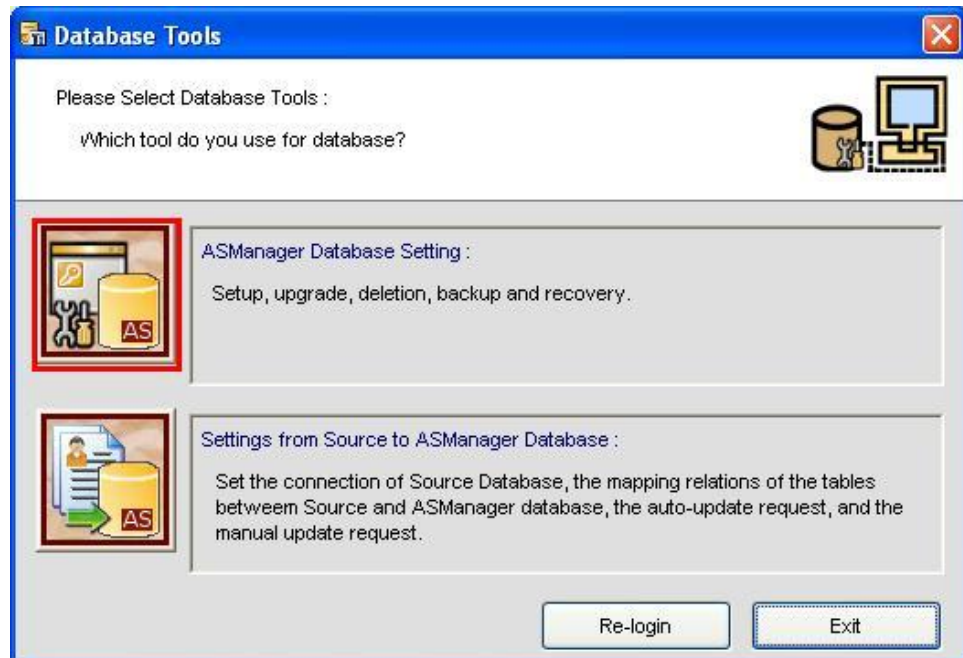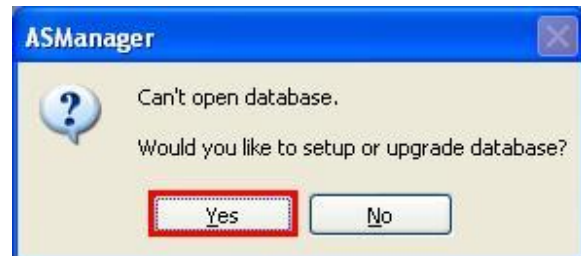


6. Select “**Setup MDB / MSSQL Database for ASManager**”.

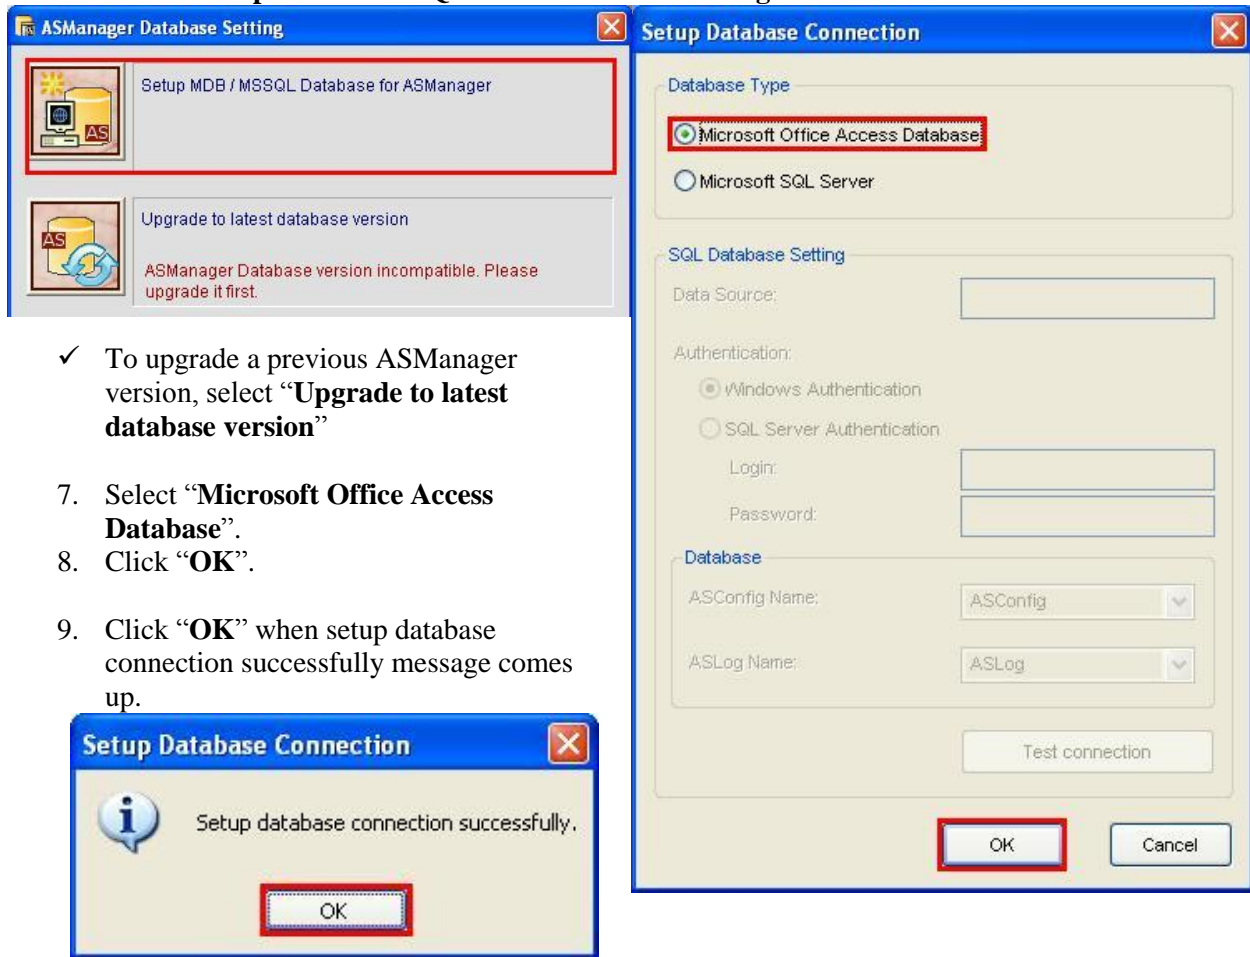


- ✓ To upgrade a previous ASManager version, select “**Upgrade to latest database version**”
- 7. Select “**Microsoft Office Access Database**”.
- 8. Click “**OK**”.
- 9. Click “**OK**” when setup database connection successfully message comes up.


10. Select “**Upgrade to latest database version**”.

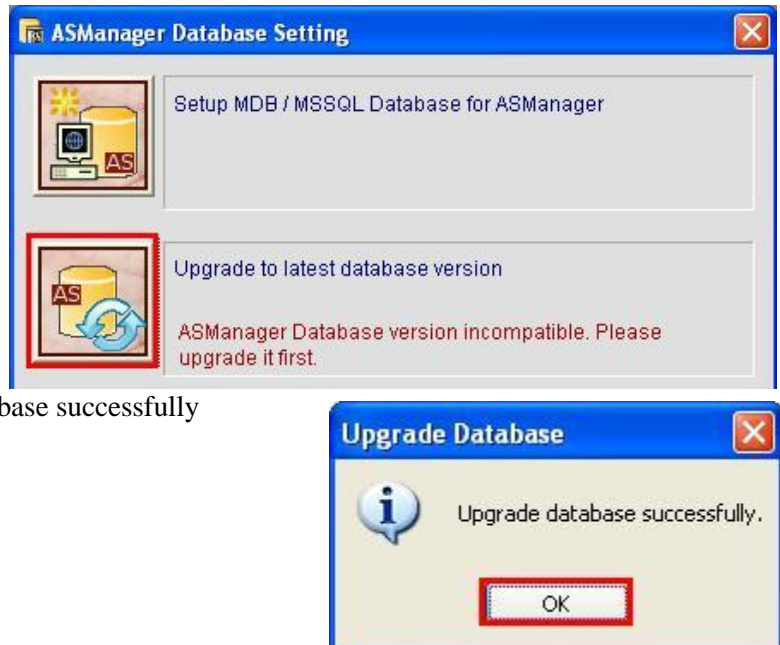

- 11. Click “**OK**” when upgrade database successfully message comes up.
- 12. Click “**Exit**”.

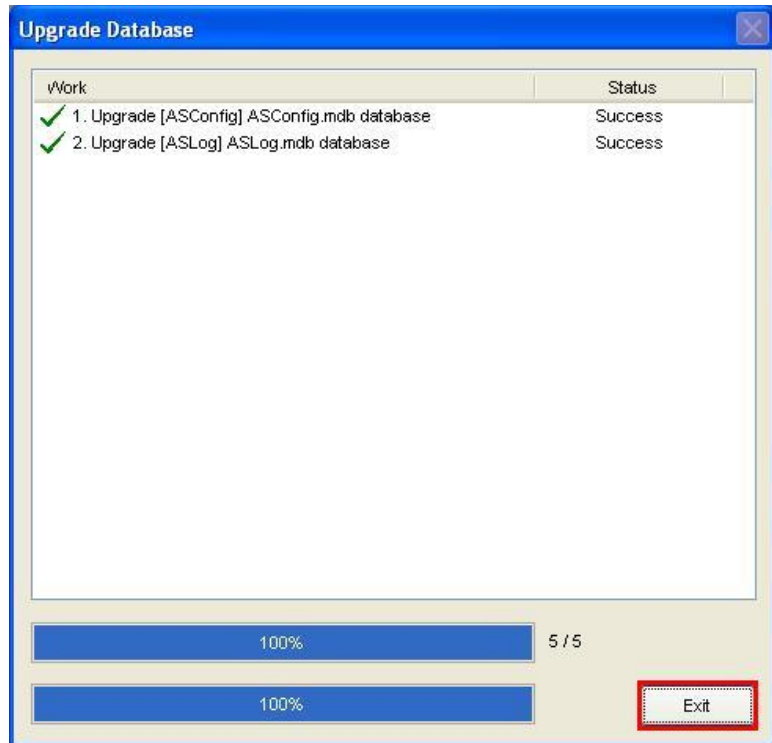

13. Select “**Re-login**” to start ASManager.

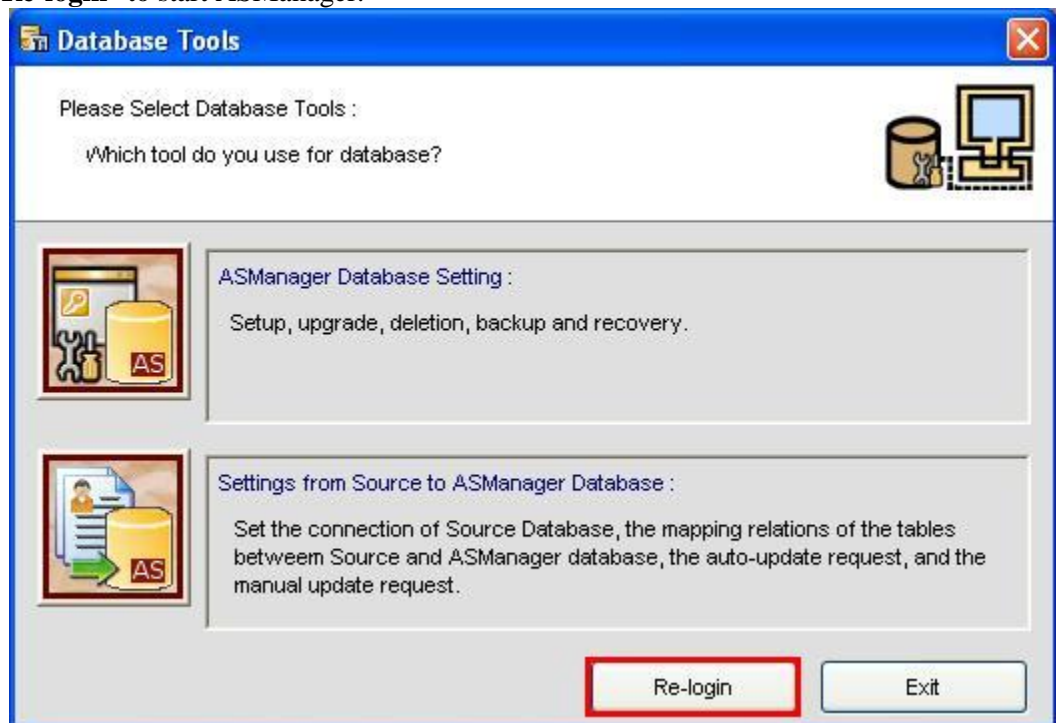


- ✓ Alternatively, ASManager can be started by going “**Start**”, “**All Programs**”, “**Access Control**”, “**ASManager**”.
- ✓ For detail instruction, refer to p.IV of ASManager User Manual

5.8.6 Controller Setup

1. Under ASManager, select “**Devices**”.



2. Click “**Add**” under Controller List.

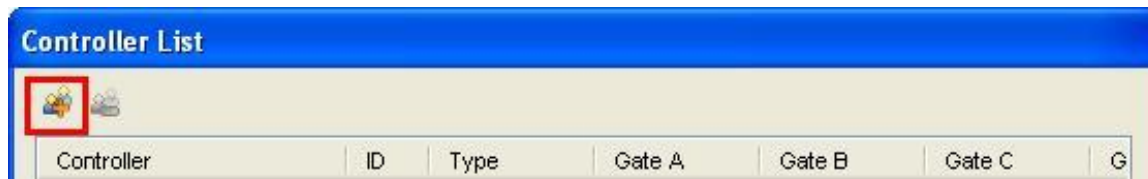

3. Enter Controller **ID**.



- ✓ For AS100/110 ID, refer to section 5.4.6
- ✓ For AS400 ID, refer to section 5.5.7

- ✓ By default, ASController has ID of 1.

4. **Name** the controller, if necessary; then select controller **Model**.

5. Click “**OK**”.

6. Under **General Setup** tab, define time zone.

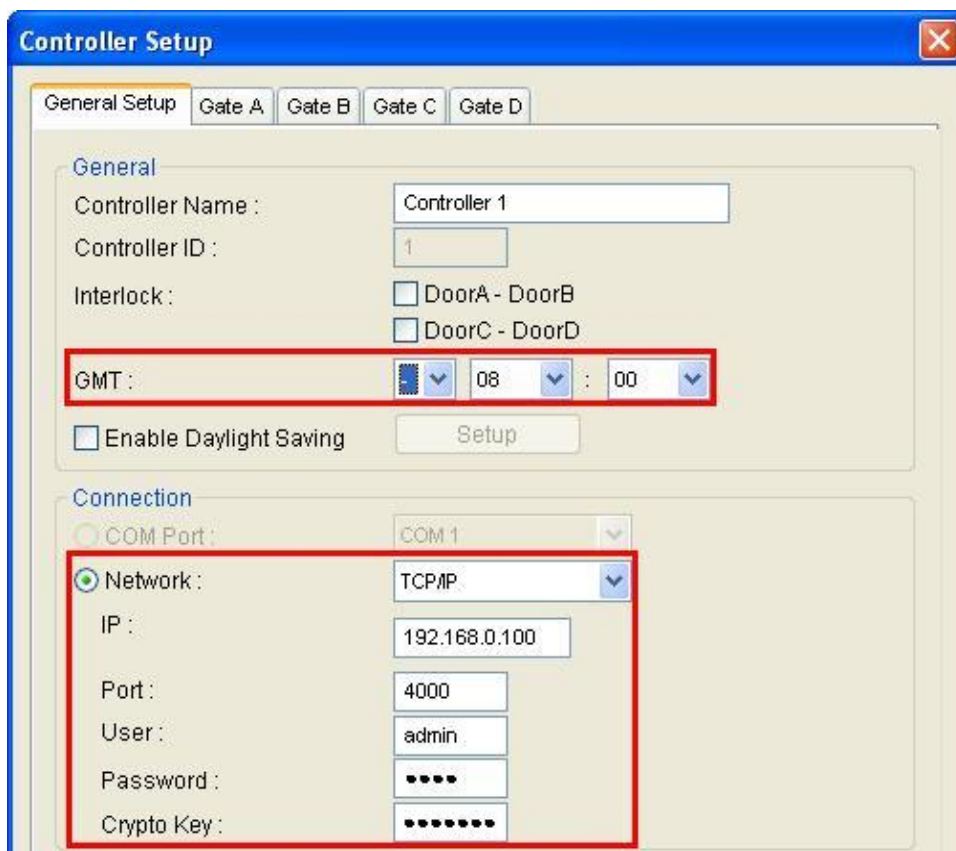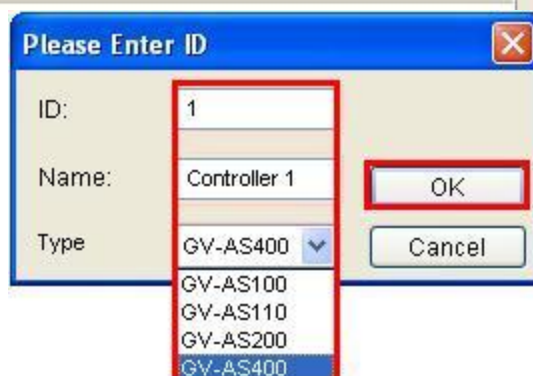

7. Select “**COM Port**” if ASController is connected via RS485. Otherwise, select “**Network**” for Ethernet connection.
8. Enter the **IP address**, **Port**, **User ID**, **Password**, and **Crypto Key** of ASController.
 - ✓ By default, ASController has IP of **192.168.0.100**.
 - ✓ By default, ASController has Port of **4000**.
 - ✓ By default, ASController has **User ID** and **Password** of **admin** and **admin**.
 - ✓ By default, ASController has Crypto Key of **12345678**.
9. Under **Gate A** tab, name the door if necessary; then define a password for the door.
 - ✓ *Door password is valid under “Card or Common Mode” only*

Controller Setup

General Setup | **Gate A** | Gate B | Gate C | Gate D

General

☒ Set Door Info

Name: Gate A

Password: 4~8 digits(0~9)

Lock Reset Time: 5 Sec(1~255)

Held Open Time: 5 (Handicap Card)

10 Sec(5~9999)

10 (Handicap Card)

Fire Action: Unchange

☐ Local Anti-Passback

☐ Globe Anti-Passback

☐ GeoFinger

☐ Time Clock

Authentication Schedule

Alarm Event

☐ Held Open

☐ Forced Open

☐ Tamper

☐ Fire Alarm

☐ Access Denied

Alarm Continuous Time: 5 Sec(1~10)

Camera Mapping

☒ Set Camera Mapping


First Camera:

Second Camera:

10. Set **Lock Reset Time** to designate door unlock period.
11. Set **Held Open Time** to designate grace time period before Held open alarm is triggered.

12. If GV-Fingerprint Reader is installed to open this door, check “**GeoFinger**” option.
13. Select **Authentication Schedule** and designate the door operation schedule by selecting the corresponding color and drag over desired time period.

✓ Check “**Release By Card**” to activate Release Mode by a card. Otherwise door will unlock at the designated time schedule automatically

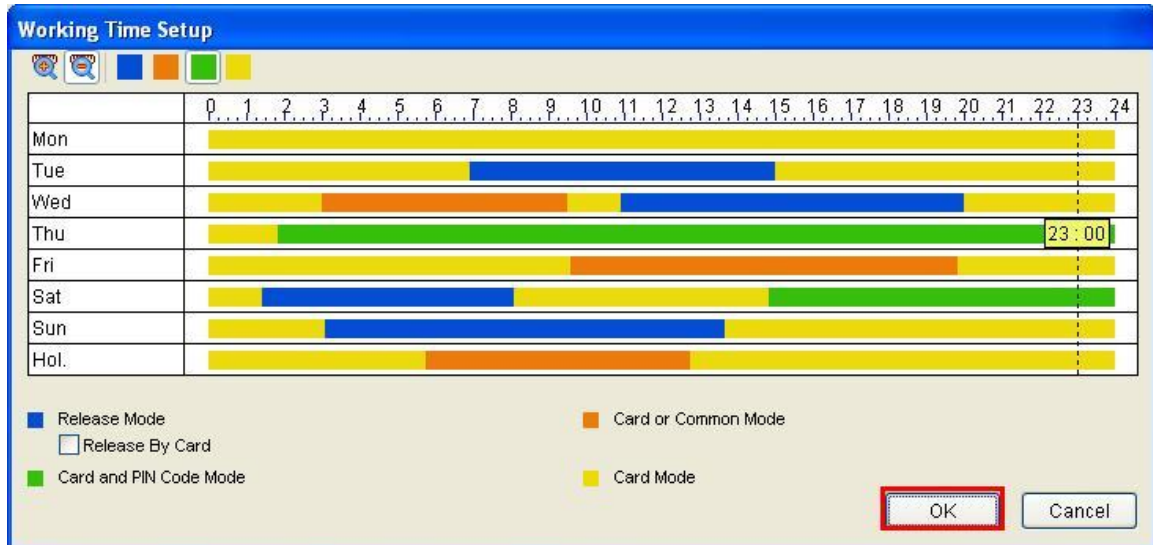

14. Click “**OK**” to return to Controller Setup.
15. If a physical alarm is installed as an output, check the conditions to trigger the alarm under **Alarm Event** and designate **Alarm Continuous Time**.
16. Check “**Set Camera Mapping**” to map cameras to this door, and click the **green arrow** next to First Camera.
17. Under DVR List window, click “**Search**” then select “**Search DVR and NVR**” to scan for GV-NVR/DVR within the network.




✓ Alternatively, select “**Search IP Device**” to scan for GV-IP Devices

18. Click “**Search**” to start scanning.
19. Check the desired DVR/NVR system and click “**Add**”.
20. Highlight the DVR/NVR then select “**Modify**”.



21. Enter the **IP address**, **ID**, and **Password** for the DVR/NVR to ensure access to the camera.
22. Click “**OK**”.

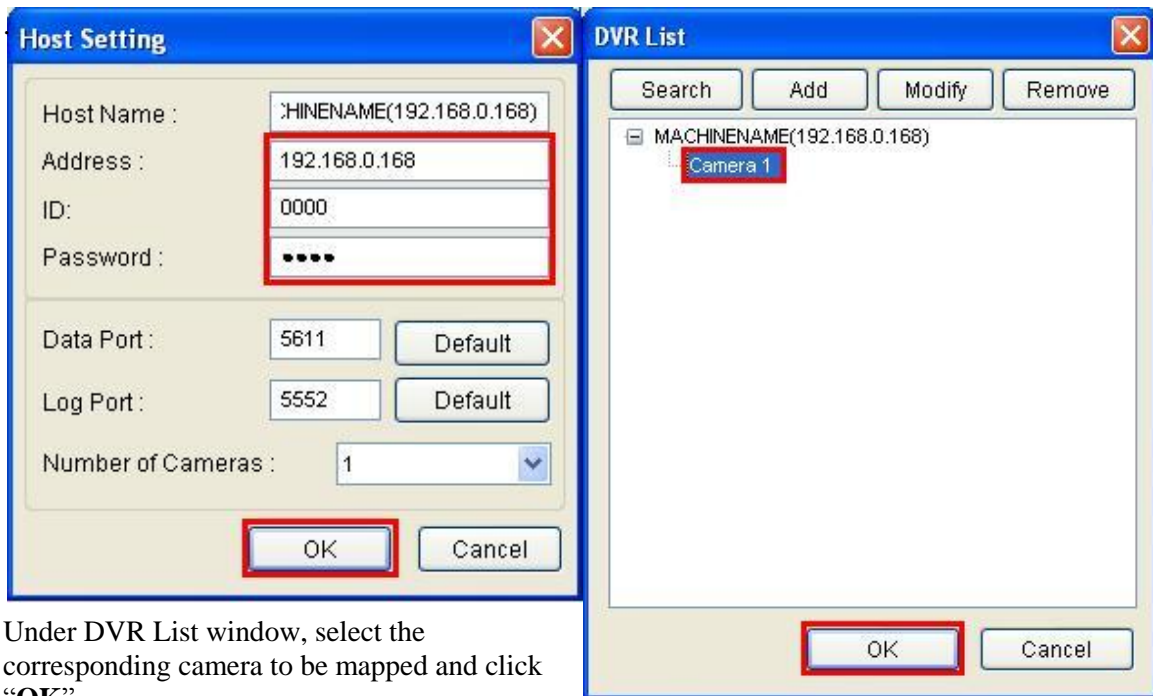


23. Under DVR List window, select the corresponding camera to be mapped and click “OK”.

24. Repeat steps 9 to 23 to enable multiple doors, if available.

25. Under Controller Setup window, click “OK” to add the controller under ASManager.

- ✓ Under Device View, if connection icon shows a yellow dot, then the connection is successful.
- ✓ Under Device View, if connection icon shows a red x, then the connection is NOT successful. Repeat steps 1 through 8 and make sure the parameters are correct.

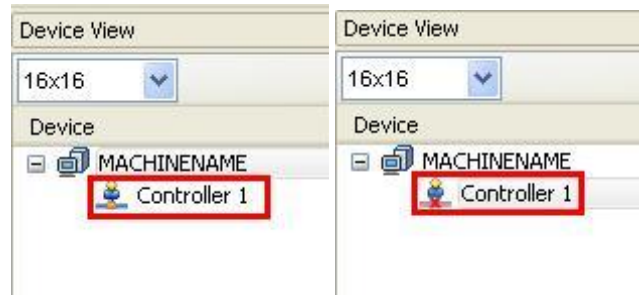


- ✓ For detail instruction, refer to p.21 of ASManager User Manual

5.8.7 Time Zone Setup


1. Under ASManager, select “Time Zones”.




2. Click “Add”.

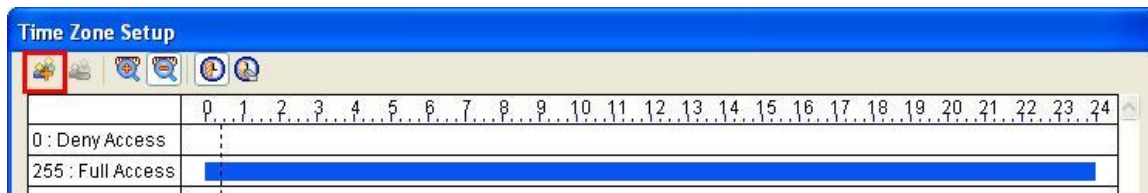


3. Name the time zone then click “OK”.

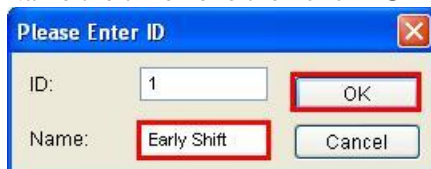

4. Click on the start time, and drag until end time to define the duration.

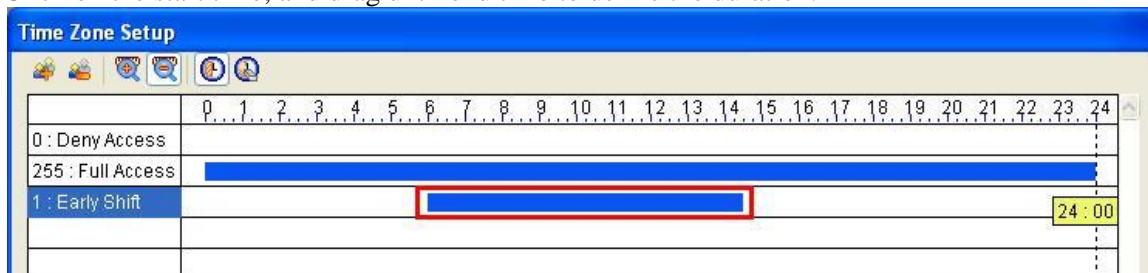

5. Repeat steps 2 to 4 to define more time zones.

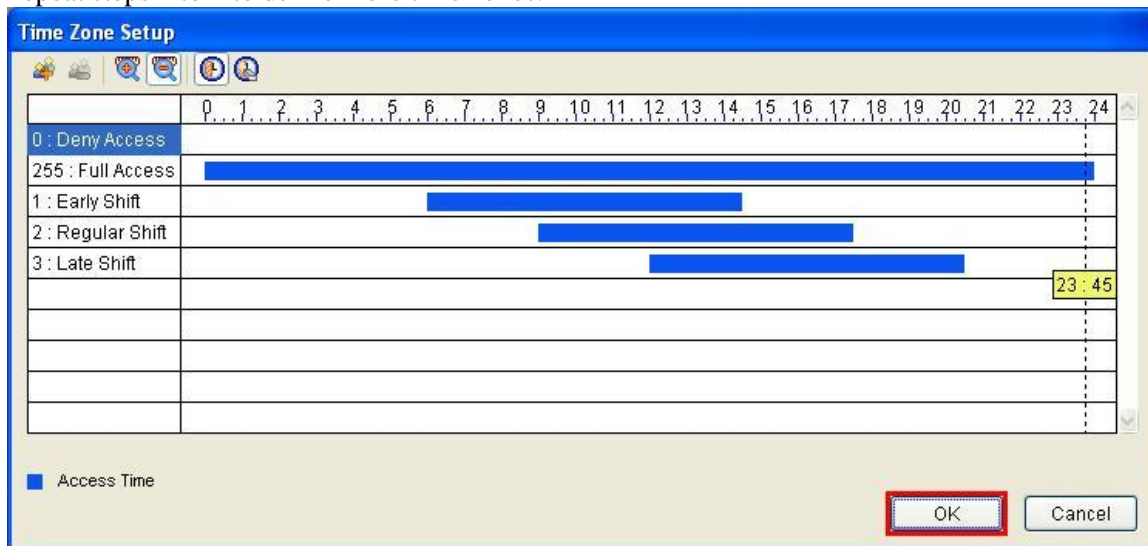

6. Click “OK” when finished.


✓ For detail instruction, refer to p.31 of ASManager User Manual

5.8.8 Weekly Schedule Setup

1. Under ASManager, select “**Weekly Schedule**”.




2. Click “**Add**”.

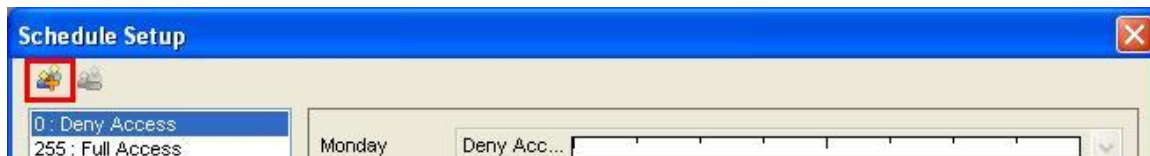


3. Name the schedule then click “**OK**”.



4. Define daily access schedule by selecting the time zones created in section 5.8.7.

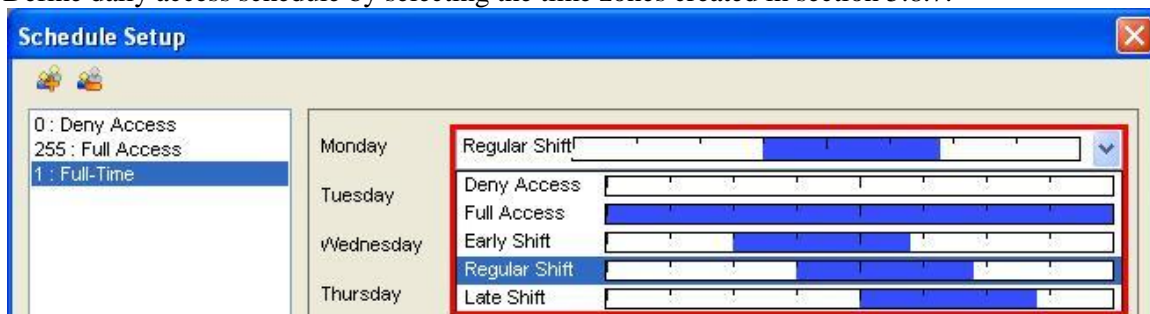

5. Repeat steps 2 to 4 to define more weekly schedules.

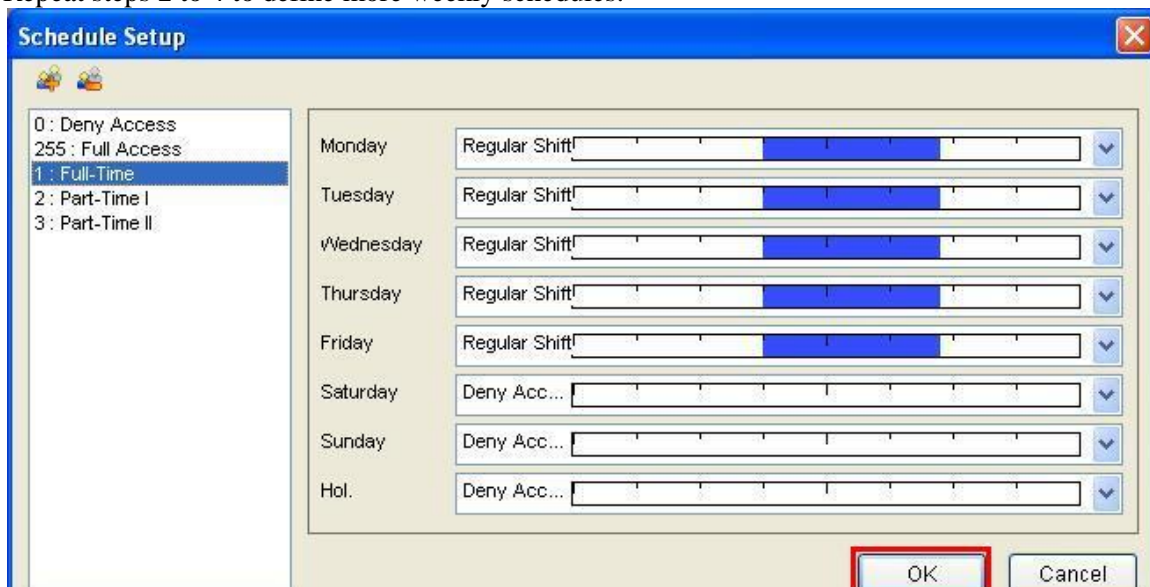

6. Click “**OK**” when finished.


✓ For detail instruction, refer to p.33 of ASManager User Manual

5.8.9 Access Group Setup


1. Under ASManager, select “Access Groups”.




2. Click “New”.

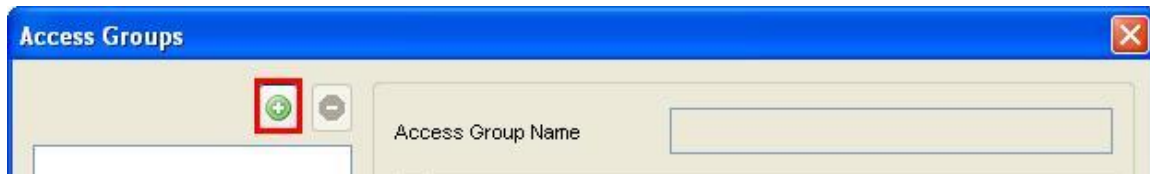

3. Name the access group and select the weekly schedule to be applied on each door for this group according to schedules created in section 5.8.8.

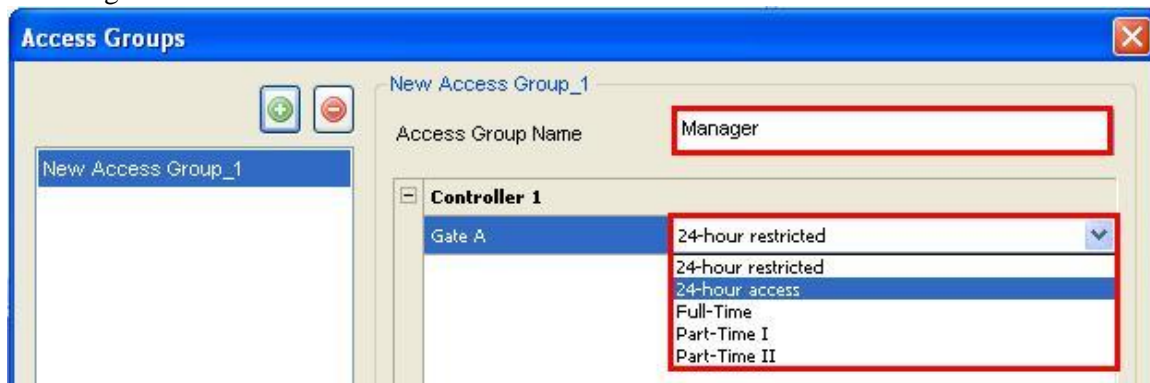

4. Repeat steps 2 to 3 to define more groups.

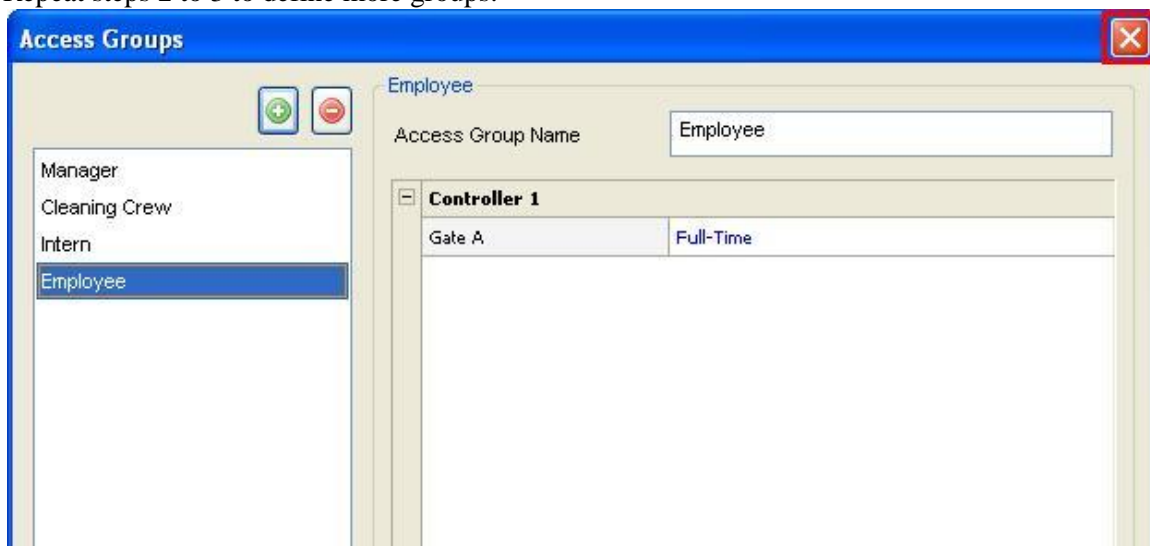

5. Exit the window when finished.


- ✓ For detail instruction, refer to p.36 of ASManager User Manual

5.8.10 Cards Setup

1. Under ASManager, select “Cards”.



2. Click “New”.

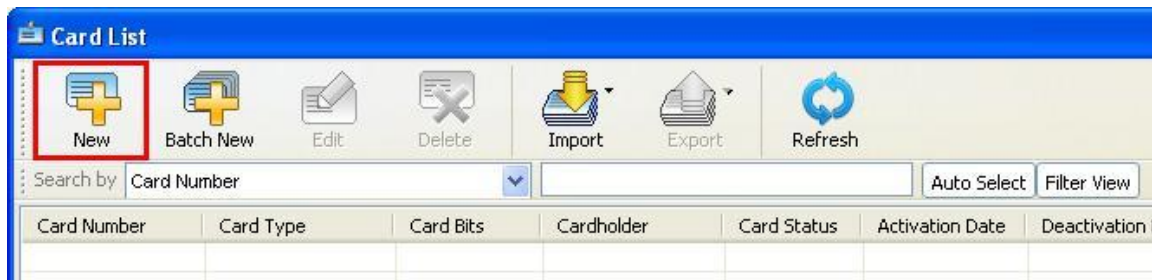

3. Select **Code Type** then enter **Card Number** (numbers only).

- a. **Wiegand 26** allows 8-digit card number (default)
- b. **HID 37** allows 11-digit card number

✓ *ASManager supports Wiegand 26 ~ 64 frequency. However, only Wiegand 26 and 37 are defined by default. If a third-party reader with non-default frequency is used, it is necessary to first define the Wiegand parameters so that ASManager can read the card numbers properly. Such configuration can be done under **Personnel**, “**Code Format Settings**”*


4. Enter the **Privilege** level for this card and assign it to an **Access Group** in the drop-down list as defined in section 5.8.9

✓ *Pin Code is valid under “Card and Pin Code Mode” only*


5. Click “OK” when finished.

- ✓ Alternatively, to enroll multiple cards with consecutive card numbers, use “**Batch New**” option.

6. Click “**Batch New**”.

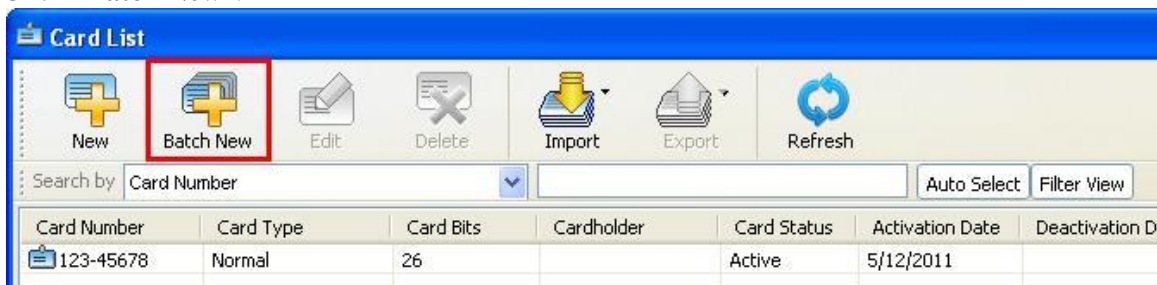

7. Select **Code Type** then enter **Card Number Range** (numbers only).

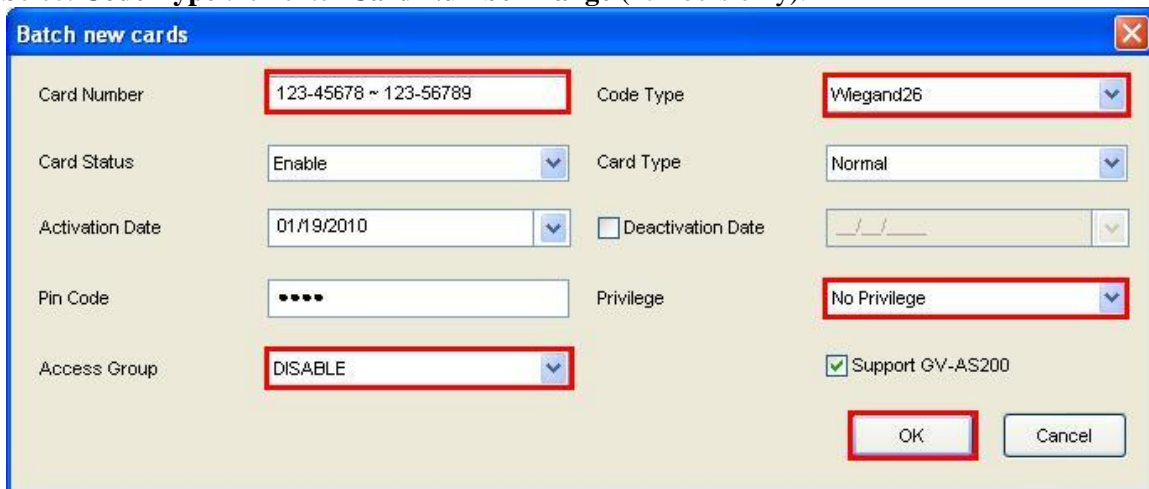


8. Enter the **Privilege** level for the batched cards and assign them to an **Access Group** in the drop-down list as defined in section 5.8.9

9. Click “**OK**” when finished.

- ✓ The third option to create a card database would be to import from Microsoft Excel or Access.

10. Click “**Import**” then select file type.

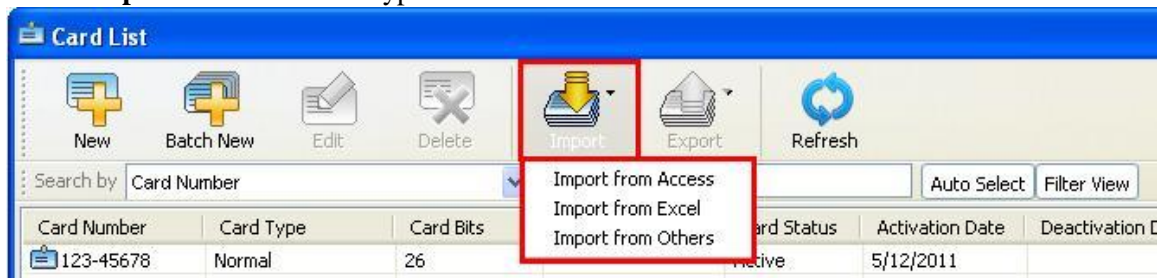

11. Indicate **File Path** to locate database file.

12. Click “**OK**” when finished.

- ✓ For detail instruction, refer to p.26 of ASManager User Manual




5.8.11 Cardholders Setup


1. Under ASManager, select “Cardholders”.




2. Click “New”.

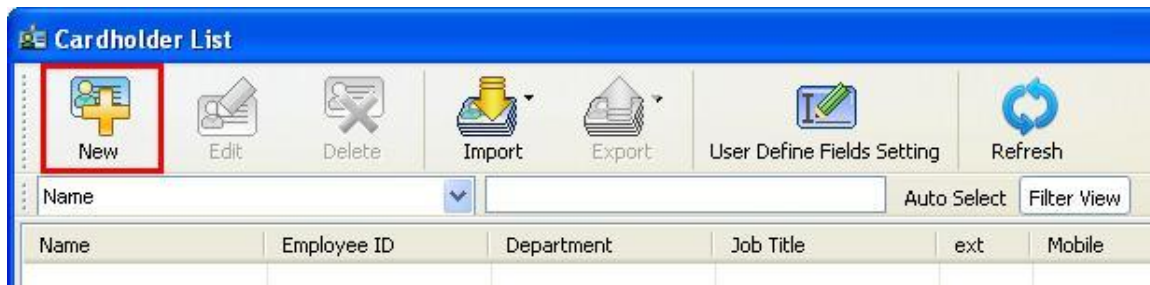

3. Enter **First Name**, **Last Name**, and **Employee ID** (if applicable).
4. Click “Select Photo” and locate a picture to associate with the cardholder.

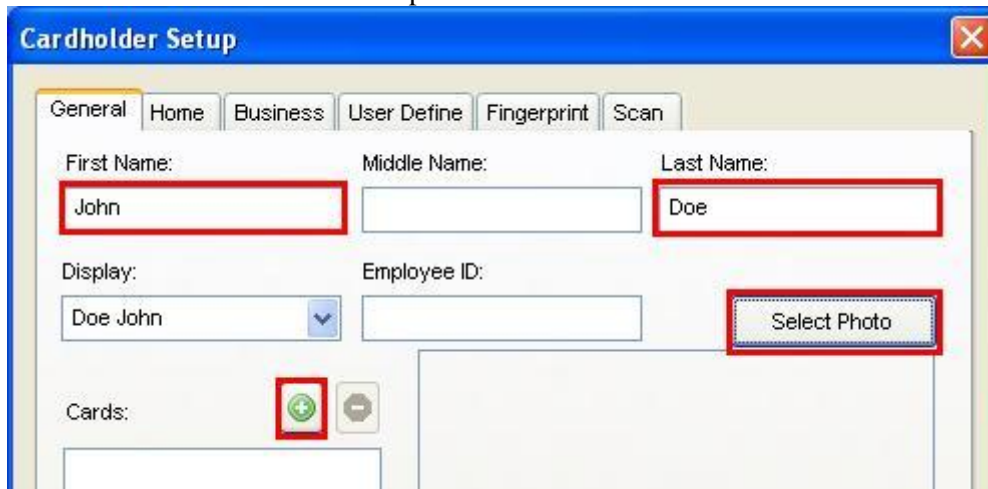

5. Click “Add” to add a card that belongs to this cardholder.
6. Double-click on the card number to assign the card to the card holder.

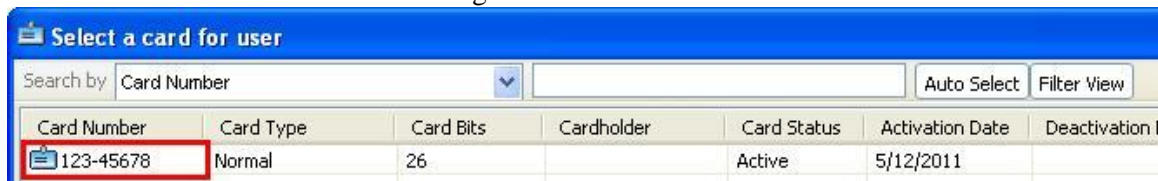

7. Repeat steps 5 and 6 to add more cards for the same cardholder.
8. Go to **Home** and **Business** tabs to add in additional personal information regarding the card holder, if applicable.

Cardholder Setup

General **Home** **Business** User Define Fingerprint Scan

Name: Doe John Employee ID: 001

Job Title: Engineer Hire Date: 12/23/2012

Business

Department: FAE Office: Irvine

Phone: 949-583-151 ext: 1 Fax:

Company: GeoVision Zip Code: 92618

Address: 9235 Research Dr.

E-Mail Address: sales@usavisionsys.com

Web Page: www.geovision.com.tw

Notes:

9. Click **“OK”** when finished.

✓ Alternatively, a cardholder database can also be imported from Microsoft Excel or Access.

10. Click **“Import”** then select file type.

Cardholder List

New Edit Delete **Import** Export User Define Fields Setting Refresh

Name Employee ID Job Title ext Mobile

Doe John 001 Engineer 1

Import from Access
Import from Excel
Import from Others

11. Indicate **File Path** to locate database file.

12. Click **“OK”** when finished.

Select Microsoft Office Excel File

Microsoft Office Excel File Path

File Path:


Password:

OK Cancel

✓ For detail instruction, refer to p.38 of ASManager User Manual

5.8.12 Fingerprint Enrollment


- ✓ In order to enroll fingerprint in ASManager, it is required to connect GV-GF1901 to ASManager directly via GV-COM or GV-Net Card.

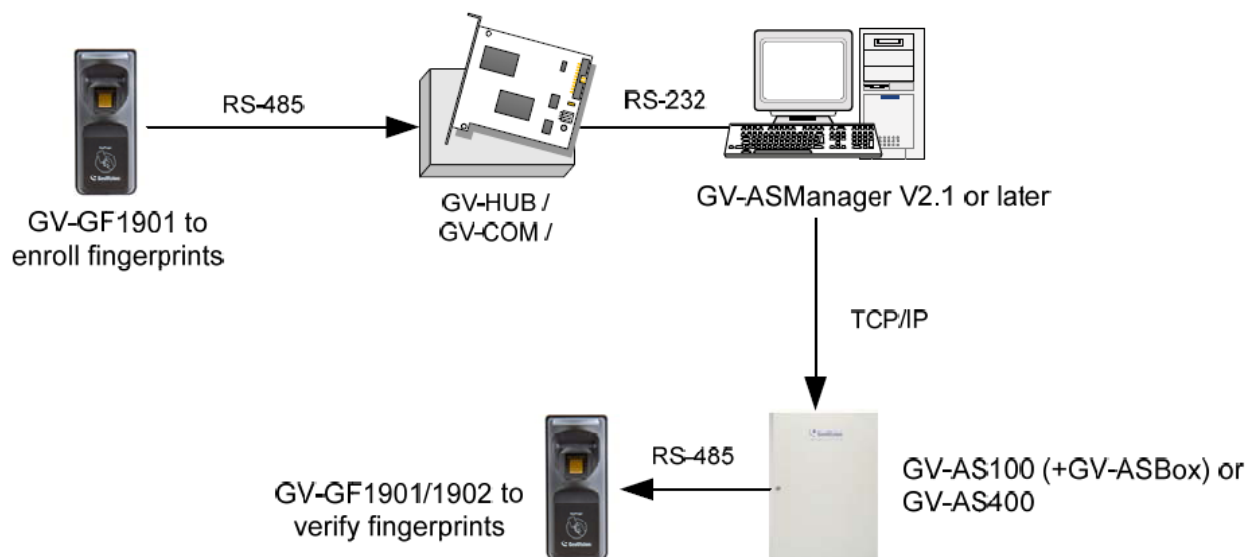


1. Under ASManager, select “**Cardholders**”.



2. Under Cardholder list, select the desired card holder.

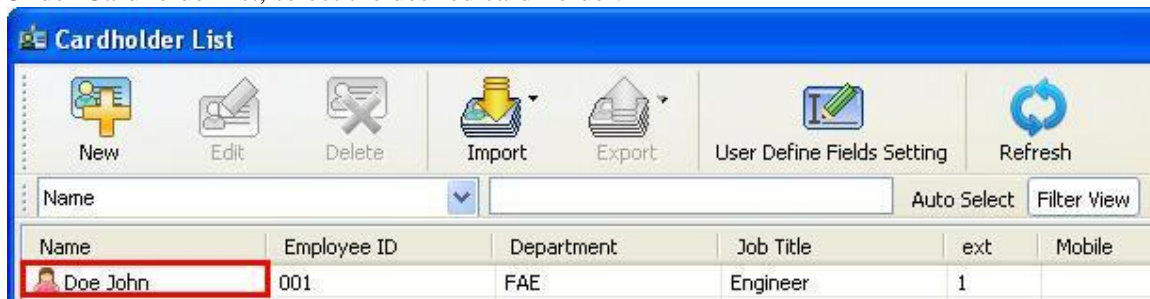

3. Under Fingerprint tab, click “**Search**” to locate the GV-Fingerprint reader connected to ASManager.

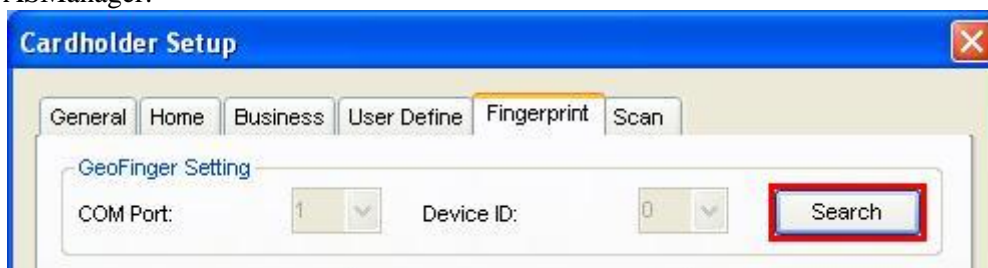

- ✓ If a GV-Fingerprint reader is not found, verify COM port and RS485 connection as shown above in the connection diagram.