



## Accessing DSP LPR V2's SD card information via FTP

### Requirement


- GV-DSP LPR V2 Firmware V1.03 2010-11-04
  - FTP client software
1. Insert the Mini SD card into the GV-DSP LPR V2 unit.
  2. Connect & Login to the web UI using internet explorer. (For information on how to login into GV-DSP LPR unit, please refer to GV-DSP LPR unit user manual)
  3. Access the Storage Setting option to:
    - Format the Mini SD card
    - Enable the option "Enable saving results on Mini-SD Card"

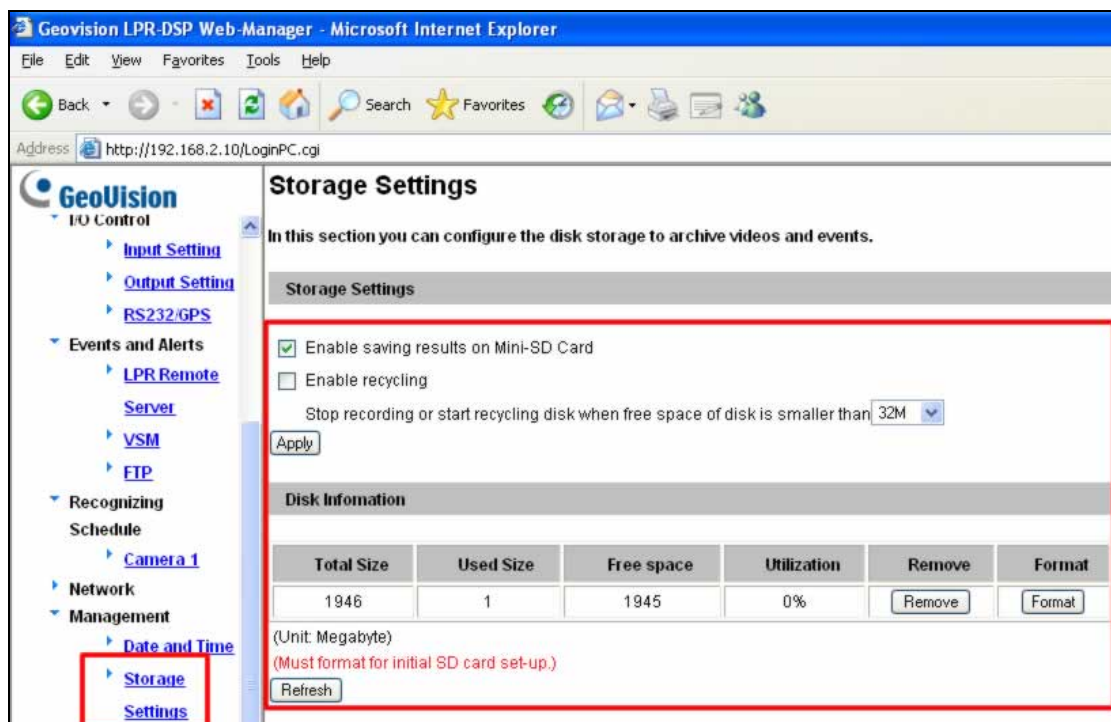

4. Proceed to **Events and Alerts -> FTP** to enable the FTP server option. Be sure to enable the option **“Enable FTP Access to SD”**.

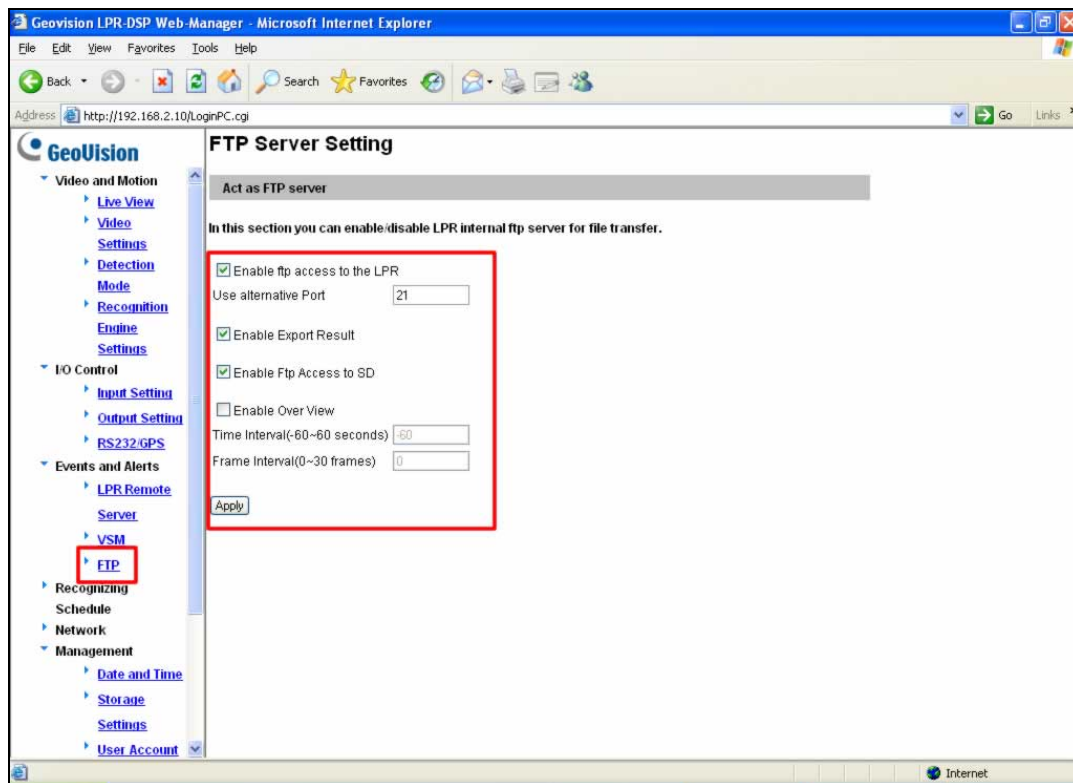


- Using any FTP client software, enter the FTP access information of the GV-DSP LPR unit such as IP, ID & password. For this example, we use Window's FTP explorer as ftp client software.

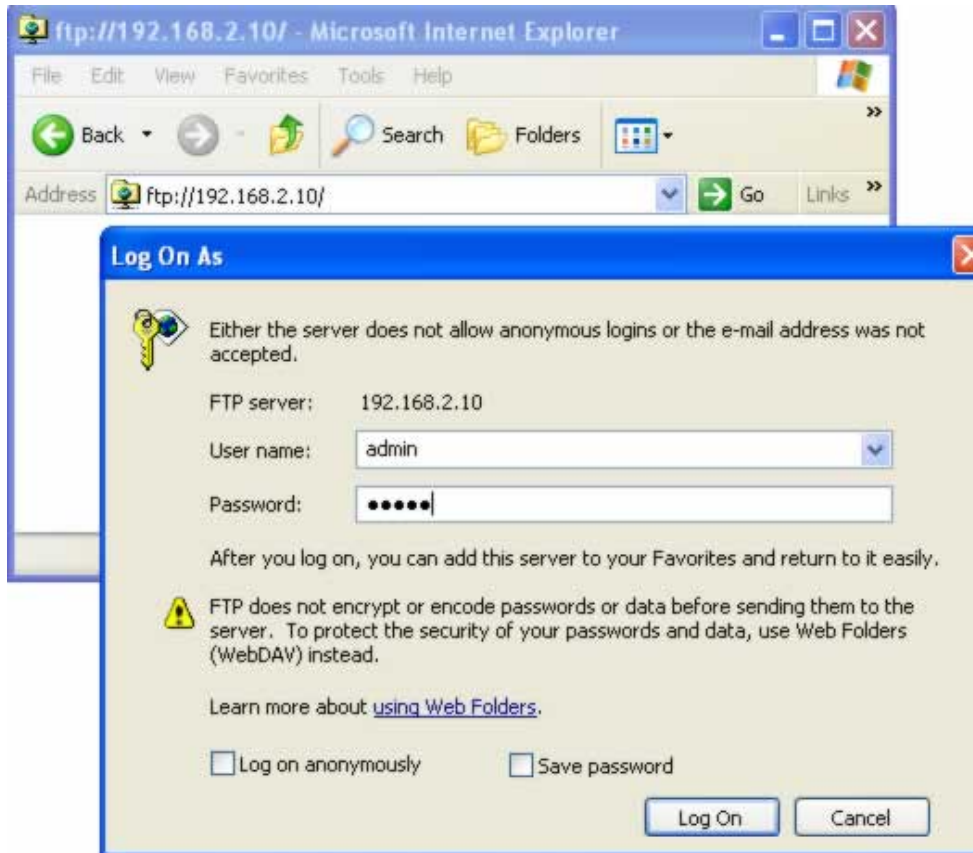

- After login, you will now see two folders: result and SD.



- The **result** folder is the buffer storage and the earliest snapshot will be recycled once the snapshot files are over 30.

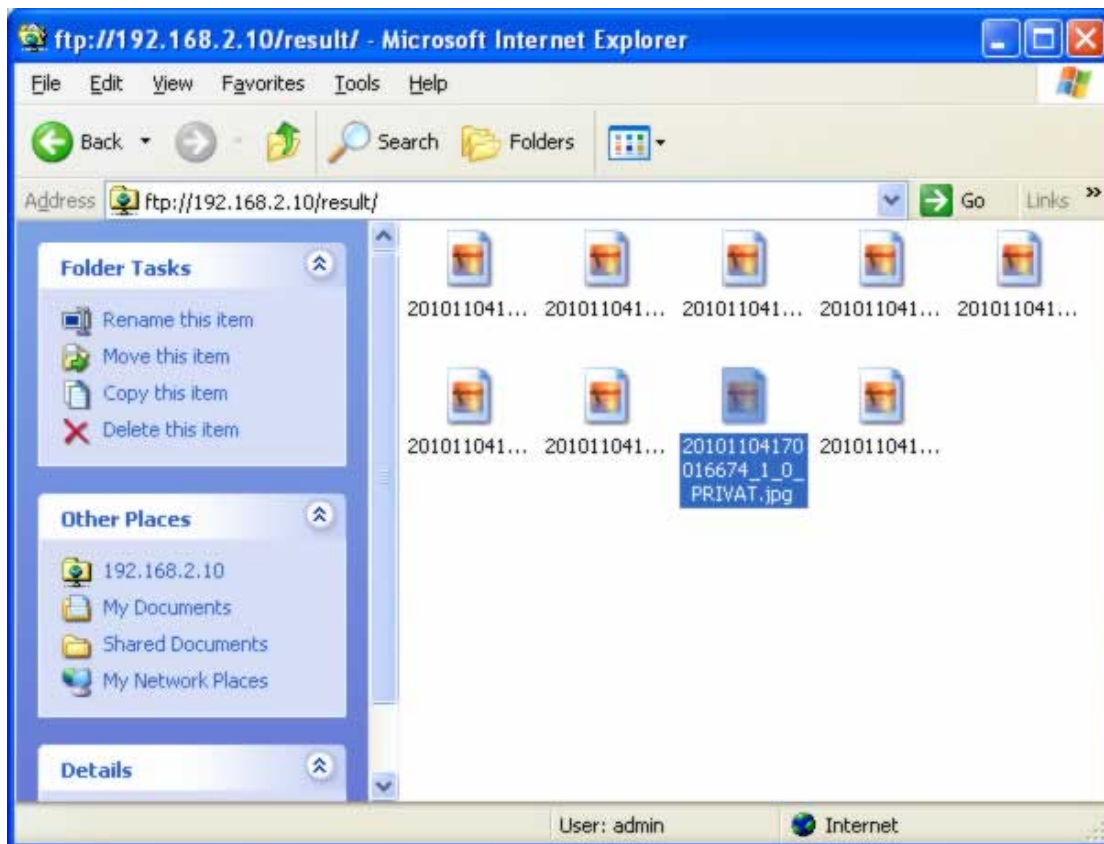

- The SD contains the back up of all recognition results and GV-DSP LPR logs.

