


## 5.3 Dynamic DNS


Dynamic DNS is an application that allows GeoVision users to register for a domain name that may be used as their IP address. Some users may find it useful as they do not need to memorize their constantly changing IP addresses.

### 5.3.1 Install Dynamic DNS

1. Insert GeoVision Main System Installation Disk in DVD Rom.
2. In the main menu, select “**Install GeoVision System**”.

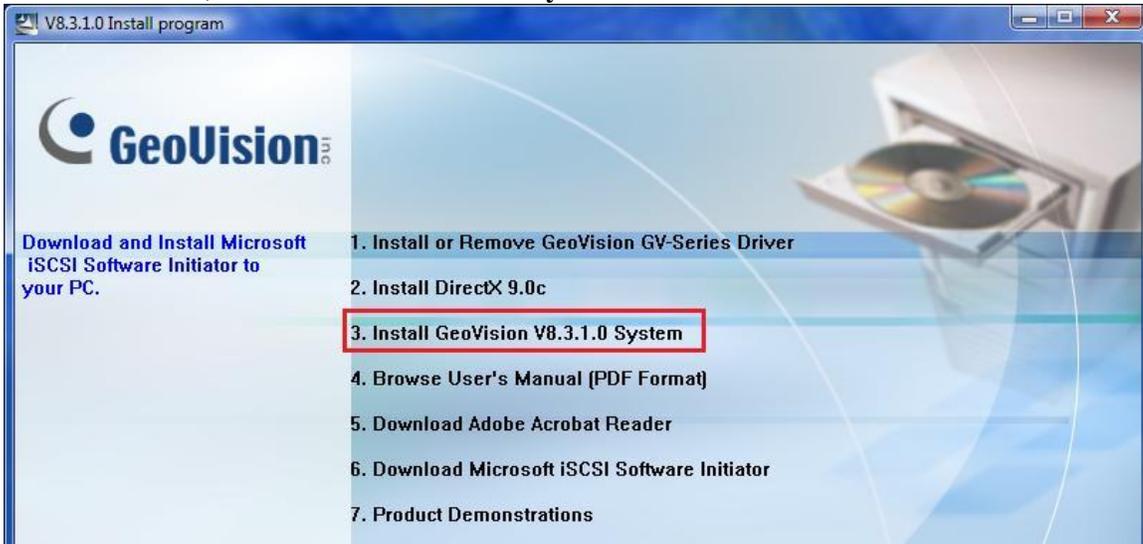

3. Click **Next** button to go to next page.
4. Select “**GeoVision Dynamic DNS Service**”.

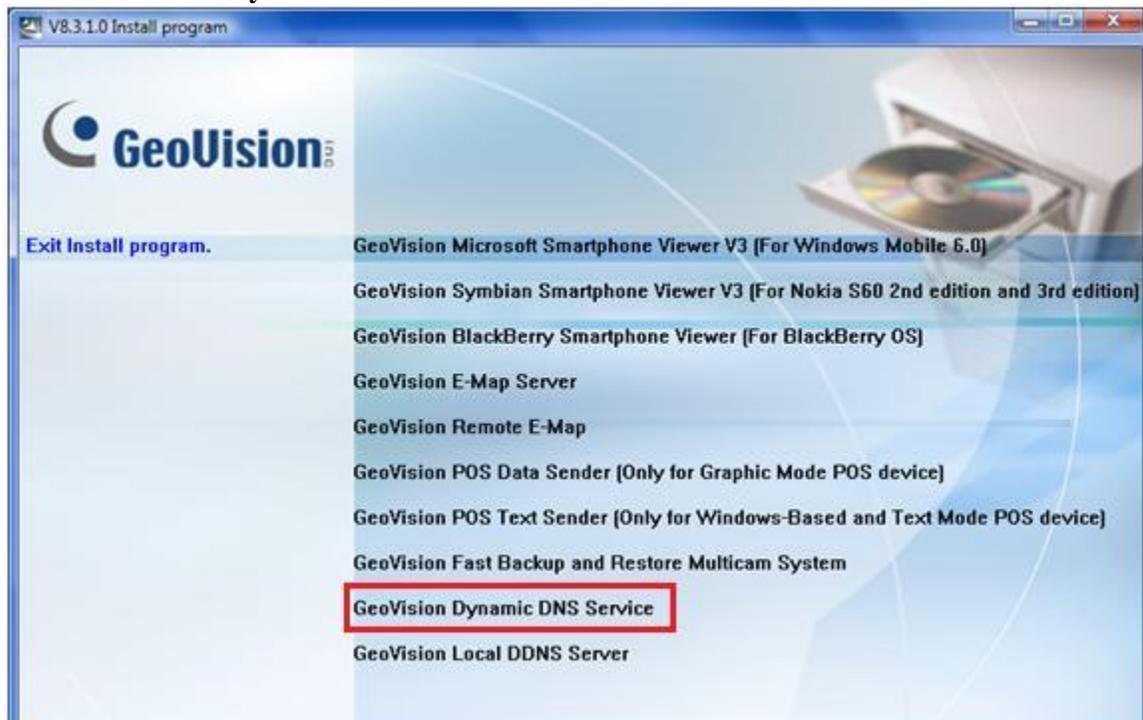


For GV-DVR Systems, Dynamic DNS is preinstalled. To locate the application, follow the steps below:


1. On Windows desktop, click on “**Start**”.
2. Click on “**All Programs**”.
3. Click on “**DDNS**” folder.
4. Run **Dynamic DNS Service**.

### 5.3.2 Register Dynamic DNS

1. Click on “**Register**” under DNS Client prompt.

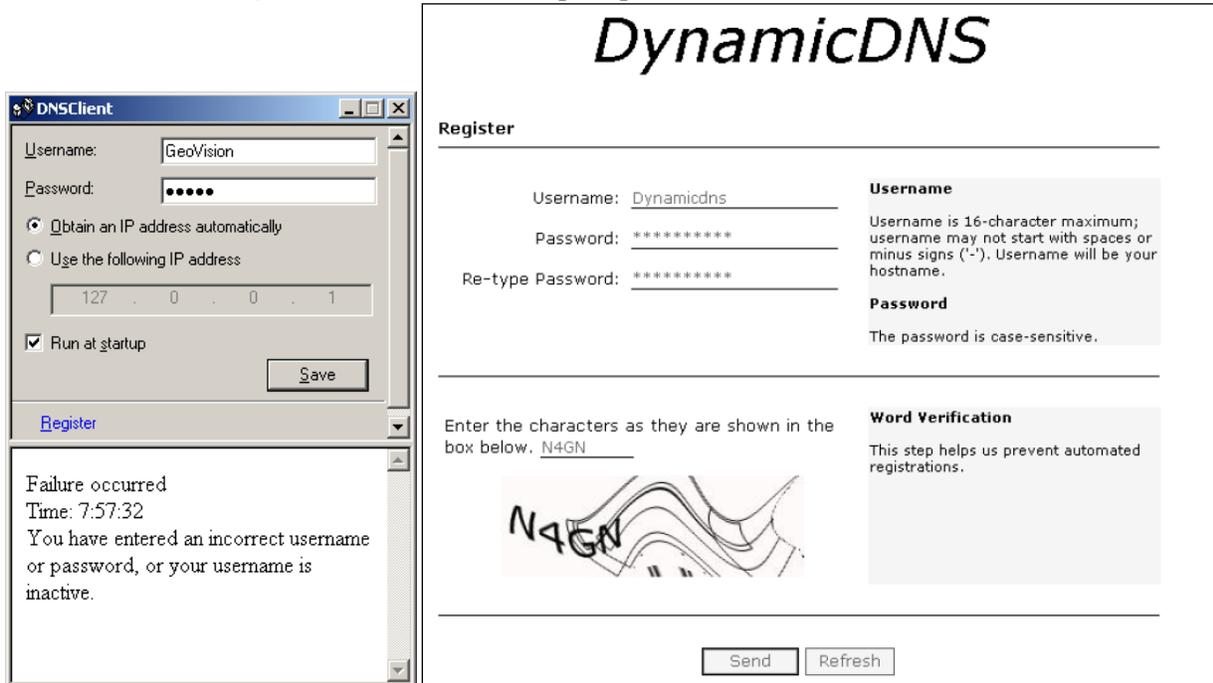

2. In the Dynamic DNS window, input desired **User name**, **password**, and **retype password**. (Enter only letters and numbers, password is case sensitive)
3. Enter security word verification as shown.
4. Click “**Send**”.

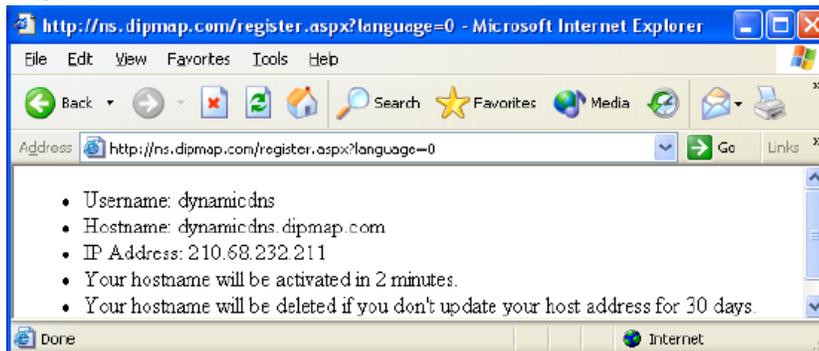

5. When the confirmation above appears, enter the registered User name and password in the DNS Client prompt above.
6. Check “**Run at startup**”.
7. Click “**Save**”.

✓ For detailed instruction, refer to p.501 of v8.4 User Manual