


The Operating Procedure of Copy Error Log from Video Server

Step1. Remove the HDD under Video Server Webpage.

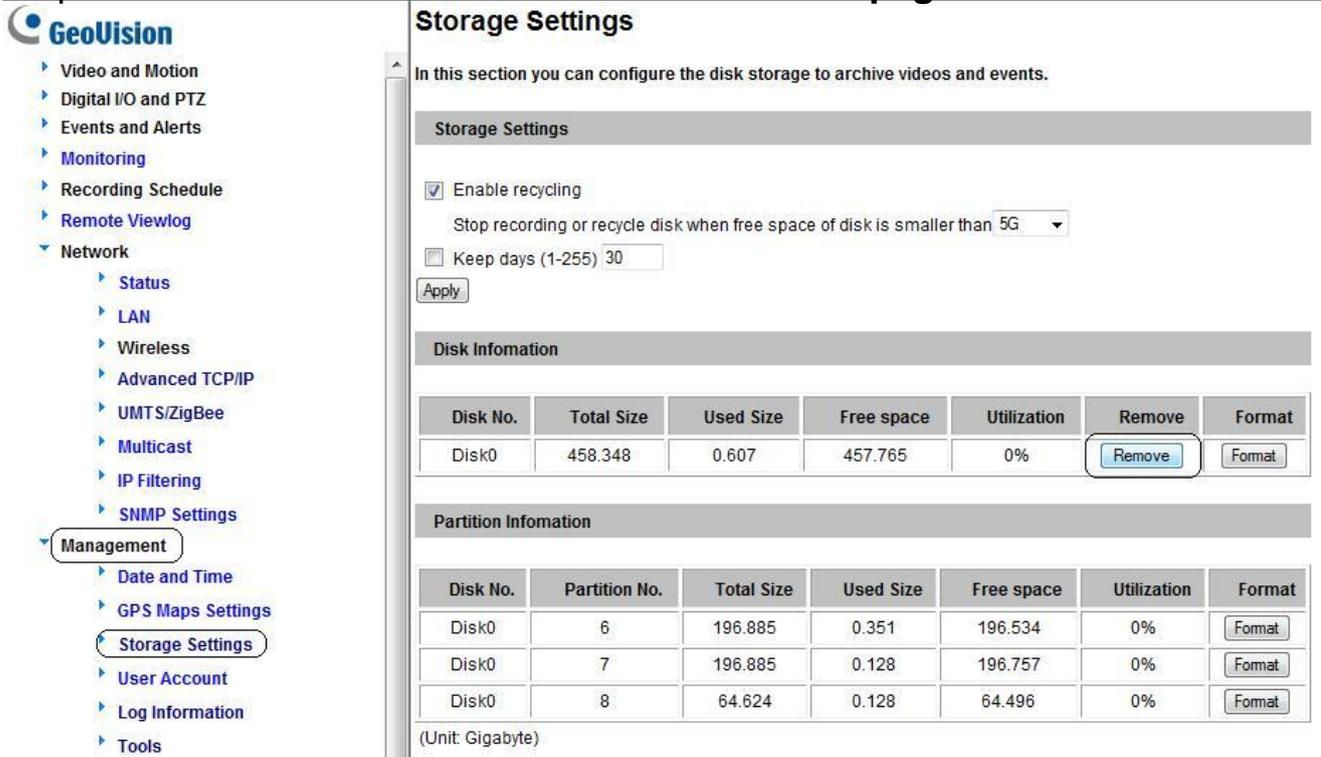

Storage Settings

In this section you can configure the disk storage to archive videos and events.

Storage Settings

Enable recycling
Stop recording or recycle disk when free space of disk is smaller than 5G

Keep days (1-255) 30

Apply

Disk Information

Disk No.	Total Size	Used Size	Free space	Utilization	Remove	Format
Disk0	458.348	0.607	457.765	0%	Remove	Format

Partition Information

Disk No.	Partition No.	Total Size	Used Size	Free space	Utilization	Format
Disk0	6	196.885	0.351	196.534	0%	Format
Disk0	7	196.885	0.128	196.757	0%	Format
Disk0	8	64.624	0.128	64.496	0%	Format

(Unit: Gigabyte)

Step2. Connect the HDD that is removed from Video Server Webpage to the computer.


Step3. Installing IFS Driver Software on the computer.

a. click  to install IFS driver.


b. Restart the computer after installation has completed.

* Right-click on  while installing IFS Driver Software for Win 7 OS.


Before installing the system software, make sure switch the Compatibility Mode to Windows Vista under Compatibility.

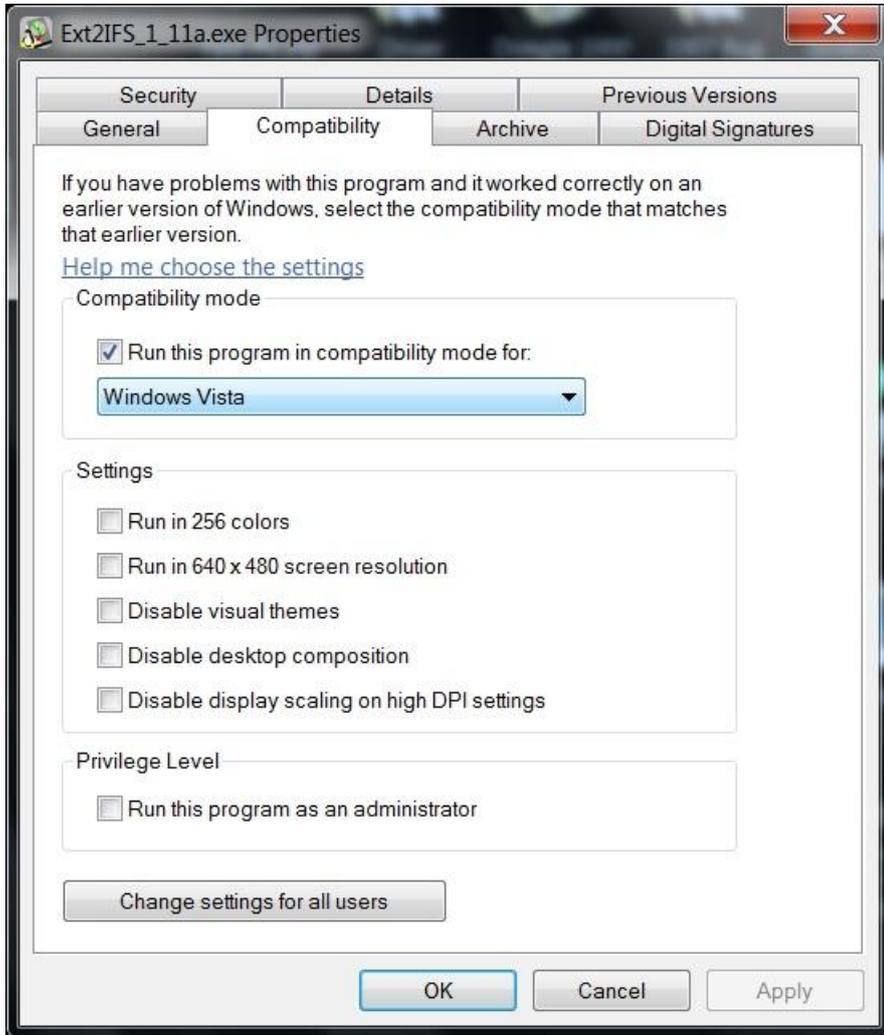

Step4. Execute Control Panel, and then double click IFS Drivers Control Panel Item icon.

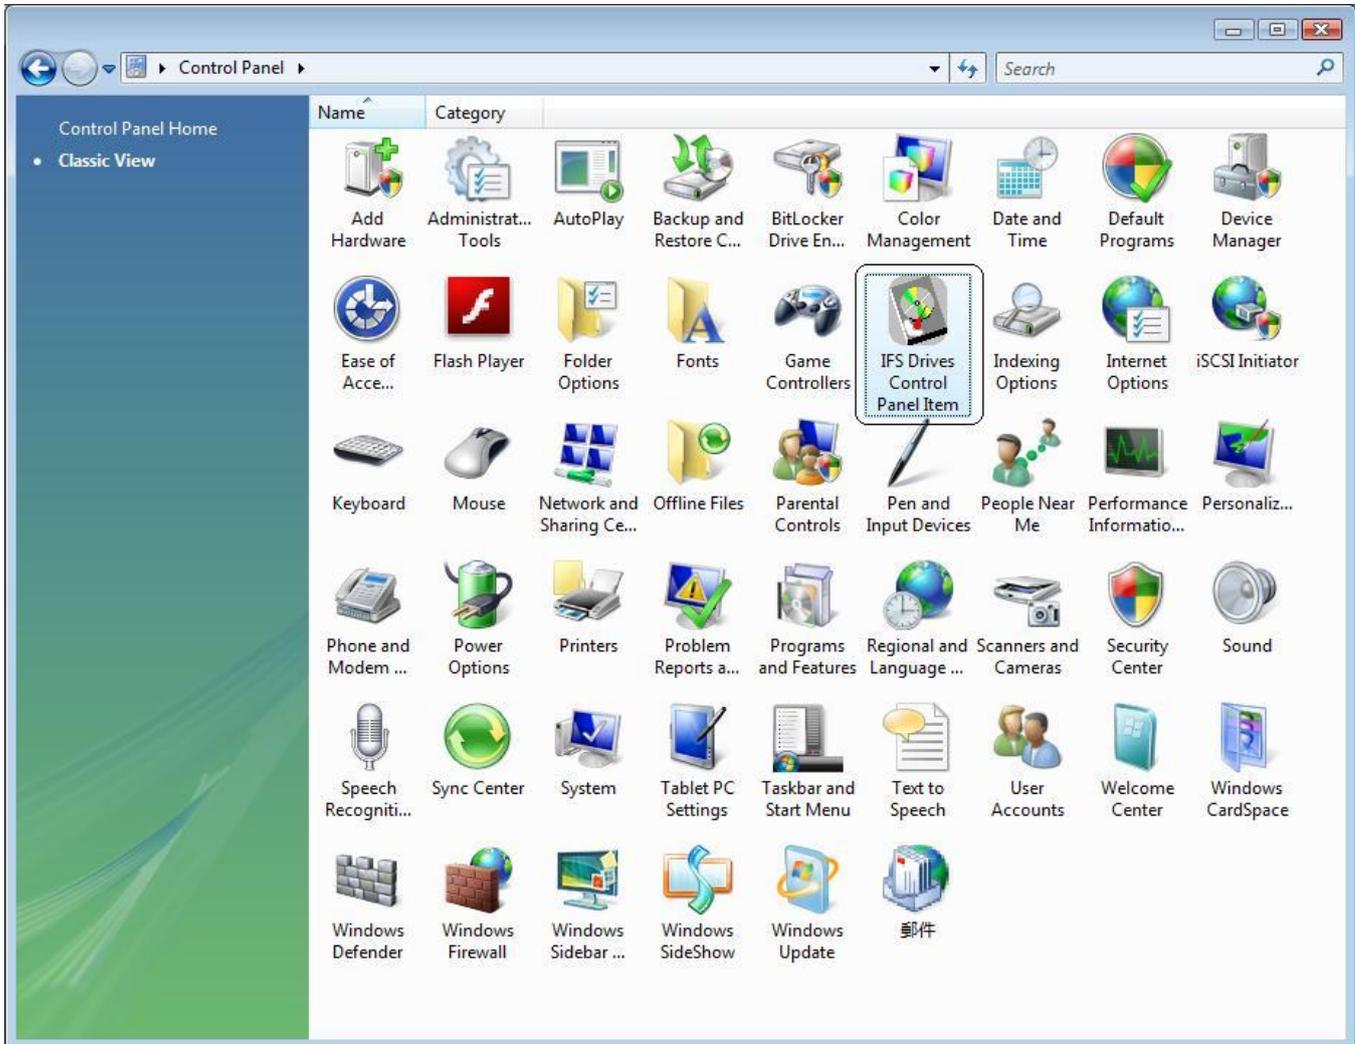

Step5. After entering IFS Drivers, the volume of Liux will appear, select the corresponding drive.

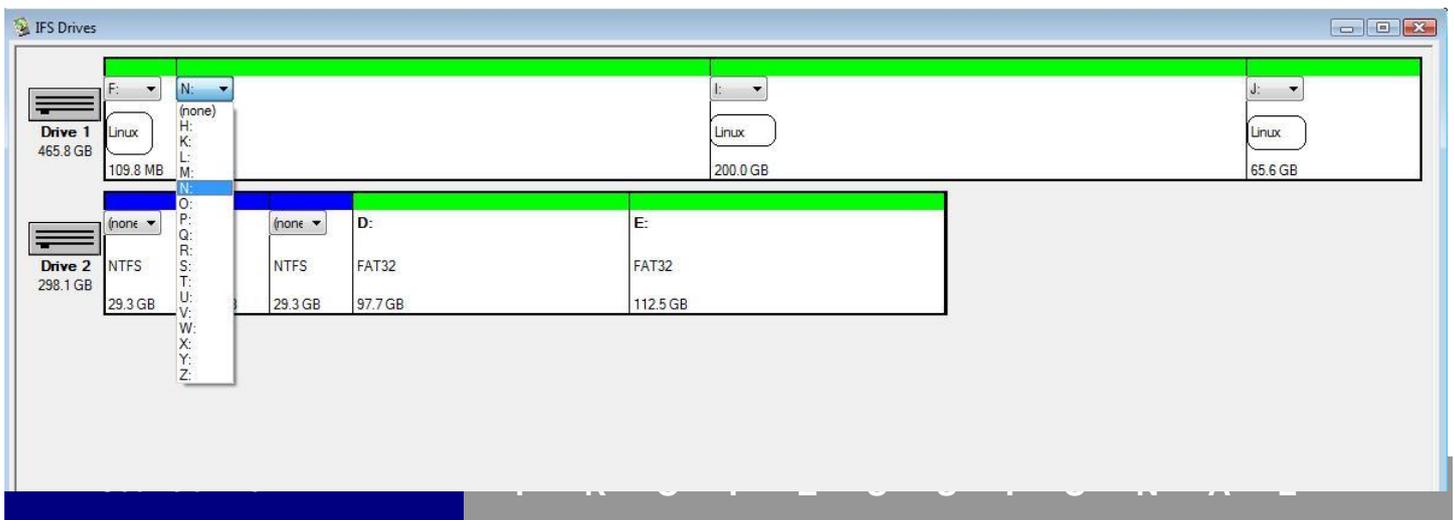

Step6. Locate log folder under the disk drive and copy it.

