



### 2.1.3 Image and Audio Setup

1. In Multicam, click on “**Configure**” icon.
2. Select “**General Setting**” -> “**Camera/Audio Install**” -> “**IP Camera Install**”.
3. Right-click on the IP camera and select “**Preview & Audio Setting**”.

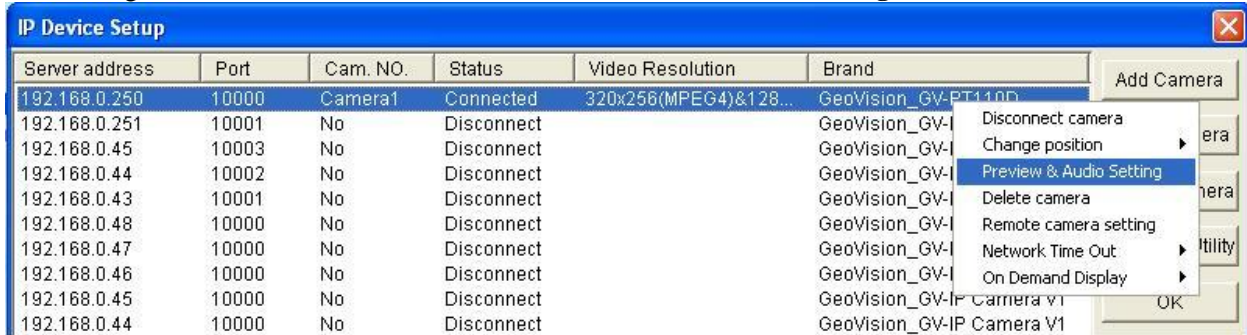

4. To flip the image, select the corresponding option under Image Orientation.

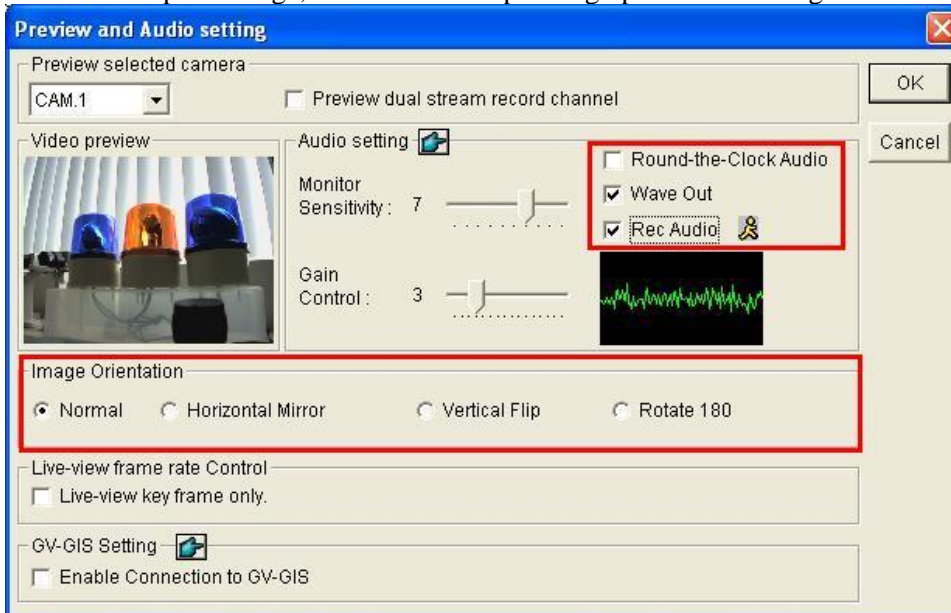

5. To enable audio, check “**Wave Out**”.
6. To enable audio recording, check “**Rec Audio**”.
  - a. Adjust Monitor Sensitivity to adjust audio detection sensitivity.
  - b. Adjust Gain Control to increase or decrease audio volume.
    - ✓ *High gain may result in increased noise and decreased I audio quality.*
  - c. Select “**Round-the-Clock Audio**” for 24/7 audio recording.
7. Click “**OK**”.
8. Click “**OK**” again to exit IP Device Setup.

✓ For detailed instruction, refer to p.126 of v8.4 User Manual