


2.5 Video Storage Location

1. In Multicam, click on the “**Configure**” icon.
2. Select “**General Setting**” -> “**System Configure**”.
3. Under General tab, click on “**Set Location**” button in the middle then select “**Storage Group Folder**”.

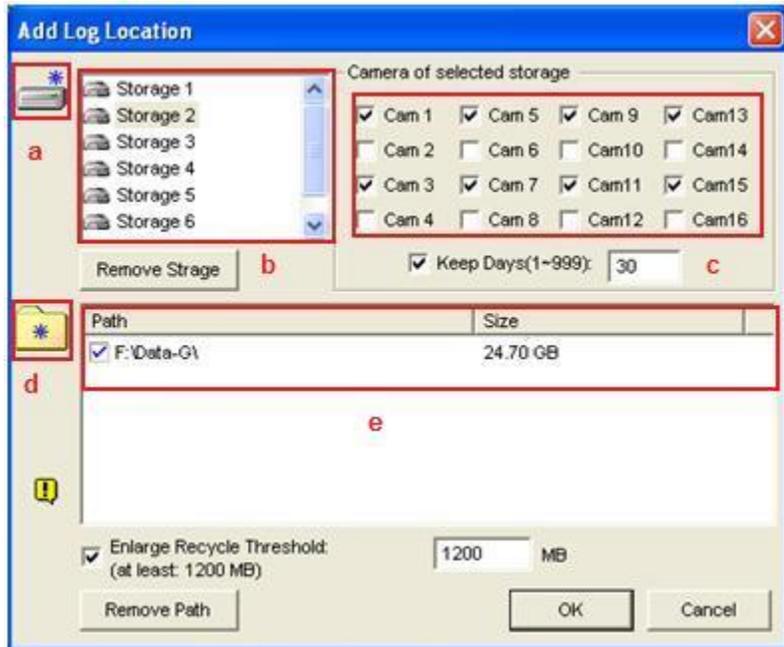

4. By default, Storage 1 is created with all the cameras saved. To add a new storage, follow the steps below:
 - a. Click on “**Add New Storage**” button.
 - b. A new storage location should appear.
 - c. Check on the cameras which will be stored into this new storage. (Please note that one camera can only be saved into one storage location)
 - d. Click on “**Add New Path**” button. In the Select Path window, select a folder located in the desired hard drive. (If this is a new hard drive, create a new folder first in this hard drive through My Computer prior to this step).
 - e. The new path should appear along with available disk size.
 - f. Repeat steps **a** to **f** to add more hard drives.
5. To remove extra storages, select the storage then click on “**Remove Storage**” button.
6. To remove extra paths, select the path then click on “**Remove Path**” button.
7. Click “**OK**”.
8. Click “**OK**” again to finish setup.

✓ For detailed instruction, refer to p.18 of v8.4 User Manual

✓ *Please note that for IP camera recordings, it is necessary to distribute no more than 4 megapixel IP cameras per hard drive due to current hard drive recording speed limitation. For 640x480 and 720x480 recordings, no more than 8 cameras per hard drive. Recording more cameras than allowed will reduce hard drive’s life span while creating error messages in the system.*