

GV-GF1911/GF1912 GF Fingerprint Reader





The GV-GF Fingerprint Reader works with GV-AS / GV-EV Controller and GV-ASManager to create a complete access control system. With the GV-GF Fingerprint Reader only, you can also enroll and manage users through the supplied Manager Enroll Card and Delete Card, along with optional MIFARE user cards.

KEY FEATURES

- Work with GV-AS / GV-EV Controller and GV-ASManager
- Three types of access modes: card only, fingerprint only and card plus fingerprint
- Fingerprint templates stored on the user card
- Three types of communication interfaces: Wiegand 26, RS-485 and TCP/IP (LAN)

SPECIFICATIONS

Models	GV-GF1911	GV-GF1912
		
Application	Indoor use only	
Communication Interface	Wiegand 26, RS-485, TCP/IP (LAN)	
Sensor	Capacitive	Optical
Sensing Area (H x W)	18 x 13 mm / 0.71 x 0.51 in	20 x 17 mm / 0.79 x 0.67 in
Operation Mode	Fingerprint Only, Card + Fingerprint, Card Only	
Number of Fingerprints Stored	1,900 (for Fingerprint Only mode)	
Supported Card	ISO14443A MIFARE DESFire, MIFARE Plus and MIFARE Classic, 13.56 MHz	
Output	DC 24V, 2.5A	
Power	DC 7.5V~12V, Max 250mA	
Operating Temperature	0~50° C / 32~122° F	
Humidity	10%~90%	
Dimensions (H x W x D)	130 x 54 x 43 mm / 5.12 x 2.13 x 1.69 in	130 x 54 x 38 mm / 5.12 x 2.13 x 1.50 in
Weight	130 g (0.29 lb)	160 g (0.35 lb)
Certification	CE, FCC	

Note:

1. For Card + Fingerprint Mode and Card Only Mode, it is required to purchase [GeoVision's cards and tags](#) to work with.
2. Data synchronization with GV-AS Controller and GV-ASManager through LAN is only supported
firmware version and software version work together:
 - * GV-ASManager: V4.0 or later
 - * GV-AS100 / 110 / 120: V1.06 or later
 - * GV-AS400: V1.04 or later
 - * GV-AS210 / 810: V1.0 or later
 - * GV-AS410: V1.1 or later
3. All specifications are subject to change without prior notice.

Options

GV-AS ID Card & GV-AS ID Tag	For Card + Fingerprint Mode, the GV-AS ID F Card or GV-AS ID F Tag is required. For Card Only Mode, both the GV-AS ID F Card / Tag and the GV-AS ID Card / Tag are supported.
GV-HUB V2	The GV-Hub V2 adds four RS-232/RS-485 serial ports through the computer's USB port, allowing connection between the fingerprint reader and the computer.
GV-COM V2	The GV-COM V2 can convert the standard RS-232 signal, through USB connector, to RS-485 signal, allowing connection between the fingerprint reader and the computer.
GV-NET/IO Card	The GV-NET/IO Card is a RS-485 / RS-232 interface converter that provides 4 inputs and 4 relay outputs. Using the GV-NET/IO Card, you can connect the fingerprint reader to the computer.
PC Service Package	The package includes a USB cable for connecting the fingerprint reader to a computer and a reader mount to hold the reader for fingerprint enrollment.