


uniview

Better Security, Better World.

**CONFIGURATION
TUTORIALS**




Download, install and open the EZTools software. (https://www.worldyecam.com/uniview/EZStation/EZStation_Win64.exe)

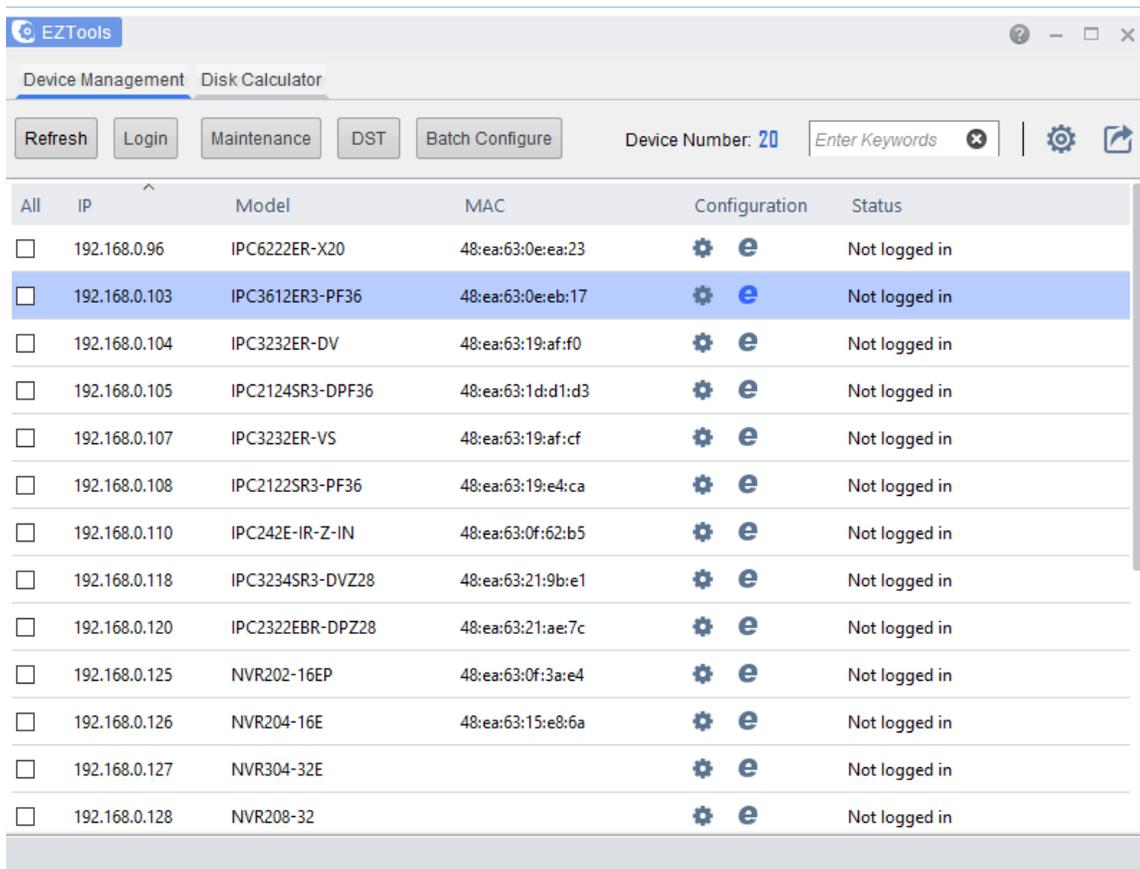

The screenshot shows the EZTools software interface. At the top, there are tabs for "Device Management" and "Disk Calculator". Below the tabs are several buttons: "Refresh", "Login", "Maintenance", "DST", and "Batch Configure". To the right of these buttons, there is a "Device Number" field set to "20" and a search box labeled "Enter Keywords". Below the search box are settings and share icons. The main area is a table with columns: "All", "IP", "Model", "MAC", "Configuration", and "Status". The table contains 13 rows of camera data. The second row is highlighted in blue.

All	IP	Model	MAC	Configuration	Status
<input type="checkbox"/>	192.168.0.96	IPC6222ER-X20	48:ea:63:0e:ea:23	e	Not logged in
<input type="checkbox"/>	192.168.0.103	IPC3612ER3-PF36	48:ea:63:0e:eb:17	e	Not logged in
<input type="checkbox"/>	192.168.0.104	IPC3232ER-DV	48:ea:63:19:af:f0	e	Not logged in
<input type="checkbox"/>	192.168.0.105	IPC2124SR3-DPF36	48:ea:63:1d:d1:d3	e	Not logged in
<input type="checkbox"/>	192.168.0.107	IPC3232ER-VS	48:ea:63:19:af:cf	e	Not logged in
<input type="checkbox"/>	192.168.0.108	IPC2122SR3-PF36	48:ea:63:19:e4:ca	e	Not logged in
<input type="checkbox"/>	192.168.0.110	IPC242E-IR-Z-IN	48:ea:63:0f:62:b5	e	Not logged in
<input type="checkbox"/>	192.168.0.118	IPC3234SR3-DVZ28	48:ea:63:21:9b:e1	e	Not logged in
<input type="checkbox"/>	192.168.0.120	IPC2322EBR-DPZ28	48:ea:63:21:ae:7c	e	Not logged in
<input type="checkbox"/>	192.168.0.125	NVR202-16EP	48:ea:63:0f:3a:e4	e	Not logged in
<input type="checkbox"/>	192.168.0.126	NVR204-16E	48:ea:63:15:e8:6a	e	Not logged in
<input type="checkbox"/>	192.168.0.127	NVR304-32E		e	Not logged in
<input type="checkbox"/>	192.168.0.128	NVR208-32		e	Not logged in

Once the EZTool is open find the IP of the camera that you want to firmwre update and then click on the “E” in the Configuration column. This will open your IE browser. Once your login opens log into your camera using admin/admin. Once you are logged into the camera navigate to “Setup” at the top of the screen. (You may have to close the yellow popup.) Then on the left hand side navigate to “System” and then to “Maintenance”. In the Maintenance menu find the “Firmware Upgrade” field.

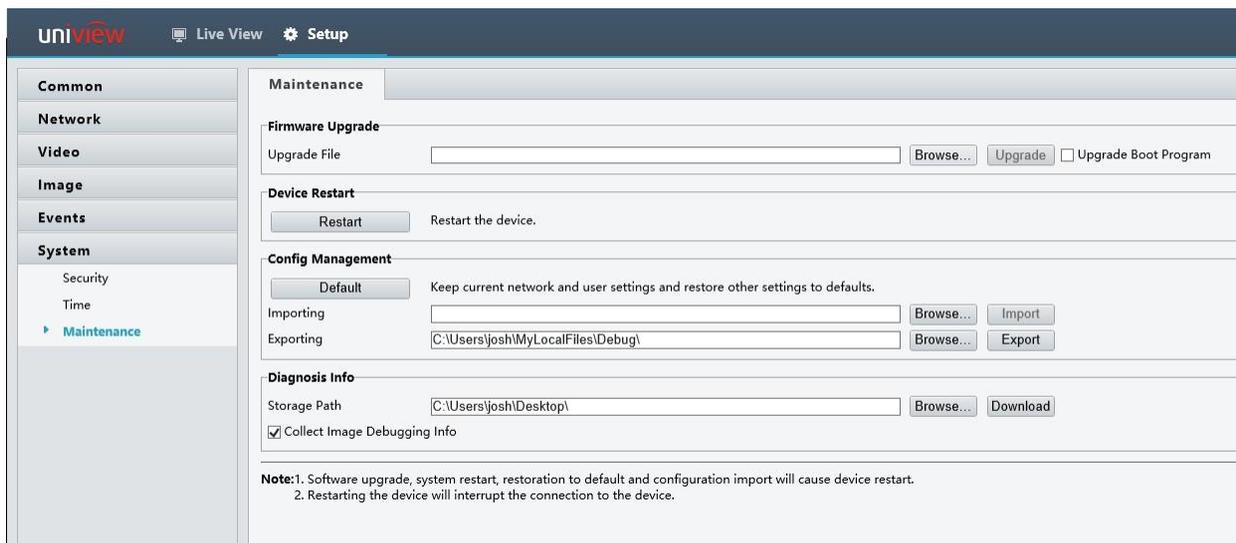

Once you find the Firmware upgrade field. Click on “Browse”. In the popup navigate to the folder were the firmware is saved and then select and open it. (The camera will take the **FULL** zip file in **ZIP** format). Then click “Upgrade”. Make sure you leave the “Upgrade Boot Program” **UNCHECKED**.

Firmware Upgrade			
Upgrade File	<input type="text" value="Z:\private\Uniview\Firmware\PCs\D1602\IPC_5202-F5021D1602.zip"/>	<input type="button" value="Browse..."/>	<input type="button" value="Upgrade"/> <input type="checkbox"/> Upgrade Boot Program