

GV-TWCS

AC Power Supply



Summary

The GV-TWCS AC Power Supply provides 24VAC with a total of 4 amp of continuous supply current.


Installation Instructions

1. Mount GV-TWCS in desired location.
2. Connect the AC (120VAC 50/60 Hz) to the black and white flying leads of the transformer (Fig. 1). Note: It is important to measure output voltage before connecting devices. This helps avoid potential damage.
3. Connect devices to terminal block on the inside back of the enclosure.
4. Upon completion of wiring, secure enclosure door with screws (supplied).

Warning

This installation should be made by qualified service personnel and should conform to all local codes and in accordance with the National Electrical Codes.

Figure 1

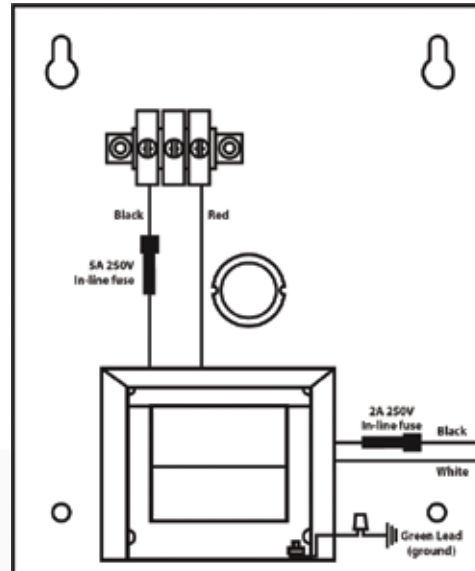

Specifications

- Input 120VAC 50/60 Hz, .95 amp
- 24VAC/100VA(4 amp) output
- Fused input protection
- Green grounding lead
- Fused output protection
- Enclosure dimensions: 8.5" H x 7.5" W x 3.5" D