


# AJP Player User Manual

For use with the DVMR CD-R Models





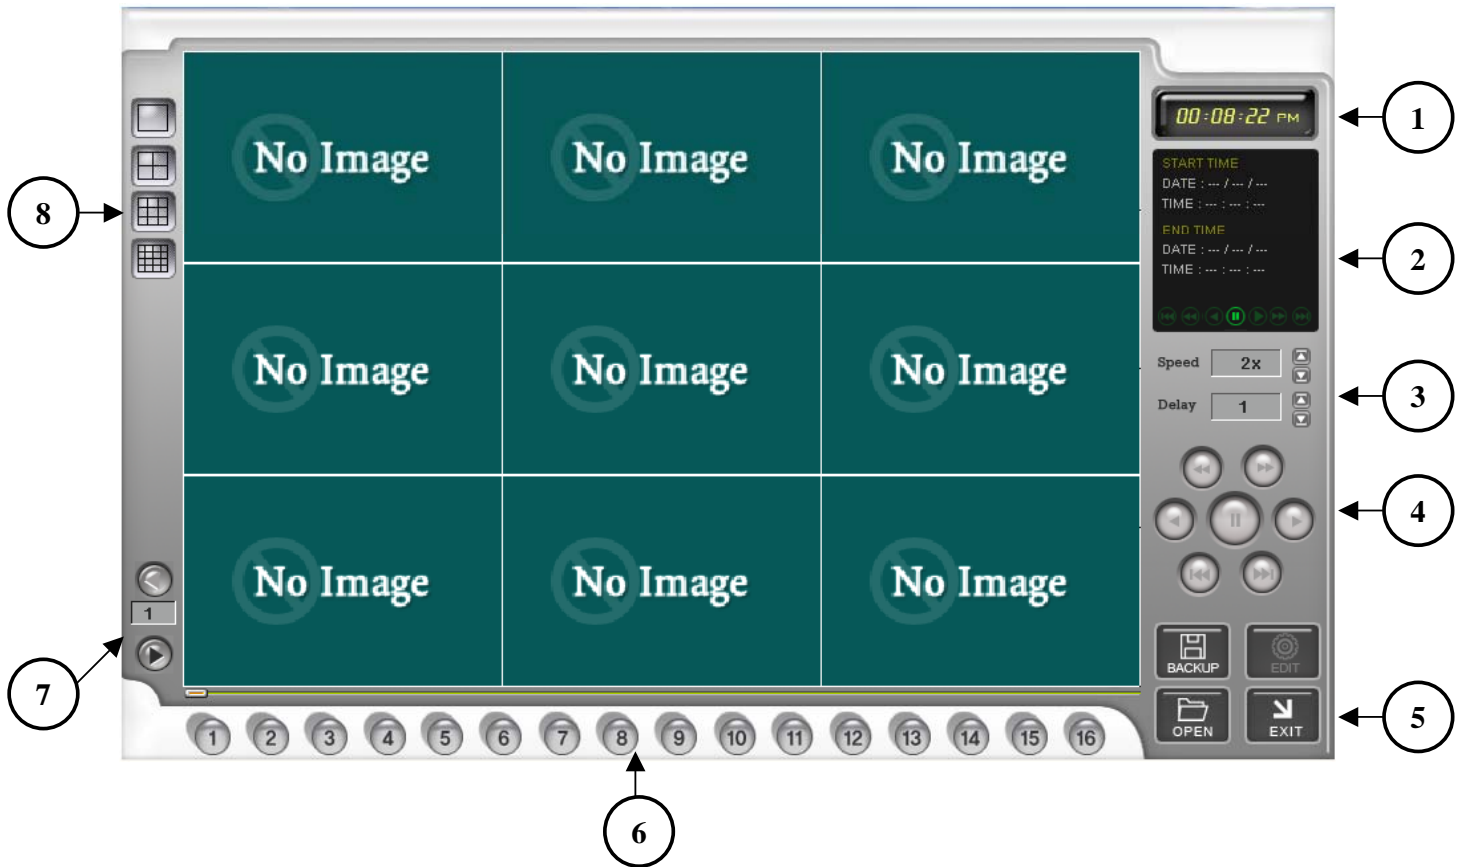

1. Time: The current time is displayed








2. Status Window:

- Displays the Start/End date & time.
- Displays time of video being reviewed.
- Displays operation being performed.





3. Playback Speed:

-  : Adjust playback speed (2X, 4X, 8X, 16X, 32X, 64X)  
\*\*\*This speed function is active when using the  or  button
-  : Adjust slow-motion effect (1X, 1/2X, 1/4X, 1/8, 1/16X)

#### 4. Operation Buttons:


- a.  : Move to the beginning of the file
- b.  : Play fast backward as set in Playback Speed Setting (3-a)
- c.  : Play backward (1X)
- d.  : Pause
- e.  : Play forward (1X)
- f.  : Play fast forward as set in Playback Speed Setting (3-a)
- g.  : Move to the end of the file

#### 5. Function Buttons:

- a.  : Save a JPEG image. Pause video prior to using this function. Saved file name is located in the install directory of the AJP program.  
Example: C:\Program Files\AJP Player with the file name as follows:  
16\_20041012\_120529 (DVMR Channel\_date\_time)
- b.  : Open an AJP file stored on a burned CD or on your local hard drive
- c.  : Push the EXIT button to quit the program.
- d.  : Feature not available with this release

#### 6. Channel Number Buttons: Select the channel to enlarge by clicking the corresponding channel button

#### 7. Page Button:

- a.  : This function is active when the divided screen does not display all channels of the DVMR. Ex: When 4-split screen view is used during review of a 16 channel unit. Press this button to view the next page of divided screens.

#### 8. Screen Division Buttons: - Select 1/4/9/16 screen divisions.