

iPhone Dock with Hidden Camera

SKU: HCIPHONEDOCK



**USER MANUAL
FCC CE**

THANK YOU FOR PURCHASING THE HCIPHONEDOCK

Please read this manual before operating the camera and keep it handy.

Your purchase should include:

- 1 x HCiPhoneDock
- 1 x Manual
- 1 x USB Cable
- 1 x AC Adapter

Contact 770-694-6923 if you are missing any of these components.

GET FAMILIAR WITH YOUR HCIPHONEDOCK

MicroUSB Port

MicroSD Card Slot



OPERATING THE CAMERA

GETTING STARTED

1. Plug the camera in using the provided USB cable and AC Adapter
2. Make sure a compatible microSD card is inserted into the unit.
3. Once you device is plugged in, press the A button on the remote one time. The device will beep indicating that it is powered on.

NOTE: When the device powers on, it immediately enters into motion detection mode.

4. To save any active recordings and return to standby mode press the D button on the remote. You will hear 2 short beeps indicating the device has left motion detection mode and entered standby mode.

BEGINNING A NEW VIDEO RECORDING

1. When in standby mode you may begin a new recording by pressing one of the video buttons.
 - To begin a motion activated recording, press the D button one time. The device will emit one short beep indicating it is now in motion detection mode.
 - To begin a continuous recording, press the C button one time. The device will emit one short beep indicating it is now in continuous recording mode.
2. To stop recording in either mode, press the mode button that you are currently recording in again and the device will emit 2 short beeps indicating it has stopped recording and returned to standby mode.

 
3. If you are done recording, you may press the power button one time to power off the device. It will emit 2 longer beeps confirming that it has powered off.

TAKING PHOTOS

1. Plug the device into a wall outlet
2. Press the power button one time.
3. Press the D button one time to leave motion detection and return to standby mode.
4. Press the B button one time to take a picture.
5. Each time you press the B button a photo will be taken.

SETTING THE DATE/TIME STAMP


1. Visit <http://time.mgidownloads.com>
2. Choose “HClphoneDock” and your time zone in the dropdowns and click download.
3. Plug the SD Card into your computer using an SD card reader (not provided)
4. Right click and copy the downloaded time file
5. Locate “Removable Disk” inside the (My) Computer folder
 - a. Go to Start > Computer > Removable Disk

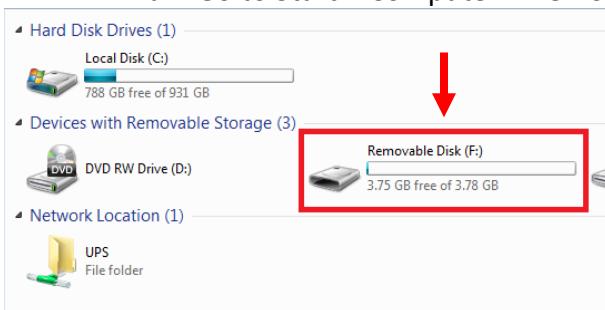


6. Open the Removable Disk drive
7. Right click with your mouse and paste the downloaded time file.

8. Alternatively, if you cannot get the above method to work, do the following:
9. Right click anywhere in the blank white space
10. Scroll down to “New”
11. Click “Text Document”
12. **Rename “New Text Document” as “time”**

 The title must be in all lowercase letters!

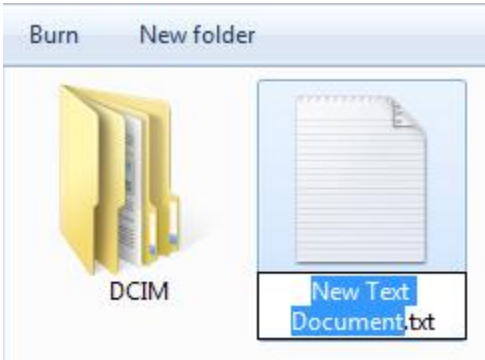

Before Step 8

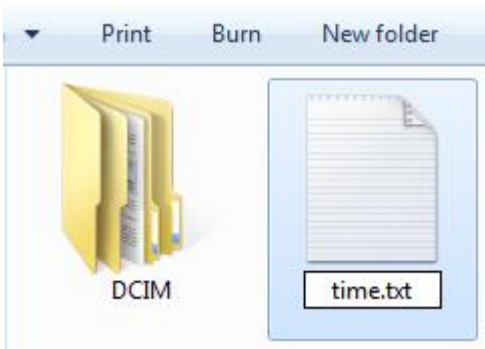 


After Step 8

13. Open the text document
14. Enter the date/time in the following format
 - a. Example:
2016-08-08 15:00:00 Y1

- b. The “Y” setting at the end defines what video recording mode to use. You may choose from:
 - i. Y1 = 1080P 30fps
 - ii. Y2 = 720P 30fps
 - iii. Y3 = 720P 60fps
 15. Save the text document
 16. Unplug the SD card from your PC and put it back in the device.
 17. Power on the device and begin a test recording to confirm date/time setting succeeded.


TRANSFER THE FILES TO YOUR PC

 1. Remove the SD card and insert it into an SD Card Reader (not provided).
2. Locate “Removable Disk” inside the (My) Computer folder
 - AutoPlay Removable Disk > Open folder to view files

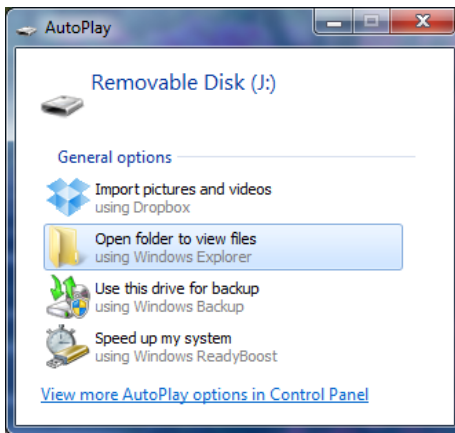

Or...

 - Go to Start > Computer > Removable Disk

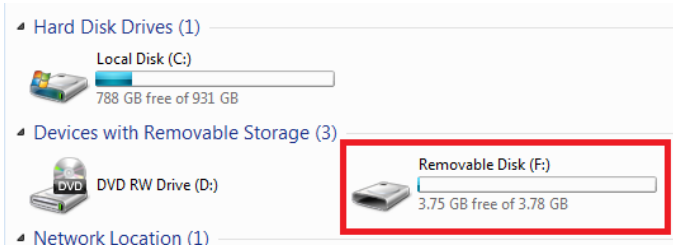

3. Open the Removable Disk drive
4. Open the folder containing the files
5. Double click the file you want to view

TROUBLESHOOTING

HOW TO RESET THE DEVICE

- To reset the device, put a small pin into the reset hole and hold for 2-3 seconds.

WHEN I PLAY BACK VIDEO I ONLY HEAR AUDIO AND SEE NO VIDEO

- Download VLC media player and open the file with VLC

OTHER PROBLEMS

- Call our technical support at **770-694-6921**

SPECIFICATIONS

Video Resolution	1080p
Video Format	.AVI
Frames per Second	30FPS
Vision Angle	100 degrees
Battery Life	Powered by AC
Loop Recording	Yes
Type of Memory	External MicroSD up to 128GB
Recording Usage	1080@30fps 1gb/10m, 720@30fps 400mb/10m, 720@60fps 1.2gb/10m
USB Interface	2.0 USB
Player Software	VLC recommended
Video Compression	H.264