Function Name	Function Description
Prompt cam info when	On channel type interface, select a channel number and set as
connecting to a camera.	AUTO, the preview small window prompts "Loading". After
	getting the stable signal, it displays camera type such as
	CVI,TVI,AHD,CVBS.
Add fan and chassis	Auto read fan and chassis temperature, auto sends out an alarm
temperature display	to alter user(only Multi-HDD models support).
function	
NTP auto resume	NTP auto resumes connecting once it fails. It is to guarantee
connecting once it fails.	NTP function is OK.
Optimize coaxial control protocol	HDCVI3.0: TVI supports camera zoon, focus, PTZ control.
	HDCCTV2.0: AHD supports zoom, focus, and PTZ control.
Support more analog cameras.	Add motion detection alarm via coaxial cable. Support IR
	detection camera.
Optimize digital	XVR5x32 support 32 digital channels
channel connection capability.	The default bit stream is 1080P/4M; one channel max supports
	5M.
Optimize XVR5X32 cascaded	17-32 channel of HDMI2 has optimized noise reduction
noise reduction function	function.
Compatible with TVI1.0	The XVR can recognize TVI1.0 signal only when TVI1.0 and
	TVI2.0 are both available.