
Linksys Router Port Forwarding Setup for Geovision DVR

- 1. Log into your Linksys Router by typing the following gateway into a web browser http://192.168.1.1 [By default Username and Password are both admin]
- Once you are logged into your Linksys router click "Applications & Gaming" > " Single
 Port Forwarding". [If "Single Port Forwarding" is not an option than select "Port Range
 Forwarding"]

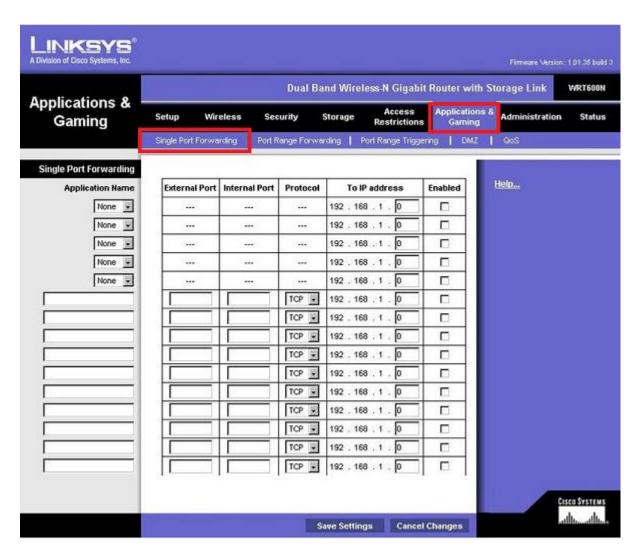

3. Now in one of the empty Application Fields fill in the below info.

| Application Name | Externet Port | Internet Port | Protocol | To IP Address | Enabled |
|------------------|---------------|---------------|----------|------------------|---------|
| | *** | | | 192 . 168 . 1. 0 | Г |

Application Name: Geovision DVR 1

External Port: 80 Internal Port: 80 Protocol: TCP

To IP address: IP Address of the Geovision DVR

Check the Enable Box

Do this for ports 80, 4550, 5550, 8866, 5511 and name each application differently. Example – Geovision DVR 1, Geovision DVR 2, etc. (Note: Each application must be uniquely named or else it will not work)

4. Click the" Save Settings" button near the bottom of the screen.