Netgear Router Port Forwarding Setup for Geovision DVR

- 1. Log into your Netgear router by typing in the following gateway http://192.168.0.1 [By default the Username: admin Password]
- 2. Click the "Port Forwarding" button on the left hand side of the screen.
- 3. Click the "Add Custom Service" button.



4. Now fill in the following.

Service Name: Geovision DVR 1

Starting Port: 80 **Ending Port:** 80

Server IP Address: IP Address of the Geovision DVR

Check the "Enable" box.

Do this for ports 80, 4550, 5550, 8866, 5511 and name each application differently. Example – Geovision DVR 1, Geovision DVR 2, etc. (**Note**: Each application must be uniquely named or else it will not work)

5. Click the "Add" button.