



TEMPORARY REVISION TO HEATER KIT INSTALLATION INSTRUCTIONS FOR CCSH-10MAG.

- (A) INSTALL HEATER PLATE ASSEMBLY AT BOTTOM FRONT OF HOUSING W/ SPECIAL SCREWS PROVIDED. (WIRES SHOULD BE TWISTED A COUPLE OF TURNS TO HELP KEEP THEM TOGETHER)
- (B) INSTALL THERMOSTAT BRACKET WITH COMPONENTS INTO SLOT AT REAR OF UNIT. (BE CAREFUL NOT TO CUT/DAMAGE WIRES).

NOTE:
SCREWS GO THRU HEATER
PLATE, DOWN INTO HOLES AT
THE BOTTOM FRONT OF THE
HOUSING BASE.
(DO NOT OVERTIGHTEN)

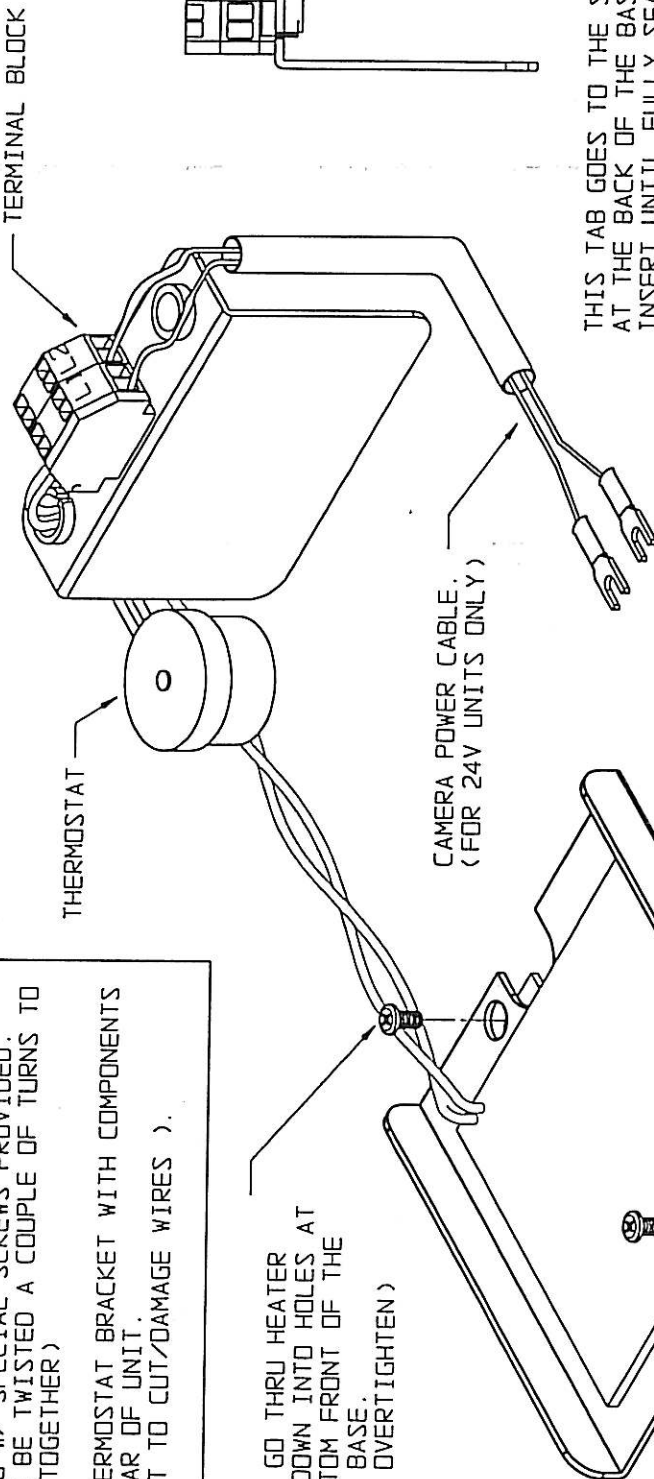


THIS TAB GOES TO THE SLOT
AT THE BACK OF THE BASE.
INSERT UNTIL FULLY SEATED..

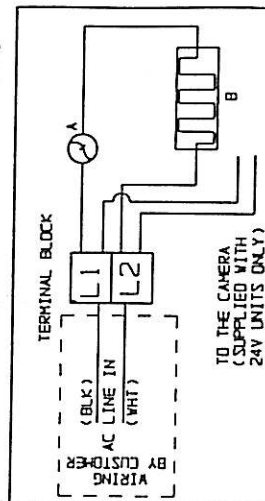

WIRING DIAGRAM A = HEATER THERMOSTAT
B = HEATER PLATE

NOTE: USE A SMALL BLADE
SCREWDRIVER OR SIMILAR
TOOL TO DEPRESS CLAMPS
IN TERMINAL BLOCK TOP TO
INSERT OR REMOVE WIRES
INTO OPENINGS AT BOTTOM.

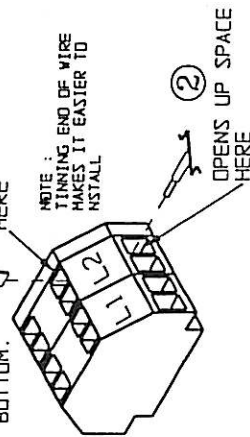

EMI
Electro-Mechanical Engineering

A Unit of
apw

28545 LIVINGSTON AV.W.
SANTA CLARITA, CA. 91355
(800) 628-5858 CA.(661) 702-7200
FAX (661) 775-1883