



Safety Technology International, Inc.
2306 Airport Road • Waterford, Michigan 48327-1209
Phone: 248-673-9898 • Fax: 248-673-1246
Toll Free: 800-888-4784 • E-mail: info@sti-usa.com
Web: www.sti-usa.com


Safety Technology International (Europe) Ltd.
Unit 49G Pipers Road • Park Farm Industrial Estate • Redditch
Worcestershire • B98 0HU • England • Tel: 44 (0) 1527 520 999
Fax: 44 (0) 1527 501 999 • Freephone: 0800 085 1678 (UK only)
E-mail: info@sti-europe.com • Web: www.sti-europe.com

INSTALLATION NOTES

1. Place back box in desired position on enclosure surface. Mark the four hole locations onto enclosure surface.
2. With a center punch, punch the center point of the four marked holes. This will help guide the drill on location when drilling holes in enclosure.
3. Use 7/32" diameter drill bit and drill through the four marked holes in enclosure.
4. Peel backing from back box gasket and place on enclosure by lining up the holes on gasket to the four drilled holes in enclosure and press firmly.
5. Place back box onto back box gasket and insert the four #10-24 screws and apply the four hex Keps nuts (not shown) from inside enclosure. Tighten hex Keps nuts to 6 in.-lbs. (27N)
6. Place hinged frame and cover assembly onto back box and fasten using the four #8-32 screws as shown. Tighten to 6 in.-lbs. (27N)

Installation Shown in Horizontal Position

STI-7510-E may be mounted on a flat surface horizontally or vertically. With hinged cover closed, the lock can be oriented left, right or bottom only and shall never be oriented with the lock in the "up" position. Mounting hole locations provided for your reference.

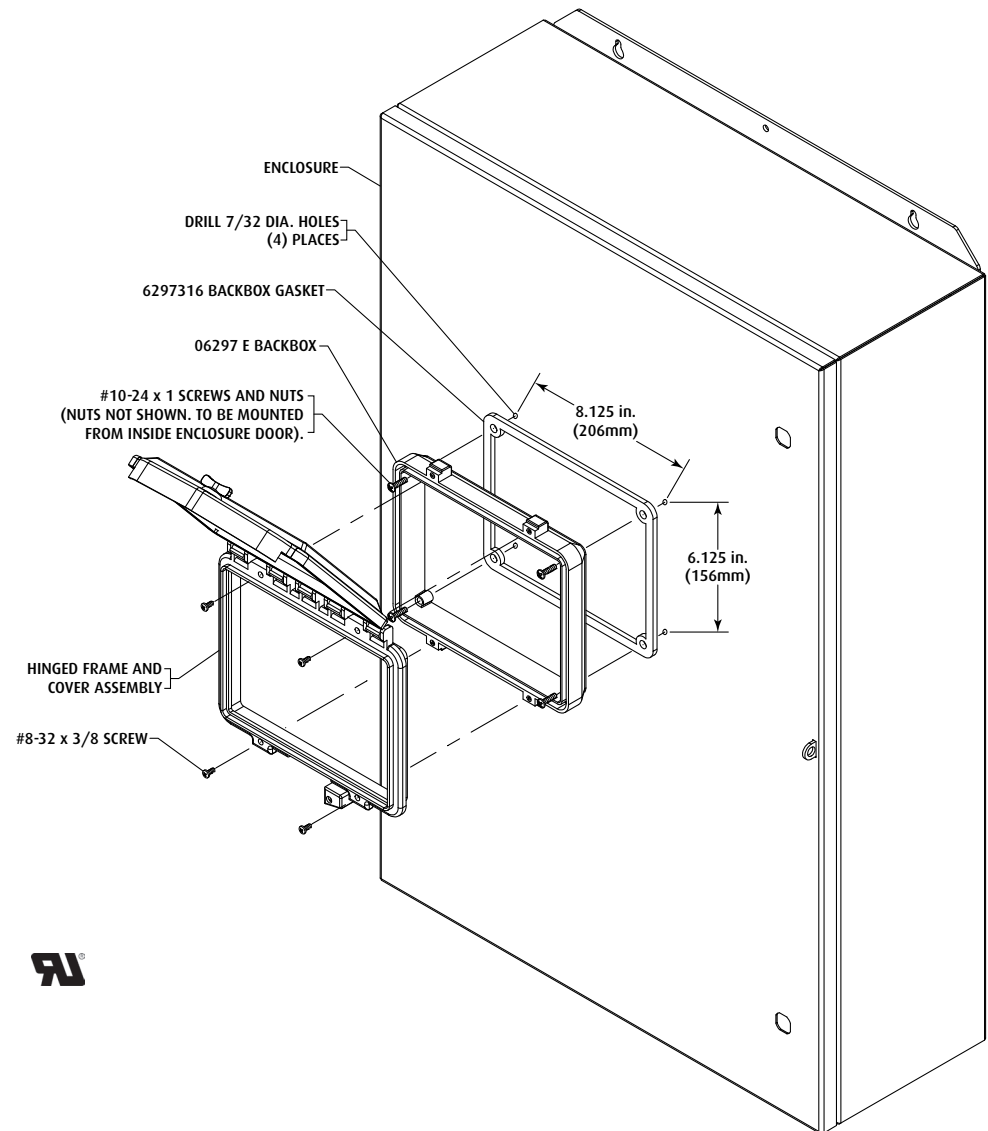

Electronic warranty form at www.sti-usa.com/wc14

INSTALLATION OF STI-7510E-OW POLYCARBONATE ENCLOSURE

All specifications and information shown were current as of publication and are subject to change without notice.

7510E-OW OCT2011

