



IMAX CAM PRO


CONFIGURATION TUTORIALS




Setting up Dual Network Ports

Things to remember:

Take note of the video recorder's ports - labeled "1" and "2".

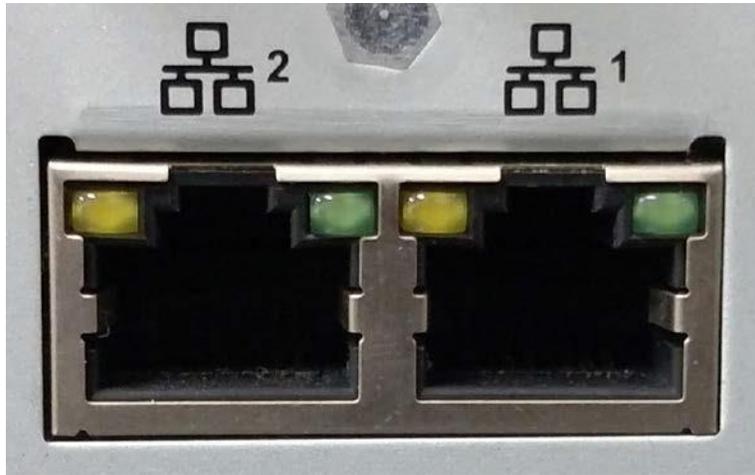

It is important that port "1" is plugged into the location's main network and port "2" is plugged into the camera network.

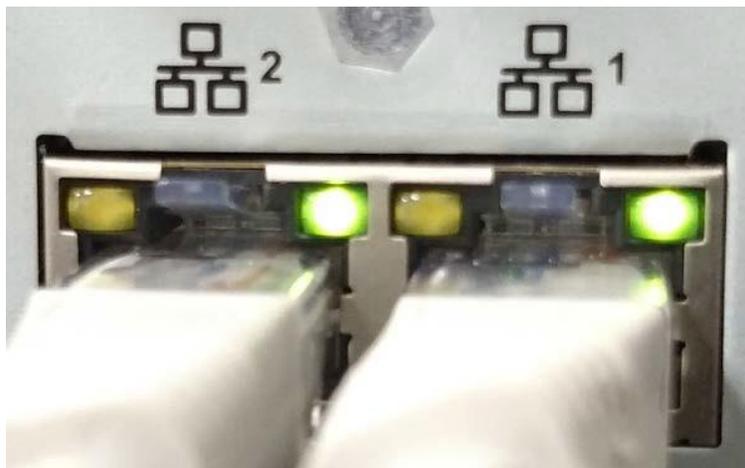

Network Settings Information:

Network Mode	Multi-address
Default Card	Ethernet Port1
Ethernet Port	Ethernet Port1
IP Version	IPv4
MAC Address	90 . 02 . A9 . D4 . F2 . 18
Mode	<input checked="" type="radio"/> STATIC <input type="radio"/> DHCP
IP Address	192 . 168 . 1 . 108
Subnet Mask	255 . 255 . 255 . 0
Default Gateway	192 . 168 . 1 . 1
Preferred DNS	8 . 8 . 8 . 8
Alternate DNS	8 . 8 . 4 . 4

Network Mode: Set up how each port is used and interacts with each other.

Default Card: Sets what network port is being used to scan the network for cameras.

Ethernet Port: The port currently being modified (settings).

IP Version: Sets what IP address version being modified.

MAC Address: The permanent MAC Address for the recorder hardware

Mode: Sets up the recorders IP address for “Static (Never changes)” or “DHCP (changes with network reboots or a unit reboot)”

IP Address: IP Address for the currently selected Ethernet port.

Subnet Mask: Subnet Mask for the network.

Default Gateway: Default Gateway that matches the network or the camera network.

Preferred DNS: DNS of the network

Alternate DNS: DNS of the network

Network Mode Differences

Network Mode	Multi-address
Default Card	Fault-tolerance Load Balance

Multi-Address: Sets up different IP addresses and LAN gateway for each port

Fault-tolerance: Binds two ports together to work as one; if one port goes down or has a wire or connection problem the other will continue to function

Load Balance: Evenly distribute network load between each port

Modifying individual port settings

Ethernet Port	Ethernet Port1 Ethernet Port2
---------------	----------------------------------

Select which port to modify settings using the Ethernet Port option

How to set up your second network port

Network Mode	Multi-address
Default Card	Ethernet Port1
Ethernet Port	Ethernet Port2
IP Version	IPv4
MAC Address	90 . 02 . A9 . D4 . F2 . 19
Mode	<input checked="" type="radio"/> STATIC <input type="radio"/> DHCP
IP Address	192 . 168 . 5 . 108
Subnet Mask	255 . 255 . 255 . 0
Default Gateway	192 . 168 . 5 . 1
Preferred DNS	8 . 8 . 8 . 8
Alternate DNS	8 . 8 . 4 . 4

When setting up the second network port the only setting that will have to be changed is the subnet (3rd octet in the IP).

Ensure the second network port and the first one is not on the same subnet.

All cameras will need to be modified to be on the same subnet as the second network port. To do this, connect a PC with a static IP address matching Port "2" network information and use the ConfigTool to edit the camera's IP addresses. All camera's IP address last octet must be different from each other.

Setting the Default network port

Network Mode	Multi-address
Default Card	Ethernet Port2
Ethernet Port	Ethernet Port1
IP Version	IPv4
MAC Address	90 . 02 . A9 . D4 . F2 . 18
Mode	<input checked="" type="radio"/> STATIC <input type="radio"/> DHCP
IP Address	192 . 168 . 1 . 108
Subnet Mask	255 . 255 . 255 . 0
Default Gateway	192 . 168 . 1 . 1
Preferred DNS	8 . 8 . 8 . 8
Alternate DNS	8 . 8 . 4 . 4

Next set the default card as "Ethernet Port2"; this will tell the recorder to use port "2" as the camera port. Port "1" will remain active to allow internet access from the main network LAN.

Adding Cameras

5		IP Address	Port	Device Name	M
1	<input type="checkbox"/>	192.168.1.106	80		
2	<input type="checkbox"/>	192.168.1.15	80		
3	<input type="checkbox"/>	192.168.5.110	37777	IPC	
4	<input type="checkbox"/>	192.168.1.15	37777	DVR	
5	<input type="checkbox"/>	192.168.1.14	37779	NVR	

Device Search Add

<input type="checkbox"/>	Channel	Modify	Delete	Status	IP Address	Port	Device Name
<input type="checkbox"/>	17				192.168.5.110	37777	IPC

Go to "Remote Device" and do a "Device Search". Scan the network for all iMaxCamPro equipment. Look for all the cameras with a subnet matching port "2". After checking off the cameras click "Add" this will add the cameras to the unit.