

INSTRUCTIONS



DP-XXXX

DP-XXXXC

DP-XXXXP

Telephone Entry Door Intercom


 **CHANNEL VISION™**

©2007 CHANNEL VISION TECHNOLOGY


Channel Vision's DP-Series are 1/4" solid brass door plates that interface with a telephone entry controller to provide communication with the front door. They are available in a variety of configurations including options for a hidden camera and compatibility with Panasonic's popular KSU phone systems. Each plate comes with the DP-9001 or DP-9002 surface mount box (depending on the finish color). It is compatible with the DP-Rbox-II flush mount box, which is sold separately.

Features:


- 1/4" thick solid brass plate
- Discrete speaker and microphone
- Fits the DP-Rbox-II flush mount box, and the DP-9001, DP-9002 surface mount boxes.
- Available in 9 different finishes

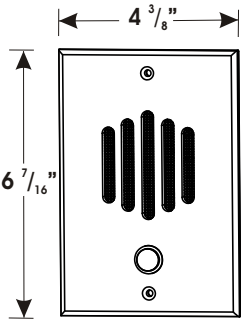

**DP-Series Faceplate
(included)**

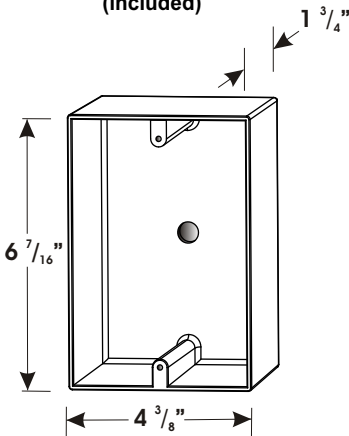


**DP-9001 or DP-9002
Surface Mount Box
(included)**

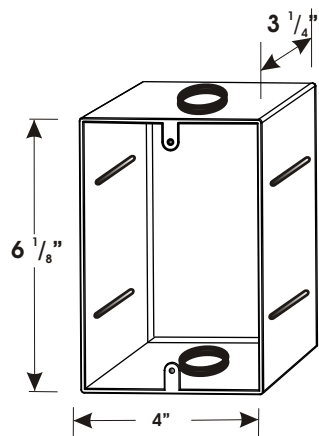

**DP-Rbox-II
Flush Mount Box
(optional)**

Understanding the model number:

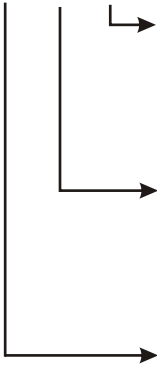Part numbering: DP door plates		
DP-0212C (DP-0212C shown for example only)		
	Blank	P-0920, P-0921, & TE110/C-0920 compatible
	C	P-0930 compatible
	P	Panasonic compatible
	212	White
	222	Polished Brass
	232	Antique Brass
	242	Chrome
	252	Oil Rubbed Bronze
	262	Antique Copper
	272	Satin Silver
	282	Black
	302	Satin Nickel
	0	No camera
	5	Black and white camera
	6	Color camera

Understanding the compatibility options

There are three different types of systems that DP door plates can be used with. The compatibility for these different types of systems is indicated by the suffix of the model number which follows the 4-digit numerical code.

If there is not a letter suffix on the model number, such as DP-0212, that door plate is compatible with Channel Vision's telephone entry products including models P-0920, P-0921, C-0920, and TE110.

If the suffix is the letter "P", such as DP-0212P, then the door plate is compatible with Panasonic's phone systems which are designed to use the Panasonic door phone model: KXT-30865.


If the suffix is the letter "C", such as DP-0212C, then the door plate is compatible with Channel Vision's Whole-House CAT5 Intercom Hub, model P-0930.

Please double check to be sure that you have purchased the correct model number for your application.


Attaching the Companion Board (DP-XXXX and DP-XXXXP)

This door intercom product consists of two sub assemblies which must be attached to each other before the final assembly can be installed. In this guide the electronic sub assembly will be referred to as the "Companion Board" and the mechanical assembly will be referred to as the "Door Plate." Review the following diagrams and assemble as shown.


Companion Board Connection Details

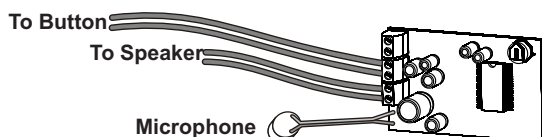

Remove the plastic cap that covers the microphone compartment on the door plate. Place the microphone in the compartment and replace the plastic cap over the microphone. Note that the plastic cap will form a friction fit over the top of the microphone wires holding them snug against the outer compartment wall until they exit at the base as shown. Remove the mounting screws which are already attached to the bracket and use them to attach the companion board. The companion board should mount on the front side of the bracket so that the screws pass through the companion board before threading into the bracket.

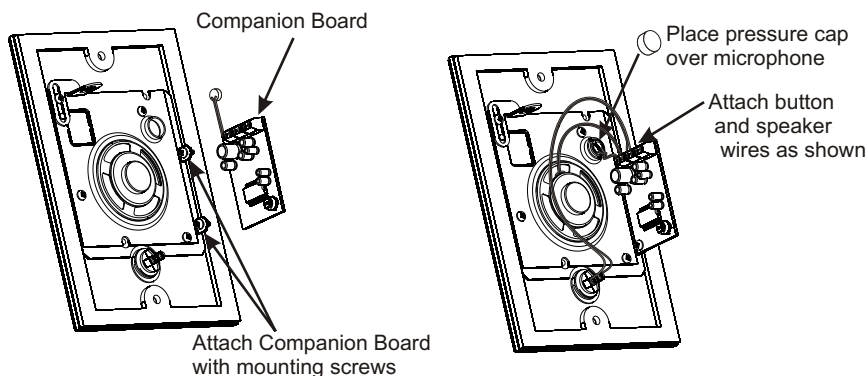


Completed Sub-assembly

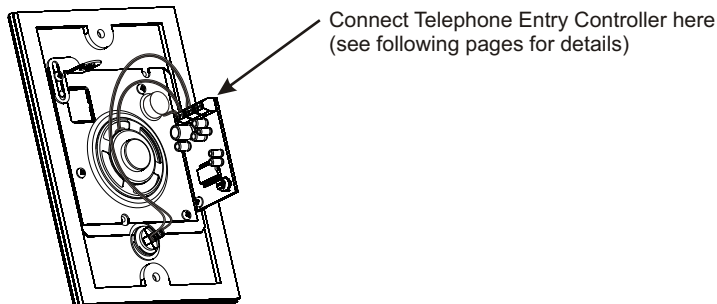

Attaching the Camera (DP-XXXX and DP-XXXXP)


The DP-5xxx, DP-5xxxP, DP-6xxx, and DP-6xxxP come with a mini camera that can be attached to the integrated mount that allows the camera to see through the opening in the plate. The illustrations bellow show how to mount the camera.

Mini Pinhole Camera

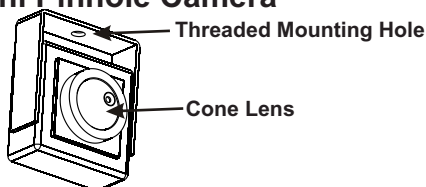

Break away the section of perforated metal screen that covers the camera opening by pushing a screwdriver through the slot on the front of the door plate. Press near the top or bottom of the section and the tabs that hold it in place will break free. Attach the camera to the mount so that the cone of the camera points through the opening. Adjust the camera to the desired position and secure it in place by tightening the screw in the mount.


Completed Sub-assembly
(see Attaching the Companion Board)

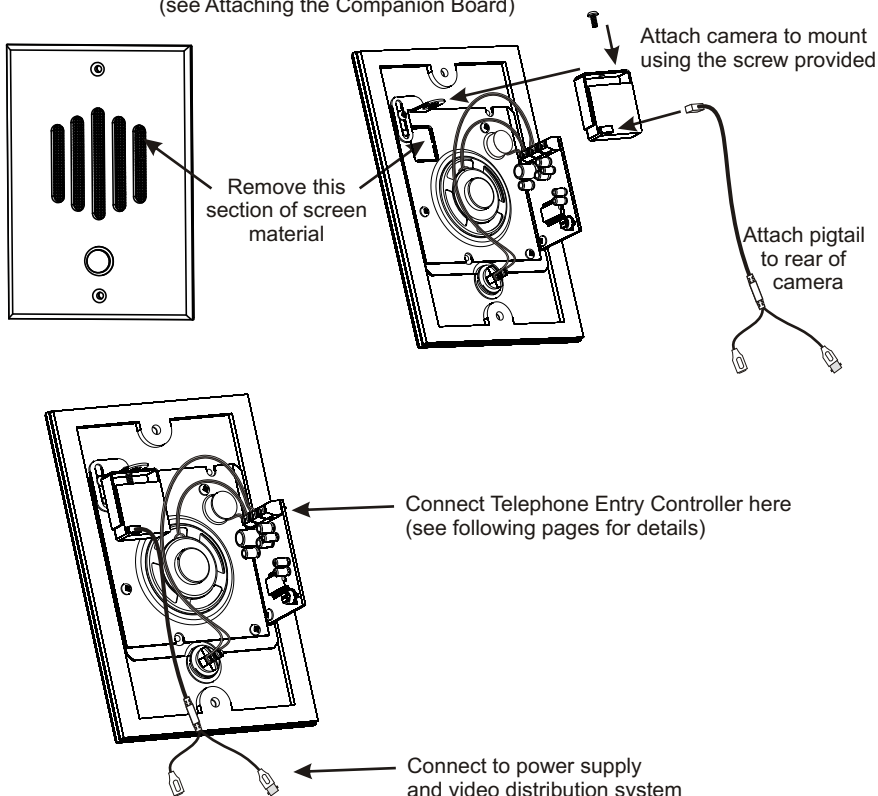

Attaching the Companion Board (DP-XXXXC)


This door intercom product consists of two sub assemblies which must be attached to each other before the final assembly can be installed. In this guide the electronic sub assembly will be referred to as the “Companion Board” and the mechanical assembly will be referred to as the “Door Plate.” Review the following diagrams and assemble as shown.

Companion Board Connection Details

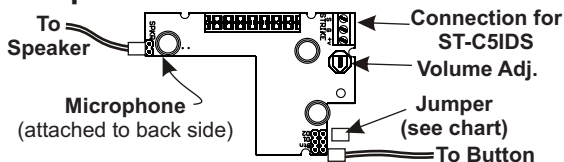


Jumper Chart	
Setting	Function
D1	Door 1
D2	Door 2
(No Jumper)	Patio Mode

Position the companion board onto the three mounting tabs as shown below. The microphone attached to the back side of the companion board should line up with the microphone tube on the bracket. Bend the mounting tabs to secure the companion board. Connect the speaker and button wires by sliding the small connector over the exposed pins on the companion board as shown.

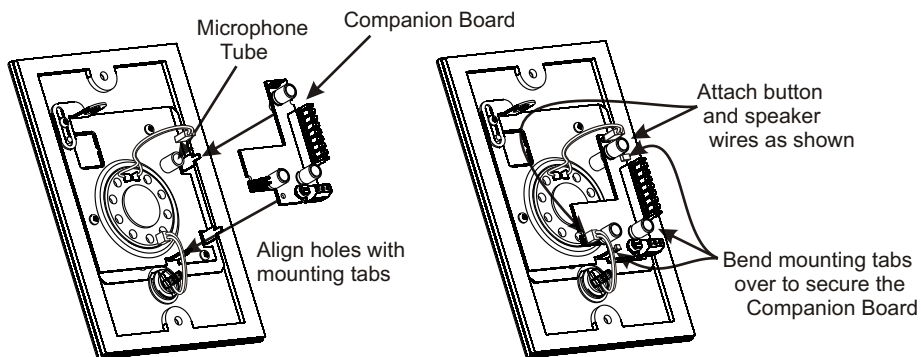

Completed Sub-assembly

Connect Intercom Hub here
(see following pages for details)

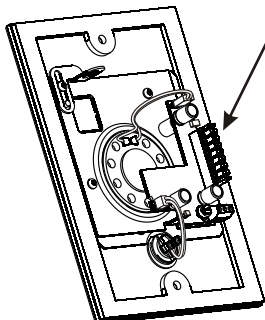

Patio Mode:


If the button is pressed on another DP station configured as Door 1 or Door 2, pressing the button on a DP station set in Patio mode will answer the door station that just rang. Press and release a second time to hang up, or press and hold for 3 seconds to activate the ST-C5IDS Door Strike Relay.

If neither Door 1 or Door 2 have been activated in the last 20 seconds, pressing the button on a DP station set in Patio mode will page the house stations. Pressing the button a second time will end the page.

Attaching the Camera (DP-XXXXC)


The DP-5xxxC and DP-6xxxC come with a mini camera that can be attached to the integrated mount that allows the camera to see through the opening in the plate. The illustrations bellow show how to mount the camera.

Mini Pinhole Camera

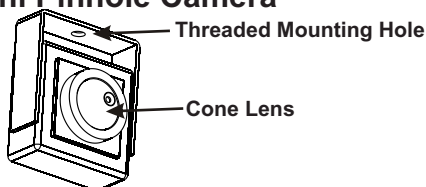


Break away the section of perforated metal screen that covers the camera opening by pushing a screwdriver through the slot on the front of the door plate. Press near the top or bottom of the section and the tabs that hold it in place will break free. Attach the camera to the mount so that the cone of the camera points through the opening. Adjust the camera to the desired position and secure it in place by tightening the screw in the mount.

Completed Sub-assembly
(see Attaching the Companion Board)

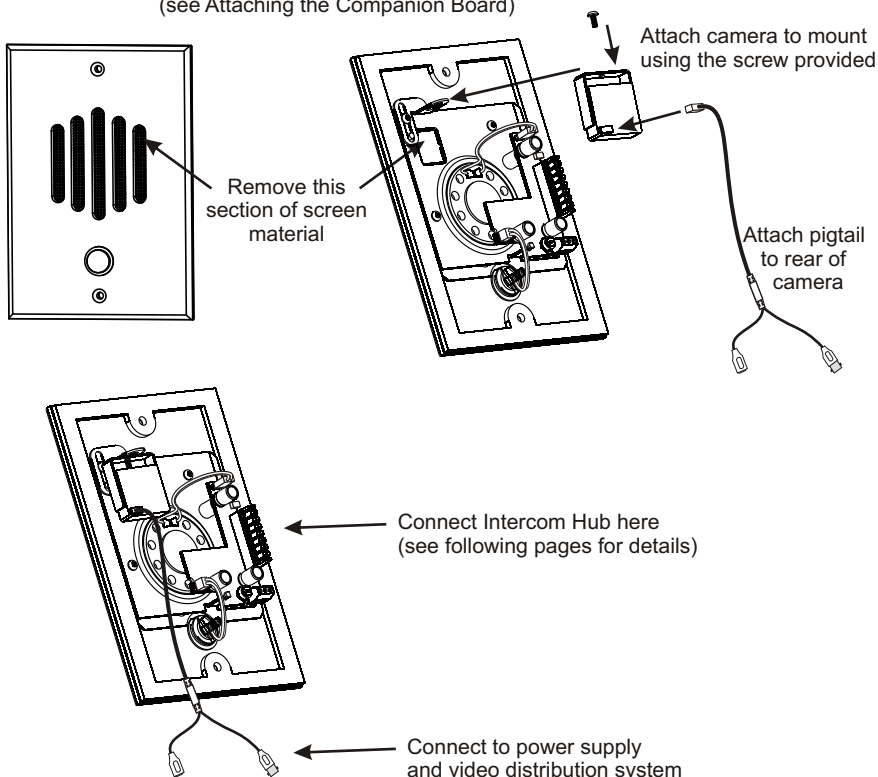

Channel Vision Compatible (DP-xxxx)

Channel Vision's DP-0xxx does not come with a camera, but the DP-5xxx & DP-6xxx Series door plates come with mini cameras which attach to the integrated camera mount. The DP-5xxx contains a Black & White camera, while the DP-6xxx contains a color camera. The DP-0xxx, DP-5xxx, and DP-6xxx all interface with the Channel Vision's telephone entry controllers: TE110, C-0920, P-0920 and P-0921 to provide audio and video communication with the front door.

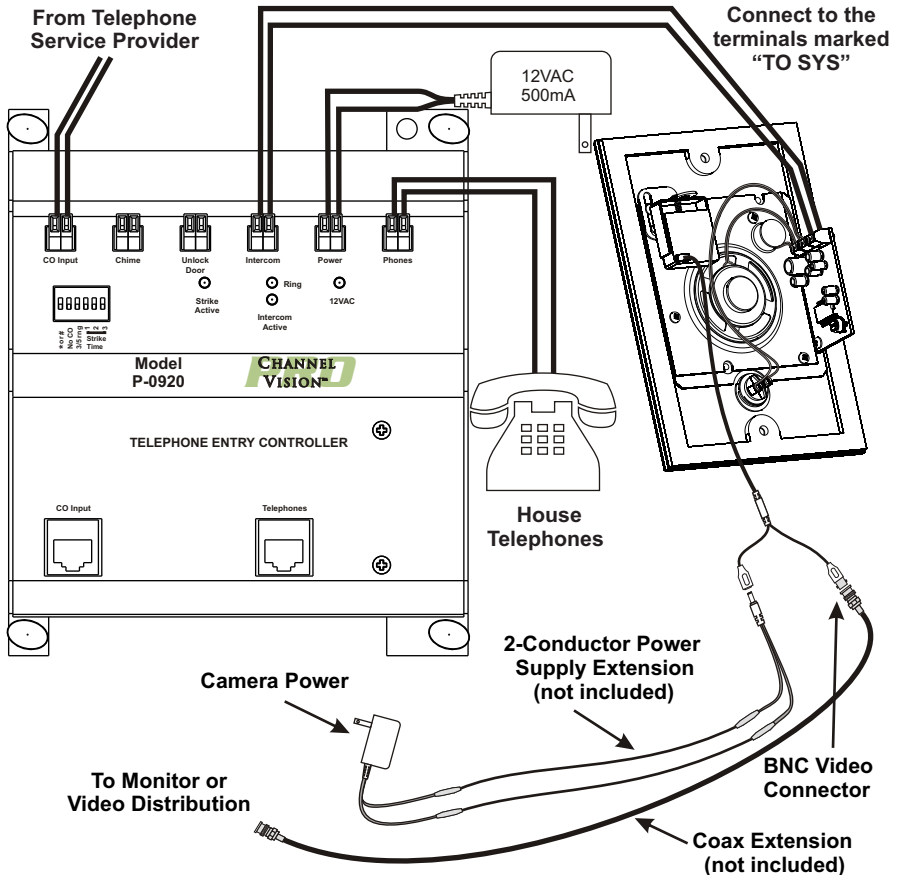


Installation:

- Install a compatible mounting box at the desired location, such as: DP-Rbox-II flush mount box, DP-9001 surface mount box, or DP-9002 surface mount box.
- Using a 2-conductor wire, connect the Telephone Entry Controller to the empty screw terminal block on the DP (see diagram).
- If necessary, attach the camera's video output to a coax extension that is long enough to reach your monitor or video distribution equipment.
- If necessary, cut the connector off of the end of the power supply and splice in an extension using crimp-on connectors.

Panasonic® Compatible (DP-xxxxP)

Channel Vision's DP Panasonic Series models are a compatible replacement for the Panasonic KXT30865. These 1/4" solid brass door plates provide an attractive alternative to the standard plastic door station sold by Panasonic. This product interfaces with Panasonic's KSU phone systems to provide communication with the front door. Model DP-6xxxP includes a color camera, model DP-5xxxP includes a Black & White camera, and DP-0xxxP includes no camera.

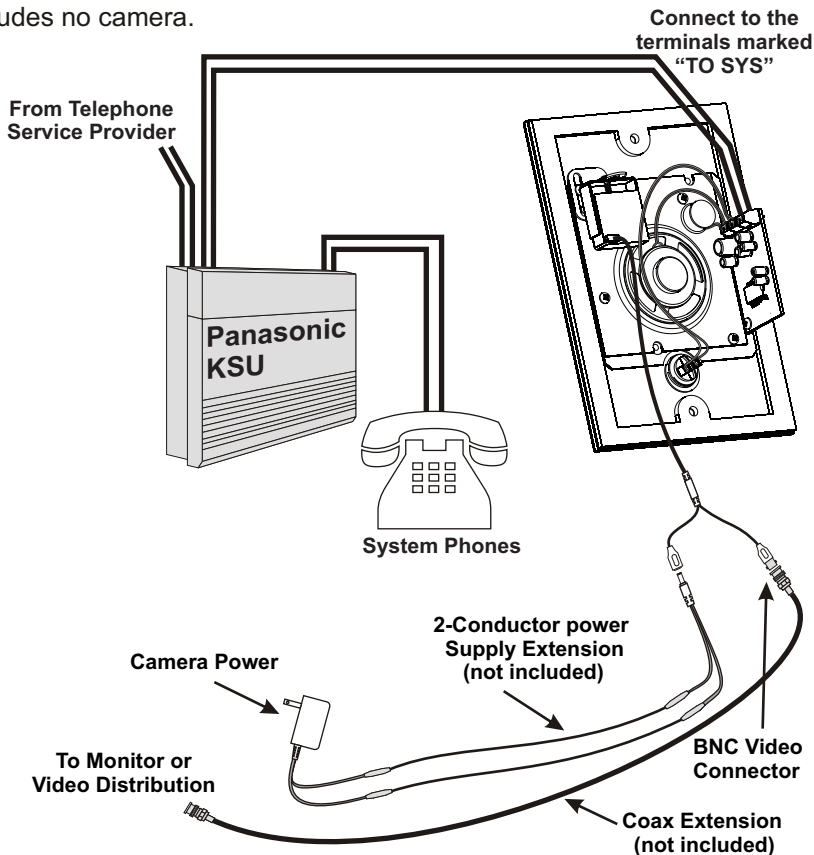


Installation:

- Install a compatible mounting box at the desired location, such as: DP-Rbox-II flush mount box, DP-9001 surface mount box, or DP-9002 surface mount box.
- Using a 2-conductor wire, connect the door phone output of your Panasonic KSU to the empty screw terminal block on the DP (see diagram).
- Consult your Panasonic manual for instructions regarding door phone operation.
- If necessary, attach the camera's video output to a coax extension that is long enough to reach your monitor or video distribution equipment.
- If necessary, cut the connector off of the end of the power supply and splice in an extension using crimp-on connectors.

Channel Vision CAT5 Intercom Compatible (DP-xxxxC)

The diagram below shows how to connect the DP-xxxxC to Channel Vision's CAT5 Whole-House Intercom system. When the button is pressed on the DP-xxxxC the ST-2000 Intercom Stations will generate a door chime. Pressing Answer/End will open communication with the DP-xxxxC. Model DP-6xxxC includes a color camera, model DP-5xxxC includes a Black & White camera, and DP-0xxxC includes no camera.

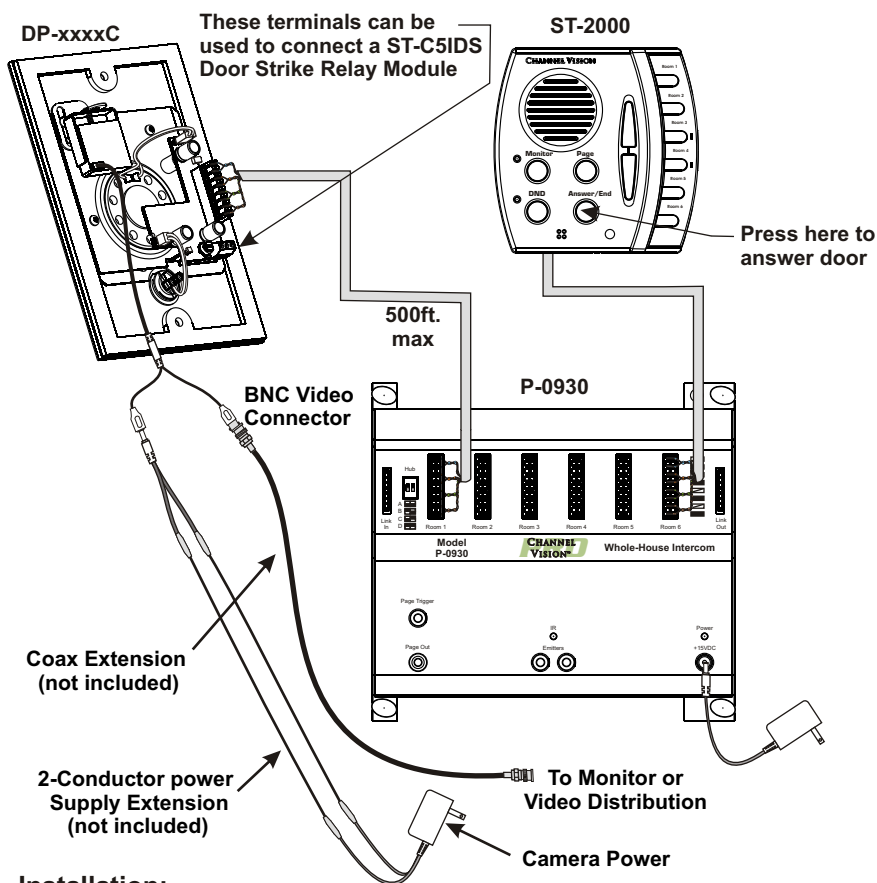

Installation:

- Install a compatible mounting box at the desired location, such as: DP-Rbox-II flush mount box, DP-9001 surface mount box, or DP-9002 surface mount box.
- Using CAT5 wire, connect the P-0930 to the 110 connector on the DP (see diagram).
- If necessary, attach the camera's video output to a coax extension that is long enough to reach your monitor or video distribution equipment.
- If necessary, cut the connector off of the end of the power supply and splice in an extension using crimp-on connectors.

Specifications:

Speaker:

Size (mm):	50
Depth (in):	1.5
Impedance:	8 Ohms
Power Peak (W):	0.2
Frequency Range:	500 Hz - 4.5 kHz

Dimensions:

DP-Series plate only:	6 1/2" (L) x 4 3/8" (W) x 1/4" (D)
DP-Series assembly:	6 1/2" (L) x 4 3/8" (W) x 1 3/4" (D)

Black & White Camera: (DP-5xxx & DP-5xxxP only)

Camera Lens:	3.8mm
Resolution:	500 lines
S/N Ratio:	More than 48 dB
Min Illumination:	0.05 LUX @ F2.0
Power Supply:	12VDC regulated
Power Consumption:	110 mA
Video Output:	1 Vp-p @ 75 ohms
Dimensions:	(see instruction for the 5401 B/W camera)
Operating Temp:	-10°C to 50°C (14°F to 122°F)

Color Camera: (DP-6xxx & DP-6xxxP only)

Camera Lens:	3.8mm
Resolution:	380 lines
S/N Ratio:	More than 48 dB
Min Illumination:	0.4 LUX @ F2.0
Power Supply:	12VDC regulated
Power Consumption:	120 mA
Video Output:	1 Vp-p @ 75 ohms
Dimensions:	(see instruction for the 6401 color camera)
Operating Temp:	-10°C to 50°C (14°F to 122°F)

CHANNEL VISION™

2 Year Limited Warranty

Channel Vision Technology will repair or replace any defect in material or workmanship which occurs during normal use of this product with new or rebuilt parts, free of charge in the USA, for two years from the date of original purchase. This is a no hassle warranty with no mail in warranty card needed. This warranty does not cover damages in shipment, failures caused by other products not supplied by Channel Vision Technology, or failures due to accident, misuse, abuse, or alteration of the equipment. This warranty is extended only to the original purchaser, and a purchase receipt, invoice, or other proof of original purchase date will be required before warranty repairs are provided.

Mail in service can be obtained during the warranty period by calling (800) 840-0288 toll free. A Return Authorization number must be obtained in advance and can be marked on the outside of the shipping carton.

This warranty gives you specific legal rights and you may have other rights (which vary from state to state). If a problem with this product develops during or after the warranty period, please contact Channel Vision Technology, your dealer or any factory-authorized service center.

 CHANNEL VISION™
www.channelvision.com

234 Fischer Avenue, Costa Mesa, California 92626 USA
(714)424-6500 • (800)840-0288 • (714)424-6510 fax
email: techsupport@channelvision.com