








# Foreword

## General

This quick start guide (hereinafter referred to as "the Manual") introduces the functions and operations of the NVR device (hereinafter referred to as "the NVR").

## Safety Instructions

The following categorized signal words with defined meaning might appear in the Manual.

Signal Words	Meaning
 <b>DANGER</b>	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
 <b>WARNING</b>	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 <b>CAUTION</b>	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
 <b>TIPS</b>	Provides methods to help you solve a problem or save you time.
 <b>NOTE</b>	Provides additional information as the emphasis and supplement to the text.

## Revision History

Version	Revision Content	Release Time
V1.0.0	First release.	July 2020

## Privacy Protection Notice

As the NVR user or data controller, you might collect personal data of others such as face, fingerprints, car plate number, Email address, phone number, GPS. You need to be in compliance with the local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures including but not limited to: providing clear and visible identification to inform data subject the existence of surveillance area and providing related contact.

## About the Manual

- The Manual is for reference only. If there is inconsistency between the Manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the Manual.
- The Manual would be updated according to the latest laws and regulations of related regions. For detailed information, see the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the Manual. Contact the

customer service for the latest program and supplementary documentation.

- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, refer to our final explanation.
- Upgrade the reader software or try other mainstream reader software if the Manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the Manual are the properties of their respective owners.
- Visit our website, contact the supplier or customer service if there is any problem occurred when using the NVR.
- If there is any uncertainty or controversy, refer to our final explanation.

# Important Safeguards and Warnings

The following description is the correct application method of the NVR. Read the Manual carefully before use to prevent danger and property loss. Strictly conform to the Manual during application and keep it properly after reading.

## Operating Requirements

- Install the PoE cameras indoors.
- Do not place and install the NVR in an area exposed to direct sunlight or near heat generating device.
- Do not install the NVR in a humid, dusty or fuliginous area.
- Keep its horizontal installation, or install it at stable places, and prevent it from falling.
- Do not drip or splash liquids onto the NVR; do not put on the NVR anything filled with liquids, in order to prevent liquids from flowing into the NVR.
- Install the NVR at well-ventilated places; do not block its ventilation opening.
- Use the NVR only within rated input and output range.
- Do not dismantle the NVR arbitrarily.
- Transport, use and store the NVR within allowed humidity and temperature range.

## Power Requirements

- Use batteries according to requirements. Otherwise, it may result in fire, explosion or burning risks of batteries!
- To replace batteries, only the same type of batteries can be used.
- Dispose the exhausted batteries according to the instructions.
- Use electric wires within rated specifications recommended by local regulations.
- Use standard power adapter matched with this NVR. Otherwise, the user shall undertake resulting personnel injuries or NVR damages.
- Use power supply that meets SELV (safety extra low voltage) requirements, and supply power with rated voltage that conforms to Limited Power Source in IEC60950-1. For specific power supply requirements, refer to device labels.
- Products with category I structure shall be connected to grid power output socket, which is equipped with protective grounding.
- Appliance coupler is a disconnecting device. During normal use, keep an angle that facilitates operation.

# Table of Contents

Foreword.....	I
Important Safeguards and Warnings.....	III
1 Local Operations .....	1
1.1 Starting the NVR .....	1
1.2 Initializing the NVR.....	1
1.3 Configuring Network.....	4
1.4 Adding IP Camera .....	6
1.4.1 Initializing IP Camera.....	6
1.4.2 Adding IP Camera by Search Result .....	10
1.4.3 Manually Adding IP Camera.....	12
1.5 Configuring Recorded Video Storage Schedule .....	15
1.6 Configuring P2P Settings .....	17
1.6.1 Enabling P2P Function.....	17
1.6.2 Adding the NVR to Smart Phone Client.....	18
1.7 Smart Motion Detection .....	19
1.8 Live View.....	21
1.9 Recording Playback.....	23
2 Logging in to Web.....	25
Appendix 1 Cybersecurity Recommendations.....	26

# 1 Local Operations



Slight difference might be found on the interfaces of different models. Following figures are for reference only. The actual product shall prevail.

## 1.1 Starting the NVR

Before starting the NVR, make sure that:

- The rated input voltage matches the NVR's power requirements.
- The power wire connection is ready.
- For device security, connect the NVR to the power adapter first and then connect it to the power socket.
- Always use stable current. It is recommended to use UPS as the power source.

## 1.2 Initializing the NVR

This topic shows how to initialize the NVR before use.

### Background Information

When booting up for the first time, you need to configure the password information for **admin** (by default). To guarantee device security, we strongly recommend you properly keep the login password and regularly modify it.

### Procedure

- Step 1 Turn on the NVR.  
The system enters device initialization interface.
- Step 2 From the drop-down lists, select region, language and video standard as needed.



You can change these settings on setting pages of the NVR after initialization.

Figure 1-1 Set location, language and video standard

The screenshot shows the 'Device Initialization' window. A red circle with the number '1' is next to a box containing three settings: 'Region' with a dropdown menu showing 'Please select an item.', 'Language' with a dropdown menu showing 'English', and 'Video Standard' with a dropdown menu showing 'PAL'. At the bottom right, there is a red circle with the number '2' next to a 'Next' button.

Step 3 Click **Next**.

Step 4 Read the Software License Agreement and select **I have read and agree to all terms**, and then click **Next**.

Step 5 Select time zone and configure system time, and then click **Next**.




Figure 1-2 Configure time zone and system time

The screenshot shows the 'Device Initialization' window. A red circle with the number '1' is next to a box containing two settings: 'Time Zone' with a dropdown menu showing '(UTC+04:00) Yerevan', and 'System Time' with two input fields showing '2020 -01 -08' and '13 : 11 : 35'. At the bottom right, there is a red circle with the number '2' next to a 'Next' button.

Step 6 Configure the password information for device administrator, and then click **Next**.

Figure 1-3 Configure password information


Table 1-1 Password information

Parameter	Description
Username	By default, the user is <b>admin</b> and you cannot change it.
Password	Enter a new password for device administrator in <b>Password</b> field, and confirm the password in the next field.
Confirm Password	 <p>The new password can be set from 8 characters to 32 characters and contains at least two types from numbers, letters and special characters (excluding "", "", ", ":", "." and "&amp;").</p>
Password Hint	<p>Enter a prompt question that will help you recall the password for your device.</p>  <p>On the login interface, click  and the prompt will be displayed to help you reset the password.</p>

Step 7 (Optional) Use mouse to draw an unlock pattern, and then draw it again for confirmation.



Figure 1-4 Draw an unlock pattern

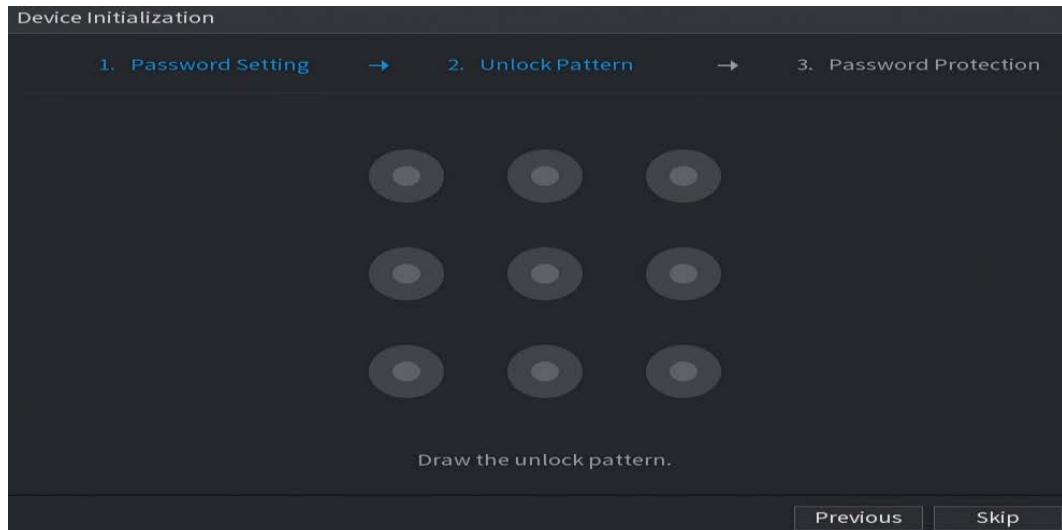


- The pattern that you want to set must cross at least four points.
- If you do not want to configure the unlock pattern, click **Skip**.
- Once you have configured the unlock pattern, it will be used as the default authentication method. If you skip this setting, enter the password for login.

**Step 8** (Optional) Apply reserved email and security questions to the NVR.

- Enable **Reserved Email** and enter the email address.
- Enable **Security Question** and select questions from the drop-down lists for **Question 1**, **Question 2**, and **Question 3**, and then enter the answers to those questions.

Figure 1-5 Apply reserved email and security questions

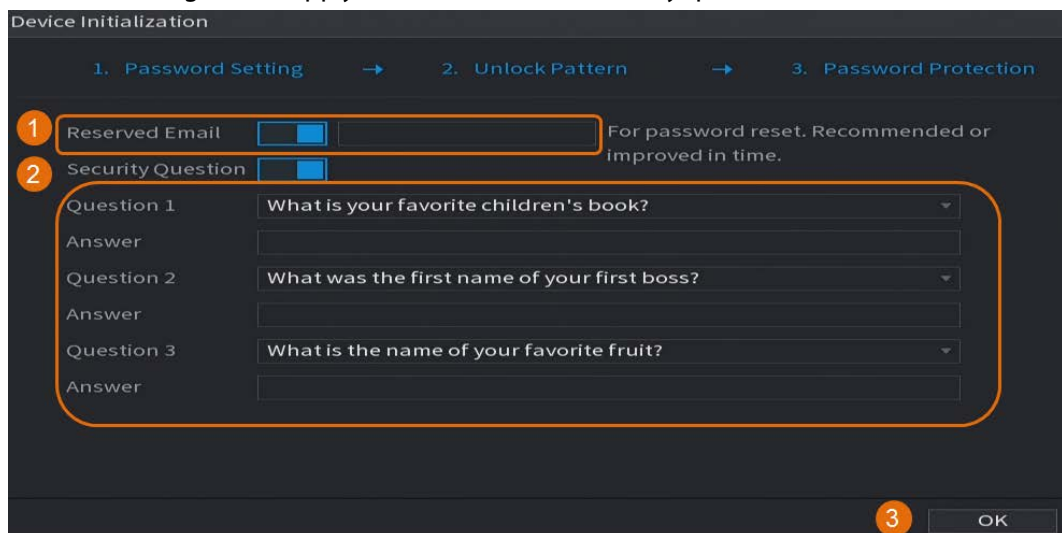

**Step 9** Click **OK**.

## 1.3 Configuring Network

You can configure the basic network settings such as net mode, IP version, and IP address for the NVR.

**Step 1** Select **Main Menu > NETWORK > TCP/IP**.

**Step 2** Configure parameters.




You can also configure network parameters in the Startup Wizard.

Figure 1-6 TCP/IP

The screenshot shows a network configuration window titled 'NETWORK'. On the left is a sidebar with various network settings: TCP/IP (selected), Port, Wi-Fi, 3G/4G, DDNS, UPnP, Email, SNMP, Multicast, Alarm Center, Register, Switch, and P2P. The main area displays the 'TCP/IP' configuration. At the top, there's a table with columns: NIC Name, IP Address, Network..., NIC Member, Modify, and Unbind. The table contains one entry: NIC1, 192.168.1.100, Single NIC, 1. Below the table, the configuration fields are: IP Address (192.168.1.100), Default Gateway (192.168.1.1), MTU: 1500, MAC Address (00:00:00:00:00:00), Subnet Mask (255.255.255.0), and Mode: Static. There are also fields for IP Version (set to IPv4), Preferred DNS, Alternate DNS, Default Card (NIC1), and a Virtual Host checkbox (checked). At the bottom, there are buttons for 'Test', 'Apply', and 'Back'.

Table 1-2 TCP/IP parameters

Parameter	Description
IP Version	In the <b>IP Version</b> list, you can select <b>IPv4</b> or <b>IPv6</b> . Both versions are supported for access.
MAC Address	Displays the MAC address of the NVR.
DHCP	Enable the DHCP function. The IP address, subnet mask and default gateway are not available for configuration once DHCP is enabled. <ul style="list-style-type: none"><li>• If DHCP is effective, the obtained information will be displayed in the <b>IP Address</b>, <b>Subnet Mask</b> and <b>Default Gateway</b>. If not, all values show 0.0.0.0.</li><li>• If PPPoE connection is successful, the IP address, subnet mask, default gateway, and DHCP are not available for configuration.</li></ul>
IP Address	Enter the IP address and configure the corresponding subnet mask and default gateway.  IP address and default gateway must be in the same network segment.
Subnet Mask	
Default Gateway	
Preferred DNS	Enter the IP address of DNS.
Alternate DNS	Enter the IP address of alternate DNS.

Parameter	Description
MTU	<p>Enter a value for network card. The value ranges from 1280 byte to 1500 byte. The default is 1500.</p> <p>The suggested MTU values are as below.</p> <ul style="list-style-type: none"> <li>• 1500: The biggest value of Ethernet information package. This value is typically selected if there is no PPPoE or VPN connection, and it is also the default value of some routers, network adapters and switches.</li> <li>• 1492: Optimized value for PPPoE.</li> <li>• 1468: Optimized value for DHCP.</li> <li>• 1450: Optimized value for VPN.</li> </ul>
Test	Click <b>Test</b> to test if the entered IP address and gateway are interworking.

Step 3 Click **OK**.

## 1.4 Adding IP Camera

You can add an IP camera by search result or by manually entering IP information.



Cameras you want to add must be in the same network with the NVR.

### 1.4.1 Initializing IP Camera

The topic shows how to initialize new cameras or the cameras after restoring factory defaults.

#### Background Information

The IP camera shall be initialized before connecting to an NVR, otherwise the connection will fail. The initialization will change IP camera's login password and IP address.




When connect a camera to the NVR through PoE port, the NVR will automatically initialize the camera. And the camera adopts the password and email information of the NVR by default.

#### Procedure

Step 1 Select **Main Menu > Camera > Camera List > Add Camera**.


Step 2 Enable **Uninitialized**, and then click **Search Device**.

Figure 1-7 Search uninitialized device

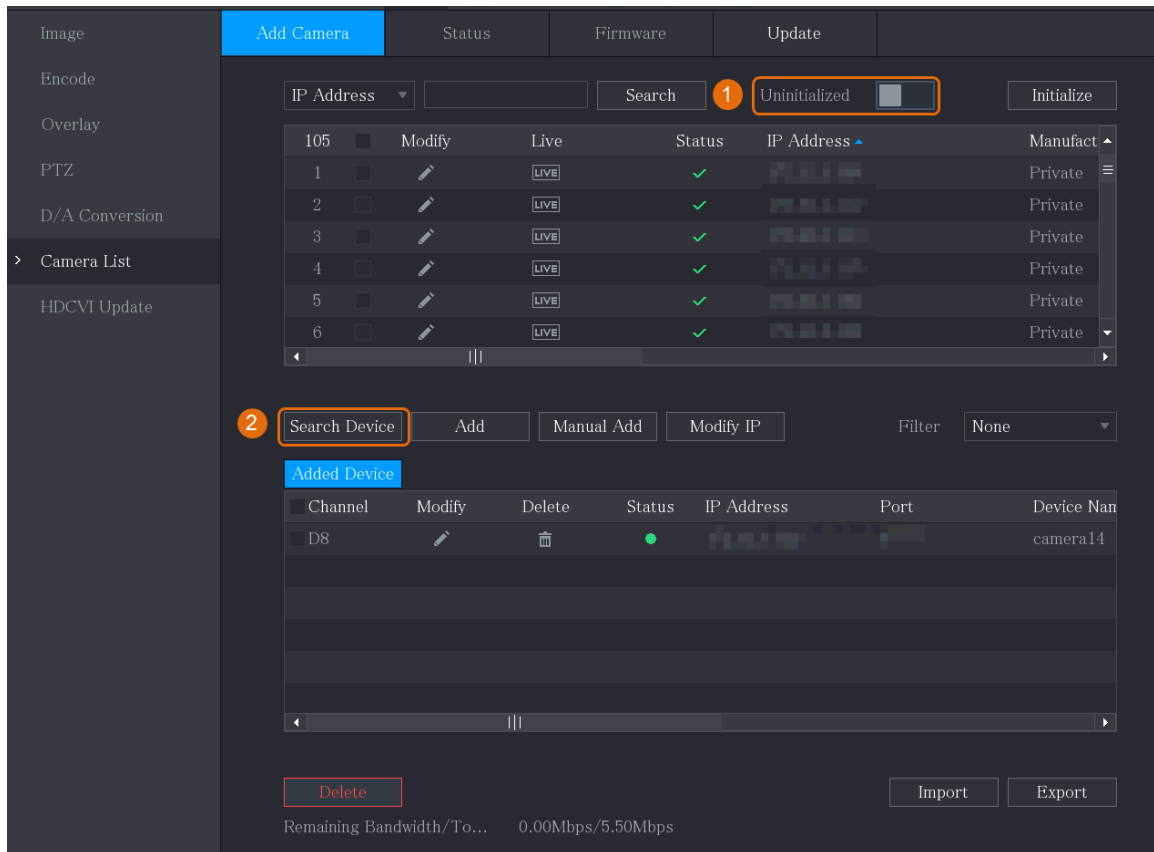

**Step 3** Select the camera to be initialized and then click **Initialize**.

Figure 1-8 Initialize the camera

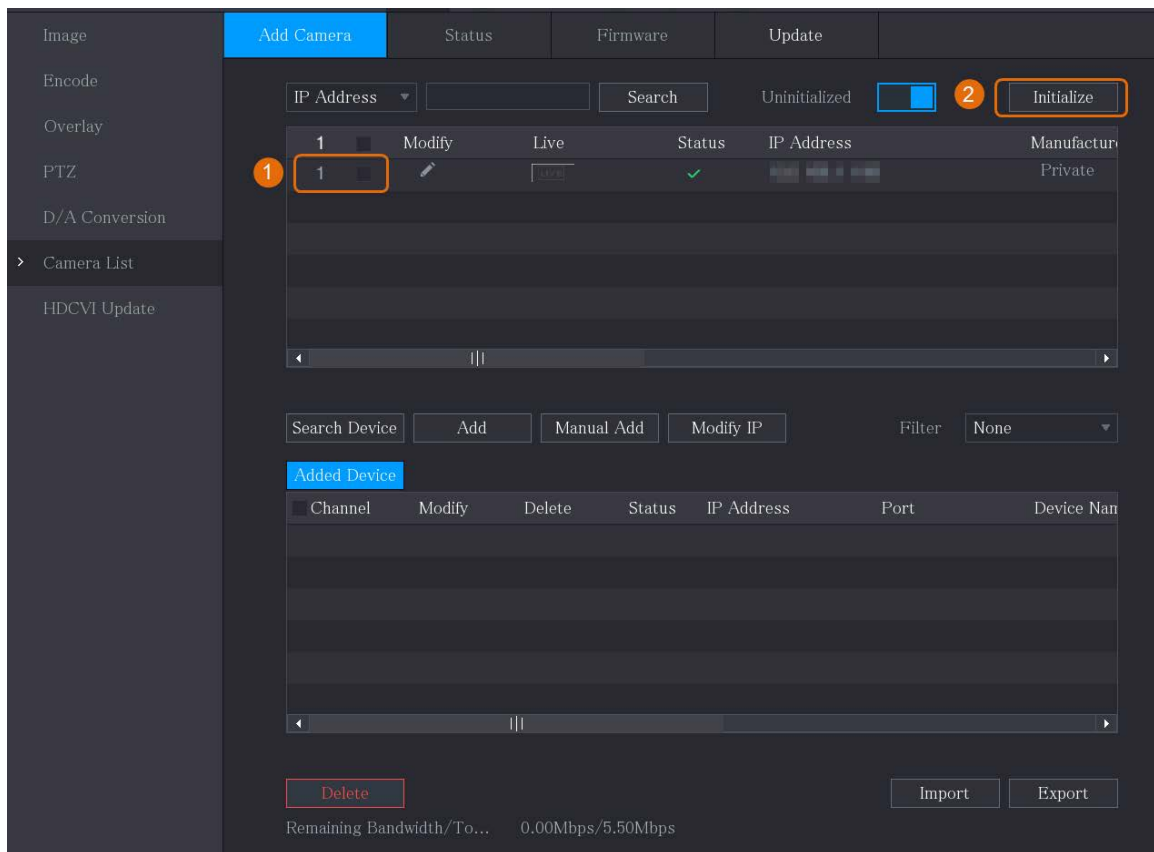

**Step 4** Apply password and email information to the IP camera.

- Use the NVR's settings.

1. Select **Using current device password and email info..**



This check box is selected by default.

Figure 1-9 Apply device settings

2. Click **Next**.

- Manually set password and email information.
  1. Cancel **Using current device password and email info..**

Figure 1-10 Set password

2. Set password.

Table 1-3 Password

Parameter	Description
User	The default value is <b>admin</b> that cannot be changed.
Password	The new password can be set from 8 characters to 32 characters and contains at least two types from numbers, letters and special characters (excluding "'", '"', ";", ":" and "&").  Enter a strong password according to the password strength bar indication.
Confirm Password	

3. Click **Next**.
4. Enter an email address and click **Next**.

Figure 1-11 Set email information

Step 5 Configure camera IP address.

- Select **DHCP** if there is a DHCP server deployed.
- Select **Static**, and then input IP address, subnet mask, default gateway and incremental value.



Set the incremental value when you need to change IP addresses of multiple cameras at one time. The NVR will incrementally add the value on to the fourth section of the IP address when allocate IP addresses for those cameras.

Figure 1-12 Configure IP address

The screenshot shows a 'NETWORK' configuration window. At the top, it says 'Checked Device No.: 1'. Below this, there are two radio buttons: 'DHCP' (unselected) and 'STATIC' (selected). Under the 'STATIC' option, there are three input fields for 'IP Address', 'Subnet Mask', and 'Default Gateway', each containing placeholder text. To the right of these fields is an 'Incremental Value' field with the number '1'. Below the input fields is a table with two columns: an index and a label. The first row has '1' in the index column and 'IP Address' in the label column. Below this, there are several empty rows. At the bottom of the window, there are three buttons: 'Back', 'Next', and 'Skip'.

1	IP Address
1	

- Step 6 Click **Next**.  
Wait 1–2 minutes for the initialization to complete.
- Step 7 Click **Finished**.

## 1.4.2 Adding IP Camera by Search Result


### Prerequisites

Make sure that the cameras you want to add have already been initialized and connected to the right network.

### Procedure

- Step 1 Select **Main Menu > CAMERA > Camera List > Add Camera**.
- Step 2 Click **Search Device**.

Figure 1-13 Search device

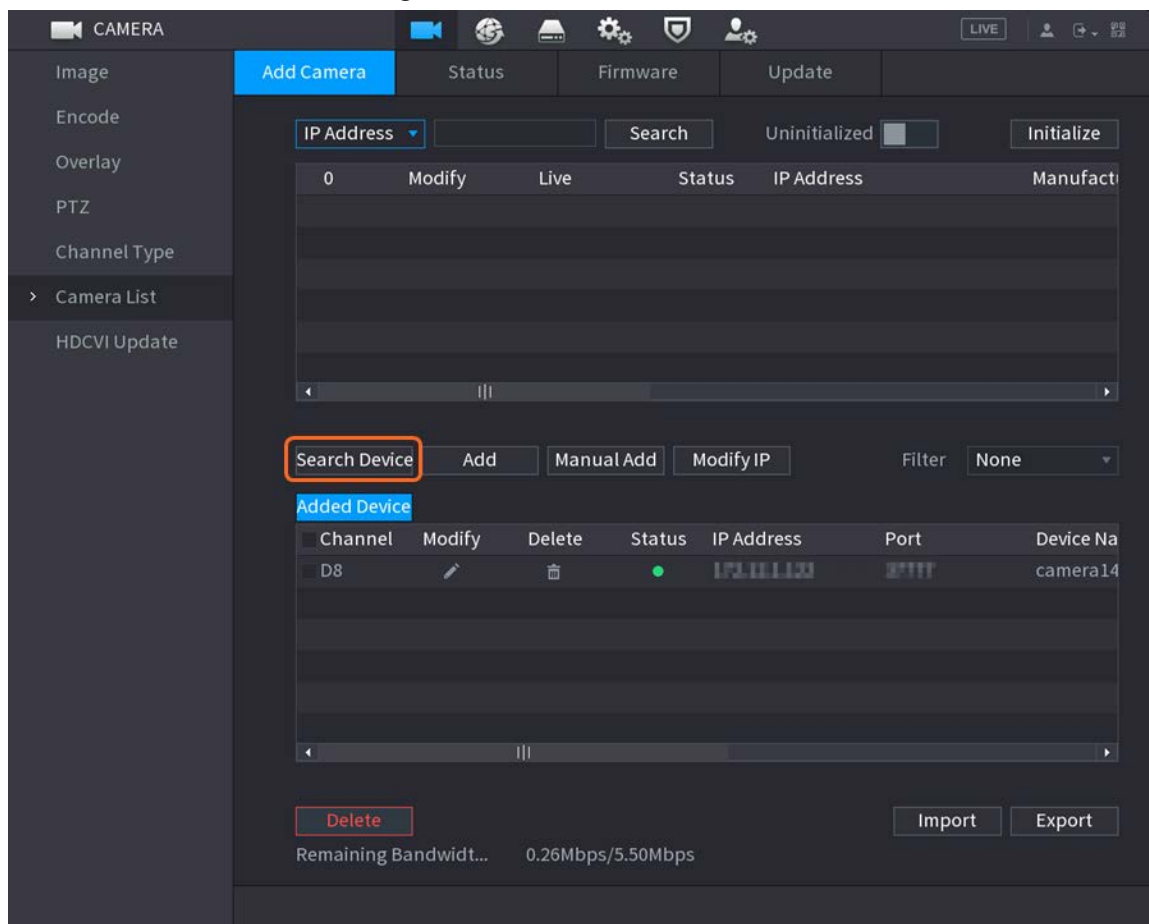

**Step 3** Add IP cameras.

- Add by double-click: Double-click the target camera to add it to **Added Device** list.



You can add only one camera by search result at one time.


- Add by check box: Select the check box of the target camera, and then click **Add** to add it to **Added Device** list.





You can select more than one check box and add cameras in batches.

Figure 1-14 Add IP camera by search result

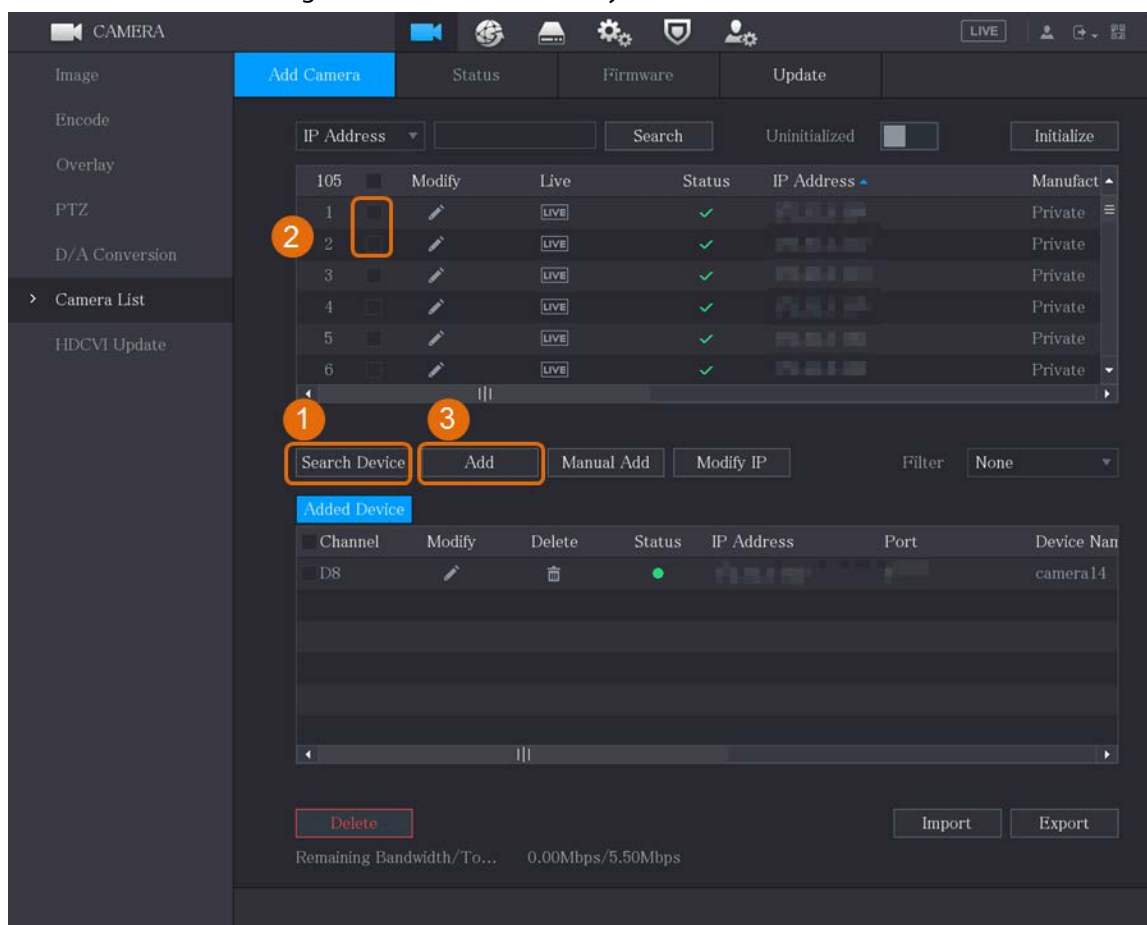

## Result

- If the status of the added camera is green (●), it indicates the camera is properly added to the NVR.
- If the status of the added camera is red (●), it indicates connection failure between the camera and the NVR. Check the parameters of the camera such as password, protocol and channel number, and then try adding it again.

## 1.4.3 Manually Adding IP Camera

You can add an IP camera by IP information at one time.


### Prerequisites

Make sure that the cameras you want to add have already been initialized and connected to the right network.

### Procedure

- Step 1 Select **Main Menu > CAMERA > Camera List > Add Camera**.
- Step 2 Click **Manual Add**.

Figure 1-15 Manual add

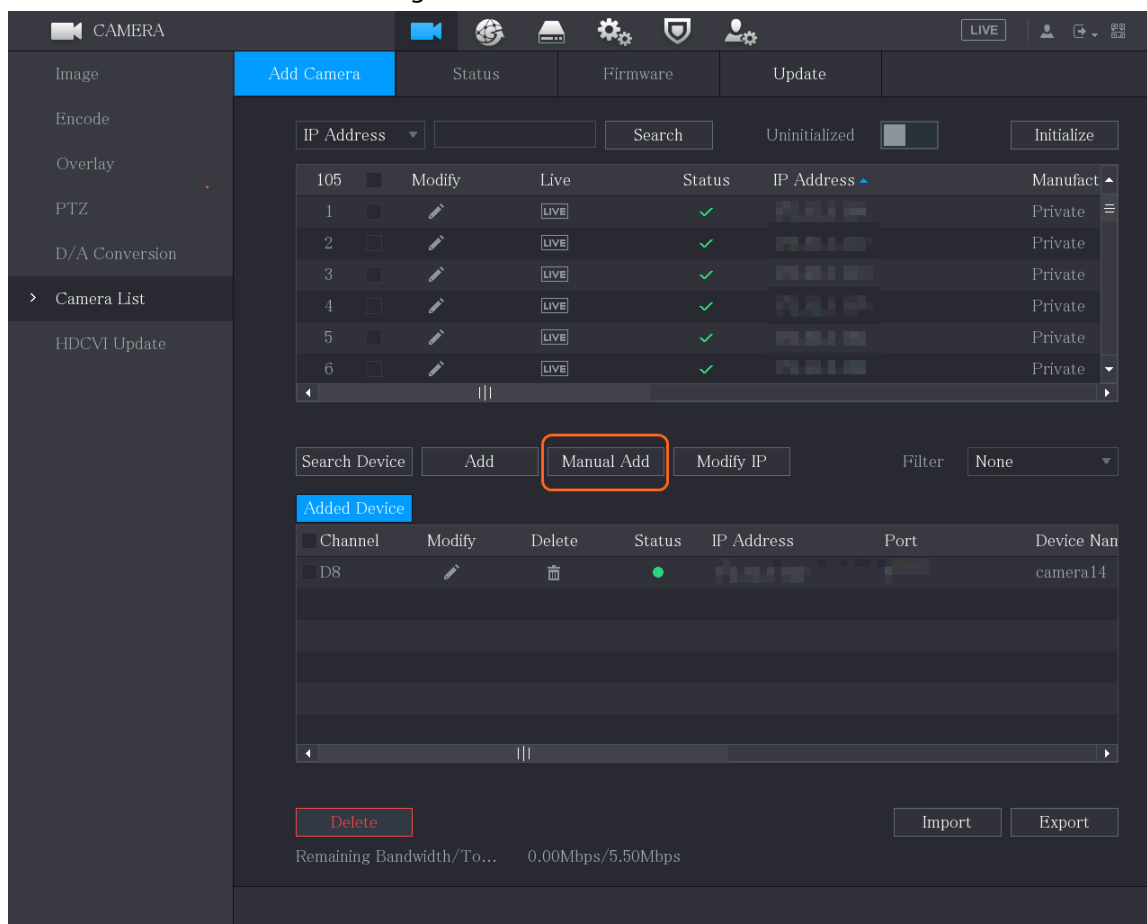

Step 3 In the **Manual Add** dialog box, configure parameters.

Figure 1-16 Configure manual add parameters

Manual Add

Channel: D8

Manufacturer: ONVIF

IP Address:

RTSP Port: Self-adaptive

HTTP Port: 80

Username: admin

Password:

Connect

Total Channels: 1

Setting

Remote CH No.: D1



Decode Strategy: General


Encryption: ☒

☒ Auto ☐ TCP ☐ UDP ☐ MULTICAST

OK Cancel

Table 1-4 Manual add parameters

Parameter	Description
Channel	From the <b>Channel</b> drop-down list, select the channel that you want use on the NVR to connect the remote device.
Manufacturer	From the <b>Manufacturer</b> drop-down list, select the manufacturer of the remote device.
IP Address	In the <b>IP Address</b> field, enter the IP address of the IP camera.  Change the default value (192.168.0.0) which the system cannot connect to.
RTSP Port	The default value is 554. You can change the value as needed.
HTTP Port	The default value is 80. You can change the value as needed.  If you enter another value, for example, 70, and then you should enter 70 after the IP address when logging in to the NVR by browser.
TCP Port	The default value is 37777. You can change the value as needed.
Username	Enter the username of the remote device.
Password	Enter the password of the user for the remote device.
Remote CH No.	Enter the remote channel number of the remote device that you want to add.
Decoder Strategy	In the <b>Decoder Strategy</b> list, select <b>Default</b> , <b>Realtime</b> , or <b>Fluent</b> as needed.

Parameter	Description
Protocol Type	<ul style="list-style-type: none"> <li>• If the IP camera is added through private protocol, select <b>TCP</b>.</li> <li>• If the IP camera is added through ONVIF protocol, the select <b>Auto</b>, <b>TCP</b>, <b>UDP</b>, or <b>MULTICAST</b>.</li> <li>• If the IP camera is added through other manufacturers, select <b>TCP</b> or <b>UDP</b>.</li> </ul>
Encryption	<p>If the IP camera is added through ONVIF protocol, enabling the <b>Encryption</b> check box will provide encryption protection to the data being transmitted.</p> <p></p> <p>To use this function, the HTTPS function must be enabled for the remote IP camera.</p>

Step 4 Click OK.

## 1.5 Configuring Recorded Video Storage Schedule

By default, all cameras continuously record videos 24 hours a day. You can modify the settings as needed.



You can also configure storage schedule in the Startup Wizard.

### Procedure


Step 1 Select **Main Menu > STORAGE > Schedule > Record**.

Figure 1-17 Record schedule




Step 2 Configure parameters.

Table 1-5 Record parameters

Parameter	Description
Channel	From the <b>Channel</b> drop-down list, select the channel to change video recording settings for.
Pre-record	In the <b>Pre-record</b> field, set the time for capturing extra video that occurs before an event to provide context to a recording. Value range: 0 to 30 s.
Redundancy	<p>Allows users to set one of the HDDs as the redundant HDD to save the recorded files into different HDDs. In case of HDD failure, you can find the backup recording in the redundant HDD.</p> <ul style="list-style-type: none"> <li>• Select <b>Main Menu &gt; STORAGE &gt; Disk Manager</b>, and then set a HDD as the redundant HDD.</li> <li>• Select <b>Main Menu &gt; STORAGE &gt; Schedule &gt; Record</b>, and then select the <b>Redundancy</b> check box. <ul style="list-style-type: none"> <li>◇ If the selected channel is not recording, the redundancy function takes effect next time you record no matter you select the check box or not.</li> <li>◇ If the selected channel is recording, the current recorded files will be packed, and then start recording according to the new schedule.</li> </ul> </li> </ul> <p></p> <ul style="list-style-type: none"> <li>• This function is available on select models.</li> <li>• The redundant HDD only backs up the recorded videos but not snapshots.</li> </ul>
Event type	<p>Select the check box of the event types.</p> <ul style="list-style-type: none"> <li>• <b>General:</b> General recording means that the NVR records all videos for the specified time frame. General recording is represented by the color green.</li> <li>• <b>Motion:</b> Motion recording means that the NVR records video only when the motion detection is triggered. Motion recording is represented by the color yellow.</li> <li>• <b>Alarm:</b> Alarm recording means that the NVR records video when an alarm is triggered. Alarm recording is represented by the color red.</li> <li>• <b>M&amp;A:</b> M&amp;A recording combines motion recording and alarm recording. The device records video when the motion detection or any alarm is triggered. M&amp;A recording is represented by the color orange.</li> <li>• <b>Intelligent:</b> Intelligent recording means that the NVR records video when the smart detection is triggered. Intelligent recording is represented by the color blue.</li> <li>• <b>POS:</b> POS recording means that the NVR records video when the POS machine is used to make a payment. POS recording is represented by the color purple.</li> </ul>
Period	<p>Defines a period during which the configured recording setting is active. The system only activates the alarm in the defined period.</p>

Parameter	Description
Copy to	Click <b>Copy to</b> to copy the settings to other channels.

**Step 3** Set the schedule by drawing or editing.

- Drawing: Press and hold the left button of the mouse and drag the mouse to draw the period.
- Editing: Click  to configure the period and then click **OK**.

**Step 4** Click **Apply**.



The configured record schedule can come into effect only when the auto record function is enabled. For details to enable auto record, see User's Manual.

## 1.6 Configuring P2P Settings

You can use the QR code to connect a smart phone to the NVR for management.




Make sure that the NVR has been connected to the Internet, and if yes, in the **Status** box of the P2P interface, it shows **Online**.

### 1.6.1 Enabling P2P Function

You need to enter P2P interface to enable P2P function and scan the QR code to download the smart phone application.

**Step 1** Select **Main Menu > NETWORK > P2P**.

Figure 1-18 P2P

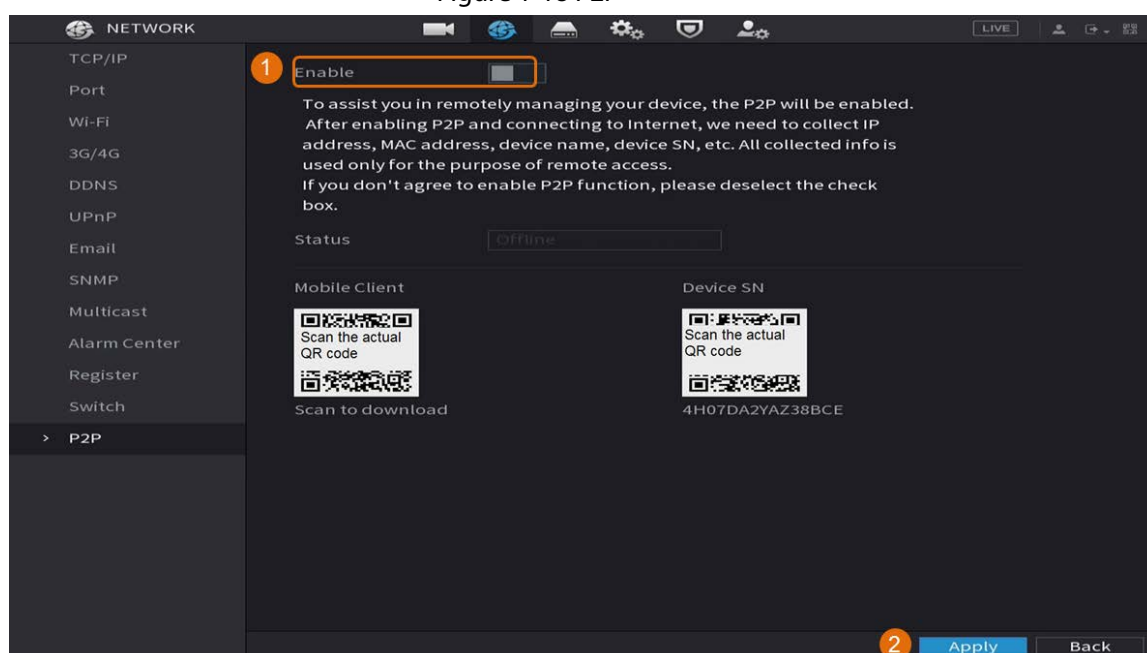

**Step 2** Click **Enable** to enable P2P function.

**Step 3** Click **Apply**


## 1.6.2 Adding the NVR to Smart Phone Client

This topic takes adding the NVR to smart phone client as an example for smart phone management.

Step 1 Open the application and tap .


Step 2 Select **SN/Scan**.

Figure 1-19 Add device

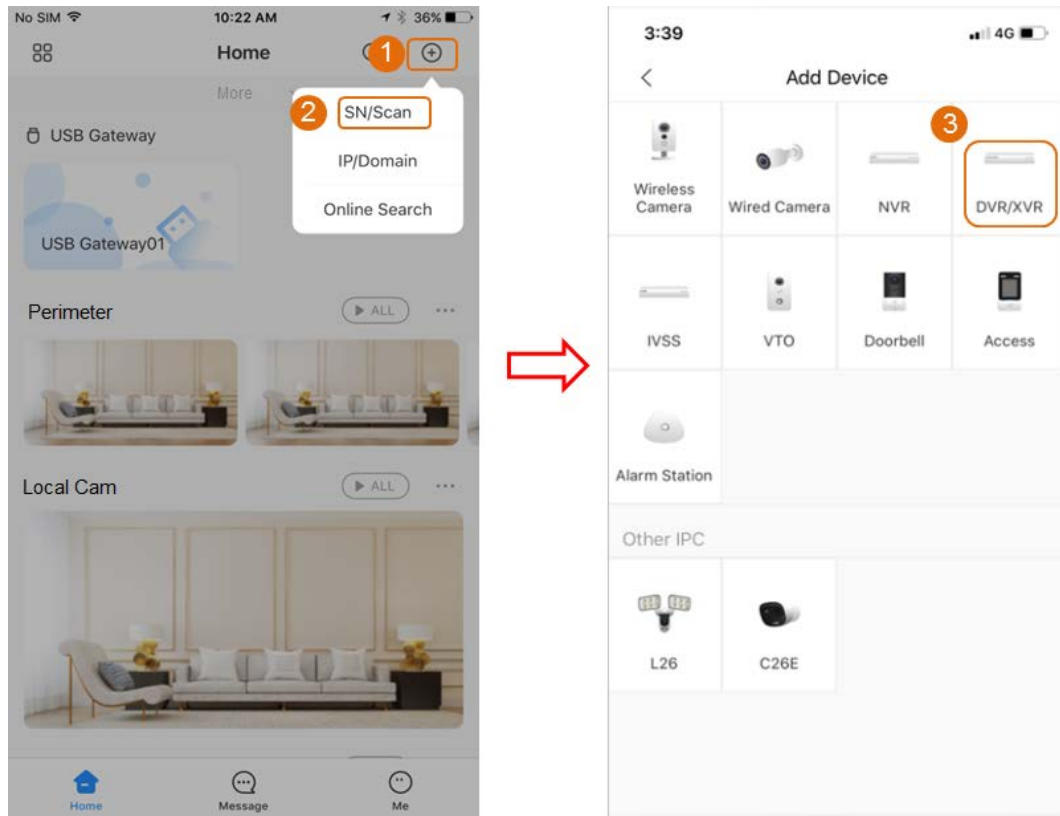

Step 3 Select , enter a name and password for the NVR, and then tap **Save**.

Figure 1-20 Start live view

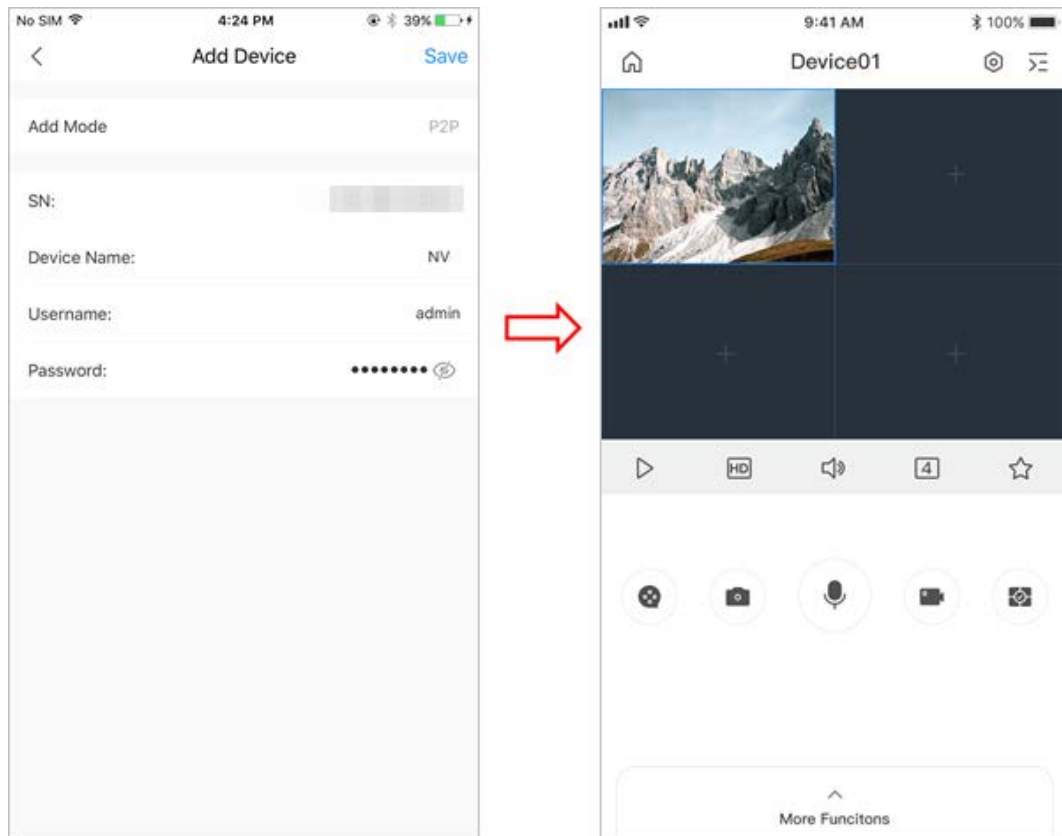

## 1.7 Smart Motion Detection

This topic shows how to configure Smart Motion Detection (SMD).

### Background Information


The Smart Motion Detection (SMD) is an ideal monitoring feature for low populated areas where you want an alert for human or vehicles anywhere in the scene without having to set rules and draw lines.

### Procedure

Step 1 Select **Main Menu > AI > Parameter > SMD**.



Figure 1-21 SMD

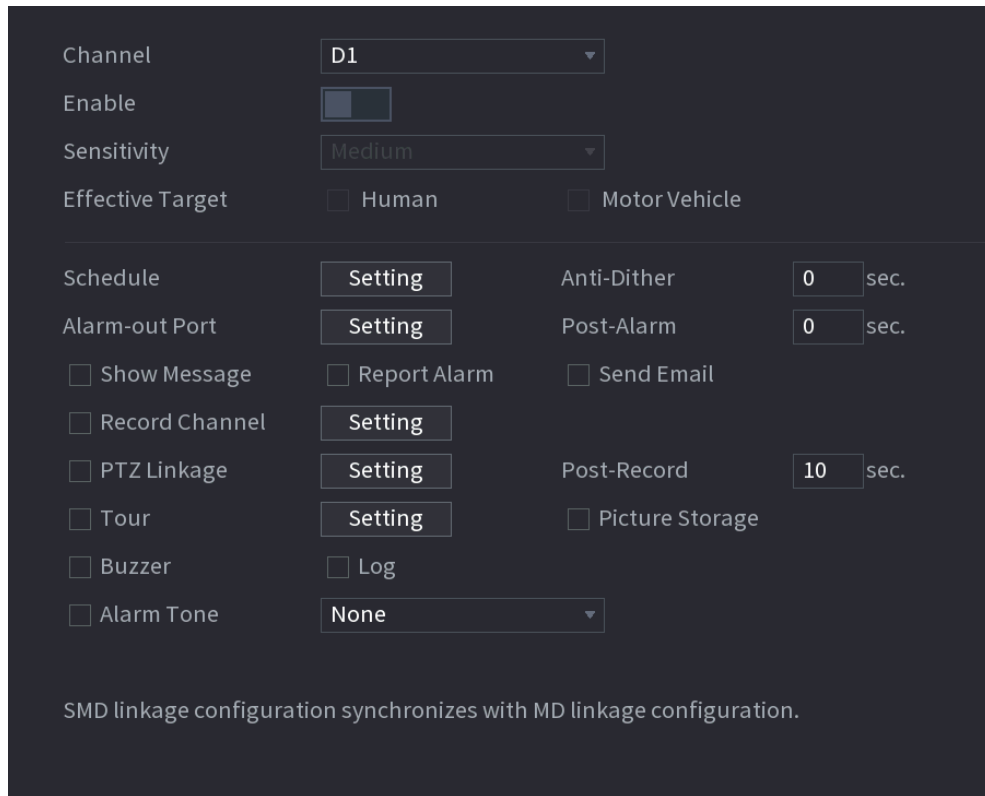

Channel: D1

Enable: ☐

Sensitivity: Medium

Effective Target: ☐ Human ☐ Motor Vehicle

Schedule: Setting

Alarm-out Port: Setting

Anti-Dither: 0 sec.

Post-Alarm: 0 sec.

☐ Show Message ☐ Report Alarm ☐ Send Email

☐ Record Channel: Setting

☐ PTZ Linkage: Setting

Post-Record: 10 sec.

☐ Tour: Setting

☐ Picture Storage


☐ Buzzer ☐ Log







☐ Alarm Tone: None

SMD linkage configuration synchronizes with MD linkage configuration.

**Step 2** Select and enable a channel, and then configure parameters.

Table 1-6

Parameter	Description
Sensitivity	The higher the value is, the easier it is to trigger an alarm. But at the same time, the false alarm may occur. The default value is recommended.
Effective Target	Choose human or motor vehicle or both.
Schedule	Configure the period and in the set time range, the corresponding configuration item will be linked to start the alarm.
Anti-Dither	Indicates the time taken from the end of motion detection to the end of alarm linkage action. The range is 0 to 600 seconds.
Alarm-out Port	The alarm device (such as lights, sirens, etc.) is connected to the alarm output port. When an alarm occurs, the NVR device transmits the alarm information to the alarm device.
Post-Alarm	When the alarm ends, the alarm extended for a period of time. The time range is from 0 seconds to 300 seconds.
Show Message	Check box to enable a pop-up message in your local host PC.
Report Alarm	<p>Select the check box. When an alarm occurs, the NVR device uploads an alarm signal to the network (including the alarm center).</p> <p></p> <ul style="list-style-type: none"> <li>This function is available on select models.</li> <li>You need to set the alarm center first.</li> </ul>

Parameter	Description
Send Email	<p>Select the check box. When an alarm occurs, the NVR device sends an email to the set mailbox to notify the user.</p>  <p>You need to set the email first.</p>
Record Channel	<p>Select the check box and select the needed recording channel (support multiple choices). When an alarm occurs, the NVR device activates the channel for recording.</p>  <p>You need to enable intelligent recording and auto recording first.</p>
Post-Record	<p>At the end of the alarm, the recording extends for a period of time. The time range is from 10 seconds to 300 seconds.</p>
PTZ Linkage	<p>Select the check box and click Setting to select the channel and PTZ action. When an alarm occurs, the NVR device associates the channel to perform the corresponding PTZ action. For example, activate the PTZ in channel one to turn to the preset point X.</p>  <ul style="list-style-type: none"> <li>• Tripwire alarm supports to activate PTZ preset point only.</li> <li>• You need to set the corresponding PTZ actions first.</li> </ul>
Tour	<p>Select the check box and select the channel for tour. When an alarm occurs, the local interface of the NVR device displays the selected channel screen.</p>  <ul style="list-style-type: none"> <li>• You need to set the time interval and mode for tour first.</li> <li>• After the tour is over, the preview interface is restored to the screen split mode before the tour.</li> </ul>
Picture Storage	<p>Select the Snapshot check box to take a snapshot of the selected channel.</p>  <p>To use this function, select <b>Main Menu &gt; CAMERA &gt; Encode &gt; Snapshot</b>, select <b>Event</b> in <b>Type</b> list.</p>
Buzzer	<p>Select the check box to activate the buzzer when an alarm occurs.</p>
Alarm Tone	<p>Check the box and then select the corresponding audio file from the drop-down list. System plays the audio file when the alarm occurs.</p>  <p>You need to add audio file first.</p>

Step 3 Click **Apply**.

## 1.8 Live View

After you logged in, the system goes to multiple-channel live view mode by default. You can view the monitoring video of each channel. Note that the number of displayed window may vary model

to model.

To enter the live view screen from other interfaces, click  at the upper-right of the screen.

Figure 1-22 Live view







## Live View Screen

You can view the live video from the connected cameras through each channel on the screen.

- By default, the system time, channel name and channel number are displayed on each channel window. This setting can be configured by selecting **Main Menu > CAMERA > Overlay > Overlay**.
- The figure at the lower-right corner represents channel number. If the channel position is changed or the channel name is modified, you can recognize the channel number by this figure and then perform the operations such as record query and playback.

For the icons displayed on each channel, see Table 1-7.

Table 1-7 Icon description

Icon	Description
	Video is being recorded.
	Motion detection occurs in the scene.
	Video loss is detected.
	Channel monitoring is locked.

## 1.9 Recording Playback

To play back a recording, you can select **Main Menu > Playback** or right-click on the live view interface and select **Search**.


Figure 1-23 Playback main interface



For details about the instructions on playback main interface, see *User's Manual*.

### Instant Playback

You can play back the previous 5 minutes to 60 minutes of the recorded video.

By clicking , the instant playback interface is displayed. The instant playback has the following features:

- Move the slider to choose the time you want to start playing.
- Play, pause and close playback.
- The information such as channel name and recording status icon are shielded during instant playback and will not display until exited.
- During playback, screen split layout switch is not allowed.

To change the playback time, select **Main Menu > SYSTEM > General > Basic**, in the **Instant Play** box, enter the time you want to play back.

Figure 1-24 Set instant playback time

The screenshot shows a web-based configuration interface for a system. The top navigation bar includes a 'SYSTEM' menu and several icons. Below the navigation bar, there are tabs for 'General', 'Basic', 'Date&Time', and 'Holiday'. The 'Basic' tab is currently selected. The main content area lists various configuration items with their corresponding values or controls:

- Device Name: XVR
- Device No.: 8
- Language: English (dropdown)
- Video Standard: PAL (dropdown)
- Sync Remote Device: ☒ (Include language, format and time zone)
- Instant Playback: 5 min. (highlighted with an orange box)
- Logout Time: 10 min. Non-login User Permission
- CAM Time Sync: ☒
- Interval: 24 hr.
- Navigation Bar: ☒
- Mouse Pointer Speed: A slider between Slow and Fast.

At the bottom right of the configuration area, there are 'Apply' and 'Back' buttons.

## Smart Search Playback

During playback, you can analyze a certain area to find if there was any motion detection event occurred. The system will display the images with motion events of the recorded video.



This function is for some series product only.

To use the Smart Search function, you need to enable the motion detection for the channel by selecting **Main Menu > ALARM > Video Detection > Motion Detection**.

## 2 Logging in to Web

The web provides most of the functions on local GUI. You can log in to web to manage the NVR as needed.




Slight difference might be found on the interfaces of different models. Following figures are for reference only. The actual product shall govern.

### Procedure

- Step 1    Open the browser and enter the IP address of the NVR, and then press Enter key.
- Step 2    Enter the username and password.

Figure 2-1 Login

The image shows a web login interface for an NVR. At the top, the text "NVR" is in large white letters, and "Web Login" is in smaller blue letters. Below this, there are three input fields: a username field with a person icon, a password field with a lock icon and a toggle eye icon, and a dropdown menu currently showing "TCP". At the bottom, there is a large blue button labeled "Login".

- The default administrator account is **admin**. The password is the one that was configured during initial settings. To security your account, it is recommended to keep the password properly and change it regularly.
- Click  to display the password.

- Step 3    Click **Login**.

# Appendix 1 Cybersecurity Recommendations

Cybersecurity is more than just a buzzword: it's something that pertains to every device that is connected to the internet. IP video surveillance is not immune to cyber risks, but taking basic steps toward protecting and strengthening networks and networked appliances will make them less susceptible to attacks. Below are some tips and recommendations on how to create a more secured security system.

## **Mandatory actions to be taken for basic equipment network security:**

### 1. Use Strong Passwords

Please refer to the following suggestions to set passwords:

- The length should not be less than 8 characters;
- Include at least two types of characters; character types include upper and lower case letters, numbers and symbols;
- Do not contain the account name or the account name in reverse order;
- Do not use continuous characters, such as 123, abc, etc.;
- Do not use overlapped characters, such as 111, aaa, etc.;

### 2. Update Firmware and Client Software in Time

- According to the standard procedure in Tech-industry, we recommend to keep your equipment (such as NVR, DVR, IP camera, etc.) firmware up-to-date to ensure the system is equipped with the latest security patches and fixes. When the equipment is connected to the public network, it is recommended to enable the **auto-check for updates** function to obtain timely information of firmware updates released by the manufacturer.
- We suggest that you download and use the latest version of client software.

## **"Nice to have" recommendations to improve your equipment network security:**

### 1. Physical Protection

We suggest that you perform physical protection to equipment, especially storage devices. For example, place the equipment in a special computer room and cabinet, and implement well-done access control permission and key management to prevent unauthorized personnel from carrying out physical contacts such as damaging hardware, unauthorized connection of removable equipment (such as USB flash disk, serial port), etc.

### 2. Change Passwords Regularly

We suggest that you change passwords regularly to reduce the risk of being guessed or cracked.

### 3. Set and Update Passwords Reset Information Timely

The equipment supports password reset function. Please set up related information for password reset in time, including the end user's mailbox and password protection questions. If the information changes, please modify it in time. When setting password protection questions, it is suggested not to use those that can be easily guessed.

### 4. Enable Account Lock

The account lock feature is enabled by default, and we recommend you to keep it on to guarantee the account security. If an attacker attempts to log in with the wrong password several times, the corresponding account and the source IP address will be locked.

### 5. Change Default HTTP and Other Service Ports

We suggest you to change default HTTP and other service ports into any set of numbers between 1024~65535, reducing the risk of outsiders being able to guess which ports you are using.

#### 6. Enable HTTPS

We suggest you to enable HTTPS, so that you visit Web service through a secure communication channel.

#### 7. Enable Allowlist

We suggest you to enable allowlist function to prevent everyone, except those with specified IP addresses, from accessing the system. Therefore, please be sure to add your computer's IP address and the accompanying equipment's IP address to the allowlist.

#### 8. MAC Address Binding

We recommend you to bind the IP and MAC address of the gateway to the equipment, thus reducing the risk of ARP spoofing.

#### 9. Assign Accounts and Privileges Reasonably

According to business and management requirements, reasonably add users and assign a minimum set of permissions to them.

#### 10. Disable Unnecessary Services and Choose Secure Modes

If not needed, it is recommended to turn off some services such as SNMP, SMTP, UPnP, etc., to reduce risks.

If necessary, it is highly recommended that you use safe modes, including but not limited to the following services:

- SNMP: Choose SNMP v3, and set up strong encryption passwords and authentication passwords.
- SMTP: Choose TLS to access mailbox server.
- FTP: Choose SFTP, and set up strong passwords.
- AP hotspot: Choose WPA2-PSK encryption mode, and set up strong passwords.

#### 11. Audio and Video Encrypted Transmission

If your audio and video data contents are very important or sensitive, we recommend that you use encrypted transmission function, to reduce the risk of audio and video data being stolen during transmission.

Reminder: encrypted transmission will cause some loss in transmission efficiency.

#### 12. Secure Auditing

- Check online users: we suggest that you check online users regularly to see if the NVR is logged in without authorization.
- Check equipment log: By viewing the logs, you can know the IP addresses that were used to log in to your devices and their key operations.

#### 13. Network Log

Due to the limited storage capacity of the equipment, the stored log is limited. If you need to save the log for a long time, it is recommended that you enable the network log function to ensure that the critical logs are synchronized to the network log server for tracing.

#### 14. Construct a Safe Network Environment

In order to better ensure the safety of equipment and reduce potential cyber risks, we recommend:

- Disable the port mapping function of the router to avoid direct access to the intranet devices from external network.
- The network should be partitioned and isolated according to the actual network needs. If there are no communication requirements between two sub networks, it is suggested to use VLAN, network GAP and other technologies to partition the network, so as to achieve the



network isolation effect.

- Establish the 802.1x access authentication system to reduce the risk of unauthorized access to private networks.

15. It is recommended that you enable your device's firewall or blocklist and allowlist feature to reduce the risk that your device might be attacked.