


GV-NVR System Lite V2

User's Manual



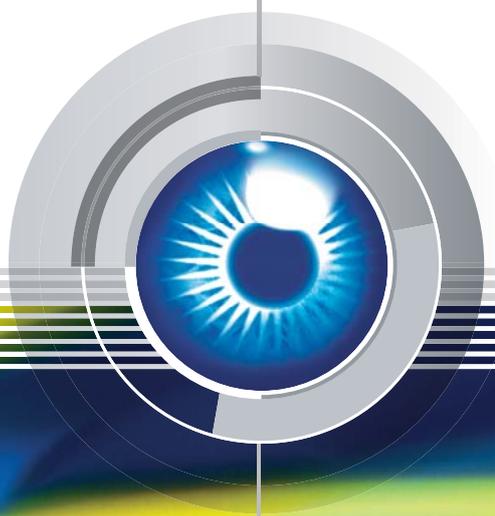

© 2012 GeoVision, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of GeoVision.

Every effort has been made to ensure that the information in this manual is accurate. GeoVision, Inc. makes no expressed or implied warranty of any kind and assumes no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages arising from the use of the information or products contained herein.

GeoVision, Inc.
9F, No. 246, Sec. 1, Neihu Rd.,
Neihu District, Taipei, Taiwan
Tel: +886-2-8797-8377
Fax: +886-2-8797-8335
<http://www.geovision.com.tw>

Trademarks used in this manual: *GeoVision*, the *GeoVision* logo and *GV* series products are trademarks of GeoVision, Inc. *Windows* and *Windows XP* are registered trademarks of Microsoft Corporation.

June 2012

User's Manual for GV-NVR System Lite V2

Welcome to the *GV-NVR System Lite V2 User's Manual*.

The Manual provides an overview of the GV-NVR System Lite V2 and its accessories. It also includes the instructions to guide you through the installation and use of the GV-NVR System Lite V2:

- **Chapter 1, Introduction**
Identifies the GV-NVR System Lite V2's accessories and options.
- **Chapter 2, Overview**
Identifies the GV-NVR System Lite V2's features.
- **Chapter 3, Getting Started**
Provides step-by-step instructions on setting up the GV-NVR System Lite V2.
- **Chapter 4, Advanced Applications**
Introduces how to update firmware to the GV IP cameras.
- **Chapter 5, Mobile Phone Connection**
Introduces how to connect mobile phones to the GV-NVR System Lite V2.
- **Chapter 6, NVR Health Analysis**
Introduces how to collect data to obtain the service of NVR health analysis from GeoVision.
- **Chapter 7, Troubleshooting**
Suggests courses of action if the GV-NVR System Lite V2 doesn't seem to be working properly.

Contents

Safety Instructions	iv
Bundled Software ..	v
Supported IP Camera and Dongle Options ..	vi
Chapter 1 Introduction	1
1.1 Main Features.....	1
1.2 Packing List.....	2
1.3 Options.....	3
Chapter 2 Overview	4
2.1 Front and Left-Side View	4
2.2 Right-Side View	5
Chapter 3 Getting Started	6
3.1 Installing Base Stand	6
3.2 Installing Computer Mount.....	7
3.3 Basic Installation.....	9
3.4 Setting Up IP Cameras	11
3.5 Changing IP Address of GV-NVR System Lite V2.....	18
3.6 Formatting the External Hard Drive.....	22
3.7 Adding the External Hard Drive to the Recording Path	29
3.8 Changing Video Codec and Resolution of GV IP Camera.....	30
3.9 Exiting to Windows	31
3.10 Returning to GV-Desktop.....	32
3.11 Restoring System	33
3.12 Updating GV-NVR System Lite V2.....	35
Chapter 4 Firmware Upgrade for GV IP Cameras	36
4.1 Using the Web Configuration Interface of GV IP Camera.....	37
4.2 Using the IP Device Utility.....	38

Chapter 5 Mobile Phone Connection	40
5.1 Windows PDA.....	43
5.2 Windows Smartphone.....	51
5.3 Symbian Smartphone	55
5.4 BlackBerry Phone	58
5.5 3G Mobile Phone	61
5.6 I-Mode Phone	64
5.7 iPhone, iPod Touch and iPad	66
5.8 Android Smartphone.....	73
Chapter 6 NVR Health Analysis	81
6.1 System Settings.....	81
6.2 System Log.....	83
6.3 Information of Your Computer System.....	84
6.4 Health Analysis Form	86
6.5 Check List.....	86
Chapter 7 Troubleshooting	87
Specifications	91
Warranty Policy.....	93
Warranty Requirements	96
Warranty Form	98

Safety Instructions



Observe these safety instructions to help ensure against injury to yourself and damage to the product.

- **Read** all safety and installation instructions before you operate the product.
- **Do not operate** the product in high humidity areas or expose it to water or moisture.
- **Do not put** the product in an unstable, a slanting or vibrated place.
- **Do not block** any ventilation opening.
- **Do not install** the product near any heat sources such as radiator, heat register or other apparatus that produce heat.
- **Operate** the product using only the type of power source indicated on the marking label.
- **Do not defeat** the safety purpose of the grounding-type plug. A grounding plug has two blades and a third grounding prong. The third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **Do not overload** wall outlets or extension cords, as this may cause fire or electric shock.
- **Do not use** the product when abnormality occurs, such as emitting smoke from the product, smelling burning, being damaged by drop, invasion of foreign objects inside the product, etc. Be always sure to remove the AC adaptor at once and contact your dealer.
- **Do not use** accessories or attachments not recommended by the manufacturer, as they may cause hazards and void the warranty.
- **Do not attempt** to service the product yourself, as removing the casing may expose you to dangerous voltage and void the warranty.

Bundled Software

The bundled software preinstalled in the GV-NVR System Lite V2 (GV-Desktop < **Program** button < **Multicam Installation**) is a **lite version**, specially designed for the GV-NVR System Lite V2 to implement the GV IP cameras.

1. It includes a lite version of video analysis applications, featuring Advanced Motion Detection, Privacy Mask, Scene Change Detection and Counter only.
2. The ViewLog player only supports Single View playback. For Quad View or Multi View playback, you need to additionally install **Remote ViewLog** (GV-Desktop < **Program** button < **Multicam Installation**).

Note: For Counter application, it is recommended to set up only one camera and draw only one line on the camera image to mark the boundary of detection zone to maintain a better CPU performance.

Supported IP Camera and Dongle Options

The Supported IP Camera Combinations

The GV-NVR Lite V2 supports connections to GV IP cameras and third-party IP cameras. You can adopt one of the following combinations:

IP cameras excluding GV Fisheye cameras

- Connect up to 16 GV IP cameras. See **Section A**.
- Connect up to 8 third-party cameras (of 640 x 480 resolution, H.264). See **Section C**.
- Connect up to 6 third-party cameras (of 1280 x 720 resolution, H.264). See **Section C**.
- Connect up to a total of 8 cameras from GV IP cameras and third-party IP cameras (of 640 x 480 resolution, H.264). See **Section A and C**.
- Connect up to a total of 4 cameras from GV IP cameras and third-party IP cameras (of 1280 x 720 resolution, H.264). See **Section A and C**.

IP cameras including GV Fisheye cameras

- Connect one GV Fisheye 1.3 MP camera and up to 15 other GV IP cameras. See **Section A and B**.
- Connect one GV Fisheye 4 MP camera and up to 11 other GV IP cameras. See **Section A and B**.
- Connect one GV Fisheye 5 MP camera and up to 8 other GV IP cameras. See **Section A and B**.
- Connect one GV Fisheye 1.3 MP camera and up to 5 third-party IP cameras (of 640 x 480 resolution, H.264). See **Section B and C**.
- Connect one GV Fisheye 4 MP camera and up to 4 third-party IP cameras (of 640 x 480 resolution, H.264). See **Section B and C**.
- Connect one GV Fisheye 5 MP camera and up to 3 third-party IP cameras (of 640 x 480 resolution, H.264). See **Section B and C**.
- Connect one GV Fisheye 1.3 MP camera with up to 4 third-party IP cameras (of 1280 x 720 resolution, H.264). See **Section B and C**.
- Connect one GV Fisheye 4 MP camera with up to 3 third-party IP cameras (of 1280 x 720 resolution, H.264). See **Section B and C**.
- Connect one GV Fisheye 5 MP camera with up to 2 third-party IP cameras (of 1280 x 720 resolution, H.264). See **Section B and C**.

The number of supported channels is based on the following resolution and codec type:

Section A		Dual Stream Resolution		Max. Frame Rate	Total Frame Rate
		Stream 1 (H.264)	Stream 2 (MPEG4)		
GV IP Camera	GV-PTZ010D-N / GV-SD010 / GV-SD010S NTSC	704 x 480	352 x 240	30 fps	480 fps
	GV-PTZ010D-P / GV-SD010 / GV-SD010S PAL	704 x 576	352 x 288	25 fps	400 fps
	GV-BX140DW / GV-MDR140W / GV-MFD140W	1280 x 720	448 x 252	15 fps	240 fps
	GV-BL110D / GV-BL120D / GV-BL130D / GV-BX110D / GV-BX120D / GV-BX130D / GV-CB120 / GV-FD120D / GV-MDR120 / GV-MFD110D / GV-MFD120 / GV-MFD130 / GV-PT110D / GV-VD120D	1280 x 1024	320 x 256	15 fps	240 fps
	GV-BL220D / GV-BX220D / GV-CB220 / GV-FD220D / GV-MDR220 / GV-MFD220 / GV-SD220 / GV-VD220D	1920 x 1080	448 x 252	10 fps	160 fps
	GV-BL320D / GV-BX320D / GV-FD320D / GV-MDR320 / GV-MFD320 / GV-VD320D	2048 x 1536	320 x 240	10 fps	160 fps
	GV-CR420	2048 x 1944	640 x 480	10 fps	160 fps
	GV-BX520D / GV-MDR520 / GV-MFD520	2560 x 1920	320 x 240	10 fps	160 fps

Section B		Single Stream Resolution (H.264)	Max. Frame Rate	Total Frame Rate
GV Fisheye	GV-FE110 / 111	1280 x 1024 (4:3)	7 fps	21 fps
	GV-FE420 / 421	2048 x 1944 (4:3)	6 fps	6 fps
	GV-FE520 / 521 / GV-FER521	2560 x 1920 (4:3)	6 fps	6 fps
Section C		Single Stream Resolution (H.264)	Max. Frame Rate	Total Frame Rate
Third-Party Camera		640 x 480	30 fps	240 fps
		1280 x 720	15 fps	90 fps

Note:

GV IP cameras

1. For GV IP cameras (excluding GV Fisheye), stream 1 is used for recording and single view, and stream 2 for live viewing in multi divisions.
2. The default resolution for stream 1 is set at its maximum. Several resolution, aspect ratio and codec options are available for each IP camera, except GV-Fisheye cameras.
3. It is highly recommended to set the panel resolution to 1280 x 1024 (default) or lower when connecting to GV Fisheye to get better CPU performance.

Third-party cameras

4. For third-party cameras, be sure the resolution and codec are configured as specified above to achieve the best performance and maximum frame rate. To find the supported third-party cameras, go to http://www.geovision.com.tw/english/4_21.asp.

Frame Rate

5. Total Frame Rate equals to the Max. Frame Rate multiplies the supported channel numbers.
 6. If you record the images, access live view and see the playback simultaneously, the CPU loading will increase massively. Therefore, the frame rates may drop.
-

GV-NVR System Lite V2 Dongle

A dongle is required when connecting to third-party IP cameras.

Dongle Options: 1, 2, 4, 6 or 8 IP channels.

Chapter 1 Introduction

The GV-NVR System Lite V2 is an ultimate upgraded mini NVR system, which you can record video files directly to the internal hard drive. The GV-NVR System Lite V2 supports up to 16 GV IP cameras or 8 third-party IP cameras for networking surveillance, with the plug-and-play function for GV IP cameras to connect to the unit automatically. Plus, with supported HDMI output, you could connect the unit to HDTV for better video quality. The GV-NVR System Lite V2 is a perfect NVR system for small business, retail stores, and home security.

Its four USB ports enable to connect with multiple peripheral devices, such as USB HDD, USB DVD player and etc. Its Gigabit Ethernet function enables high-speed Internet access for seamless Web browsing. Moreover, our VESA mounting solution allows you to mount the ultra-slim unit on the back of a computer monitor.

1.1 Main Features

- Compact and sleek
- Up to 16 channels
- Automatic connection to GV IP cameras
- Support for 3rd party IP cameras of 640 480 or 1280 x 720 resolution with H.264
- All-in-one solution (Live View, Playback, Recording, Backup, CMS)
- H.264 / MJPEG / MPEG4
- Dual video streams
- VGA and HDMI outputs
- 1 TB hard drive
- Video analysis (Advanced Motion Detection, Privacy Mask, Scene Change Detection and Counter)
- Standing mount and VESA mount options
- Pre-installation recovery from the hidden partition
- Direct recording to the internal hard drive
- Low power consumption
- Fisheye camera dewarping function
- Smart phones access
- Multiple (29) languages

1.2 Packing List

The GV-NVR System Lite V2 package includes the following items:

Important: Please keep the original carton and all packing materials for future shipping need.

- GV-NVR System Lite V2 x 1
- AC Power Cord x 1
- Power Adapter x 1
- Standing Mount Kit (1 Base Stand and 1 Base Stand Screw included) x 1
- VESA Monitor Mount Kit (1 Stand Screw and 4 Fix Screws included) x 1
- GV-NVR System Lite V2 Quick Start Guide x 1
- GV-NVR Lite V2 Dongle for third-party IP cameras (optional)

If any of the items are missing or damaged, contact your dealer to arrange a replacement.

1.3 Options

Optional devices can expand your GV-NVR System Lite V2's capabilities and versatility. Contact your dealer for more information.

GV-NVR Lite V2 Dongle	The dongle allows you to connect third-party IP cameras to the GV-NVR System Lite V2. It has the options of 1, 2, 4, 6 and 8 channels.
GV-Data Capture V3 Box	GV-Data Capture V3 Box can integrate the GV-NVR System Lite V2 to an electronic POS system, while GV-Data Capture V3E Box can establish such integration through LAN or Internet.
GV-Hub V2	An easy way for serial port extension. This hub can add 4 RS-232/RS-485 serial ports through the GV-NVR System Lite V2's USB port.
GV-COM V2	This unit can add 1 RS-232/RS-485 serial port through the GV-NVR System Lite V2's USB port.
GV-IO Box (4 Ports)	GV-IO Box 4 provides 4 inputs and 4 relay outputs, and supports both DC and AC output voltages. A USB port is also provided for PC connection.
GV-IO Box (8 Ports)	GV-IO Box 8 provides 8 inputs and 8 relay outputs, and supports both DC and AC output voltages. A USB port is also provided for PC connection.
GV-IO Box (16 Ports)	GV-IO Box 16 provides 16 inputs and 16 relay outputs, and supports both DC and AC output voltages. A USB port is also provided for PC connection.

Chapter 2 Overview

2.1 Front and Left-side View



Figure 2-1

No.	Name	Description
1	Power Button & LED	Turns on the power of GV-NVR System Lite V2. The LED shines when the power is on.
2	HDD Activity LED	The LED shines when the HDD is writing or reading data.
3	VGA Output	Connects the computer display.
4	HDMI Output	Connects the HD TV.
5	USB 2.0 Port	Connects USB devices.
6	Giga LAN Port	Connects the switch or hub.
7	DC Power Input	Connects power supply.
8	Audio output	Connects speakers.
9	Microphone input	Connects to a microphone.

2.2 Right-side View



Figure 2-2

No.	Name	Description
1	USB 3.0 Port	Connects USB devices.
2	USB 2.0 Port	Connects USB devices.

Chapter 3 Getting Started

There are two methods to mount the GV-NVR System Lite V2. One is to use the base stand to support the unit to stand. The other is to use the VESA monitor mount to mount the unit on the back of the computer monitor.

3.1 Installing Base Stand



Figure 3-1

1. Attach the base stand to the GV-NVR System Lite V2.
2. Tighten the base stand screw.

3.2 Installing Computer Mount

1. Using the 4 fix screws, tighten the VESA monitor mount on the back of the computer monitor.

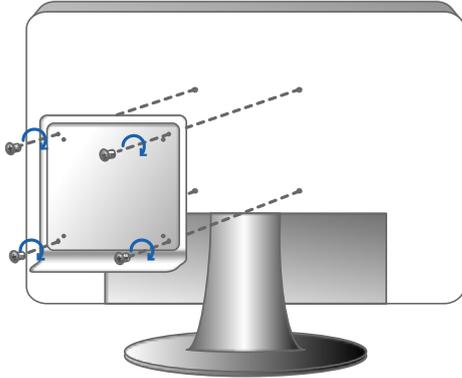


Figure 3-2

2. Peel off the liner from the Velcro.

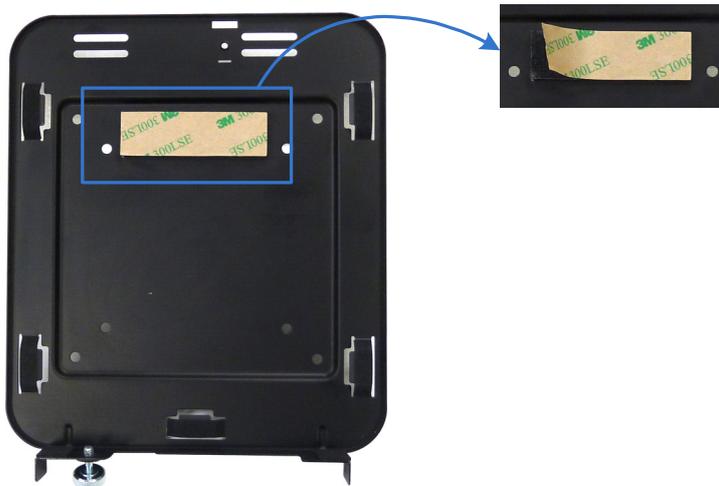


Figure 3-3

3. Attach the GV-NVR System Lite V2 to the VESA monitor mount and tighten the stand screw.



Figure 3-4

Note: For the mounting method of computer monitor, make sure your monitor is VESA compliant. The supplied VESA monitor mount features the two mounting-hole patterns of 3" x 3" and 4" x 4".

3.3 Basic Installation

This section describes basic installation required to program and operate the GV-NVR System Lite V2.



Figure 3-5

1. Connect the speakers to the GV-NVR System Lite V2.
2. Connect the microphone to the GV-NVR System Lite V2.
3. Optionally connect the GV-USB Dongle for third-party IP cameras' connection.
4. Using the USB cables, connect a keyboard and a mouse to the GV-NVR System Lite V2.
5. There are two ways to connect the monitor to the GV-NVR System Lite V2.
 - Using the VGA cable, connect the computer monitor to the GV-NVR System Lite V2.
 - Using HDMI cable, connect the HDTV to the GV-NVR System Lite V2.
6. Using the RJ-45 cable, connect a switch or a hub to the GV-NVR System Lite V2.
7. Using the supplied power adapter, connect the GV-NVR System Lite V2 to the power outlet.

For automatic setup, connect GV IP cameras under the same LAN with the GV-NVR System Lite V2. After the power is turned on, the GV-NVR System Lite V2 will search for GV IP cameras with the default IP address, ID and password. The GV IP cameras will be displayed on the main screen without any further configuration.

IMPORTANT: For automatic setup, make sure all the devices (GV IP cameras and GV-NVR System Lite V2) are connected under the same LAN before you turn on the power of GV-NVR System Lite V2.

Note: The monitor you use must support screen resolution of 1280 x 1024 and display color of 32 bits. And the HDTV must be capable of Full HD 1080P resolution.

3.4 Setting Up IP Cameras

After you have installed the necessary cables and IP cameras, you are ready to display the channels on GV-NVR System Lite V2.

Setting Up GV IP Cameras

1. Power on the GV-NVR System Lite V2. When GV IP cameras with the default IP address, ID and password are detected, this message appears.



Figure 3-6

For automatic IP assignment

2. To automatically assign IP addresses and display the channels on the main screen, click **OK**. The GV-NVR System Lite V2 will assign unused IP addresses to each of the GV IP camera in the form of 192.168.X.X. The channel will then be displayed on the main screen.

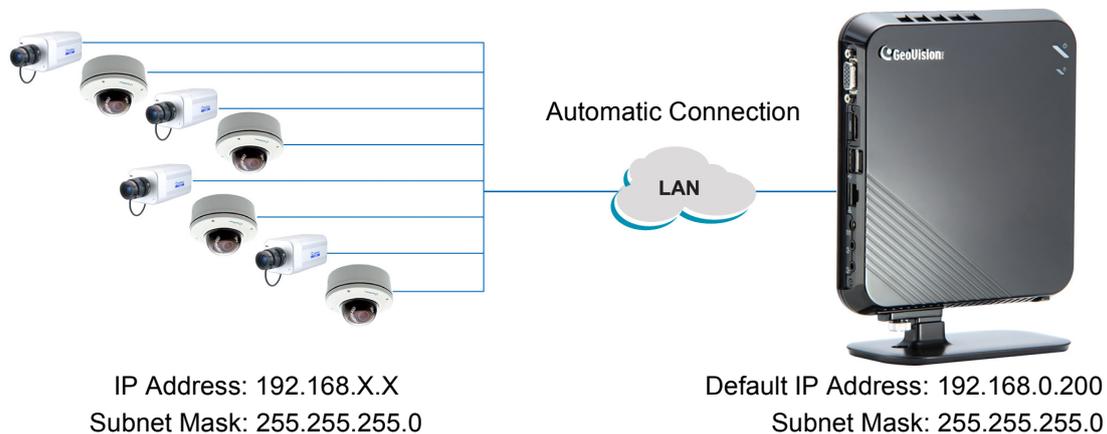


Figure 3-7

Note:

1. This automatic setup is only applicable for GV IP cameras with default IP address (192.168.0.10), and ID (admin) and password (admin).
2. You can change the automatically assigned IP address of a GV IP camera. See step 3 and 4 below.

For manual IP assignment

- To manually assign an IP address and set up the GV IP camera, click **Cancel**. The IP Device Setup window appears.

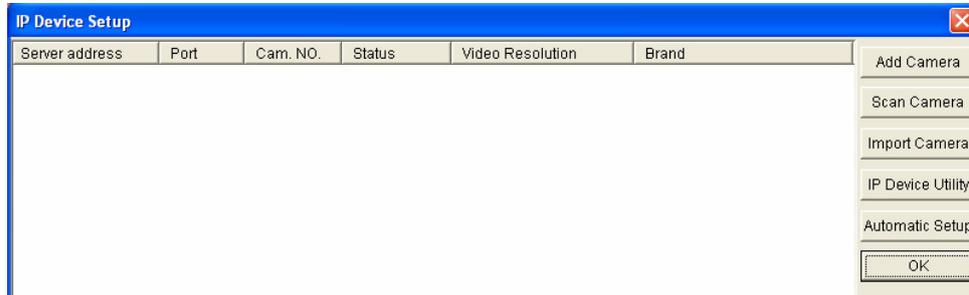


Figure 3-8

- Click the **IP Device Utility** button and click the **General Settings** tab. The GV IP Device Utility window appears.

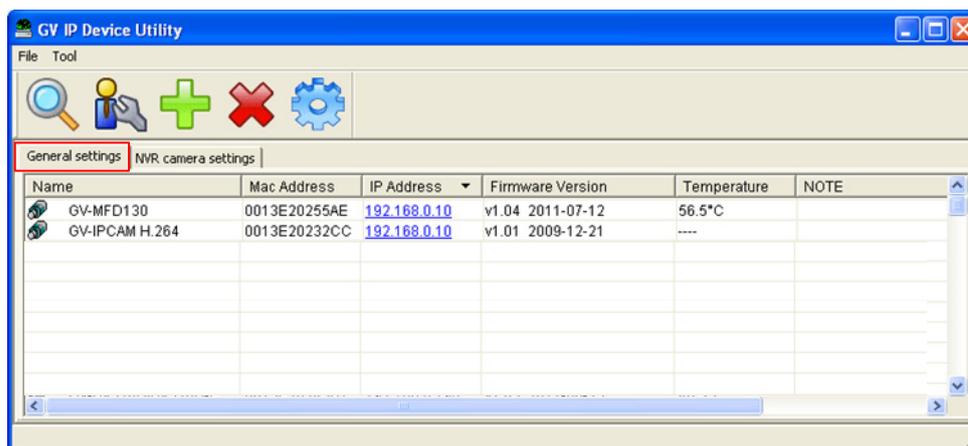


Figure 3-9

5. To modify the IP address, double-click a GV IP camera. This window appears.

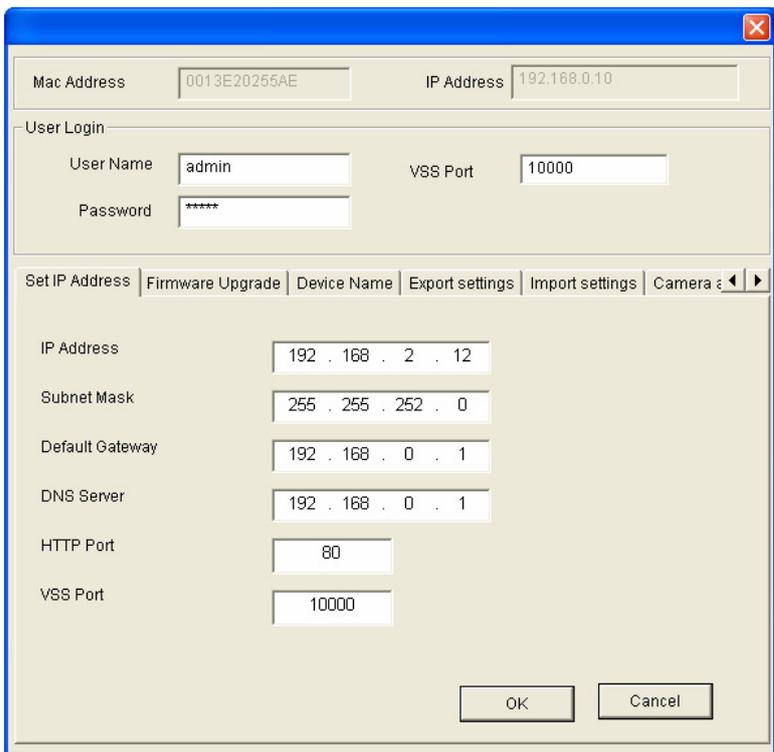


Figure 3-10

6. Type the default user name (admin), default password (admin) and the new IP information.
7. Click **OK**. The new IP address will be updated to the camera.
8. To modify the IP addresses of other GV IP cameras, repeat steps 5 to 7.
9. On the GV IP Device Utility window (Figure 3-9), click the **NVR camera settings** tab. This dialog box appears.

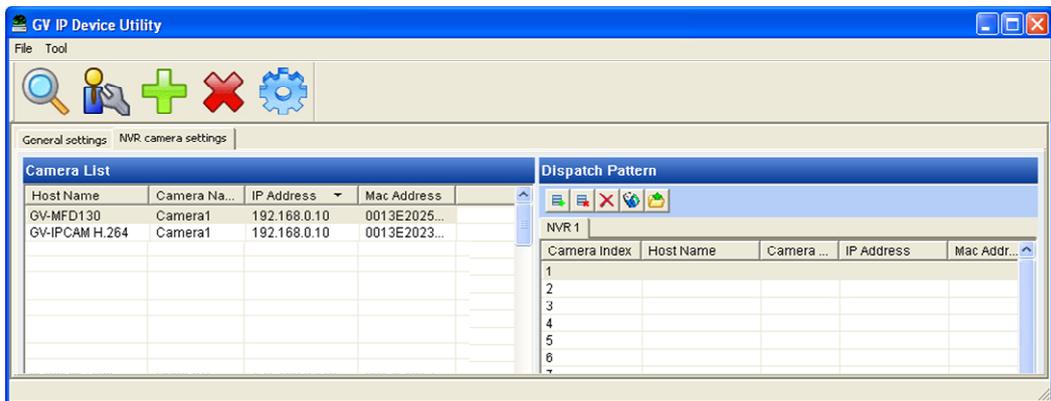


Figure 3-11

10. Click and drag the GV IP cameras from the **Camera List** to the **Dispatch Pattern** column. The camera index represents the display channel number.
11. Click the **Export** button  to export the list of GV IP cameras.

12. On the GV Device Setup window (Figure 3-8), click the **Import Camera** button. A confirmation dialog box appears.



Figure 3-12

13. Click **Yes**. The GV IP cameras will be connected to the GV-NVR System Lite V2 shortly.

Note: Alternatively, you can access the GV IP Device Utility as follows: [GV-Desktop < Program button < GV IP Device Utility](#).

Setting Up Third-Party IP Cameras

You can set up IP cameras using the **Scan Camera** function or the **Add Camera** function.

Using the Scan Camera function

1. On the main screen of GV-NVR System Lite V2, click the **Configure** button, select **System Configure**, and click **IP Camera Install**. This dialog box appears.

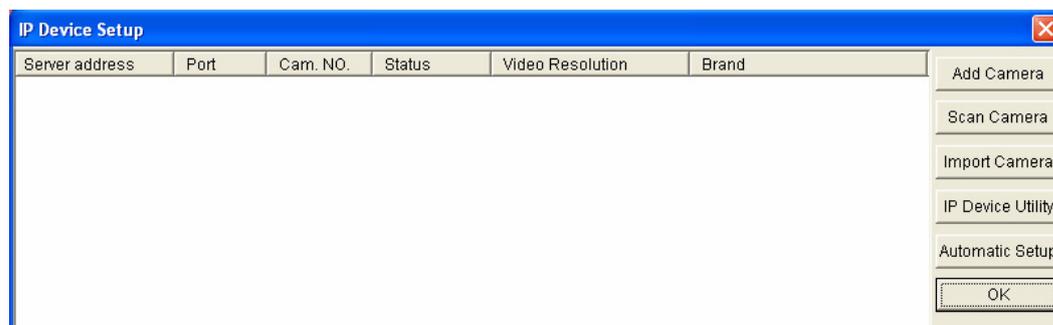


Figure 3-13

- Click the **Scan Camera** button. This dialog box appears.

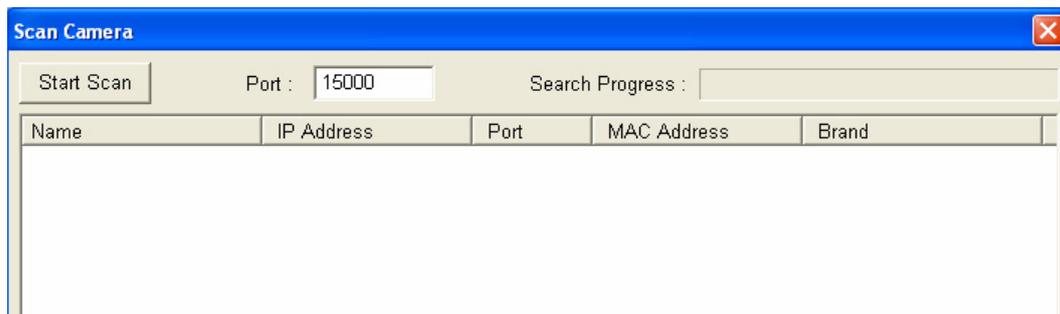


Figure 3-14

- Click the **Start Scan** button. The IP devices under the same LAN with the GV-NVR System Lite V2 will be searched and listed.

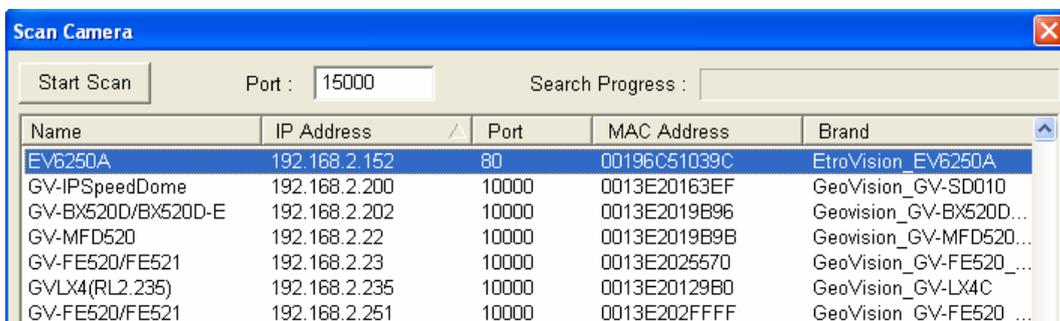


Figure 3-15

- Double-click the IP camera. This dialog box appears.

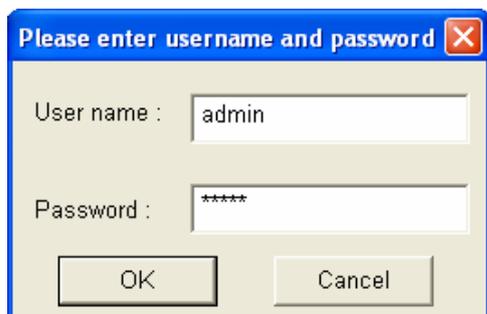


Figure 3-16

5. Type the ID and password of the IP camera and Click **OK**.
6. Click **Query** to detect the IP camera again.

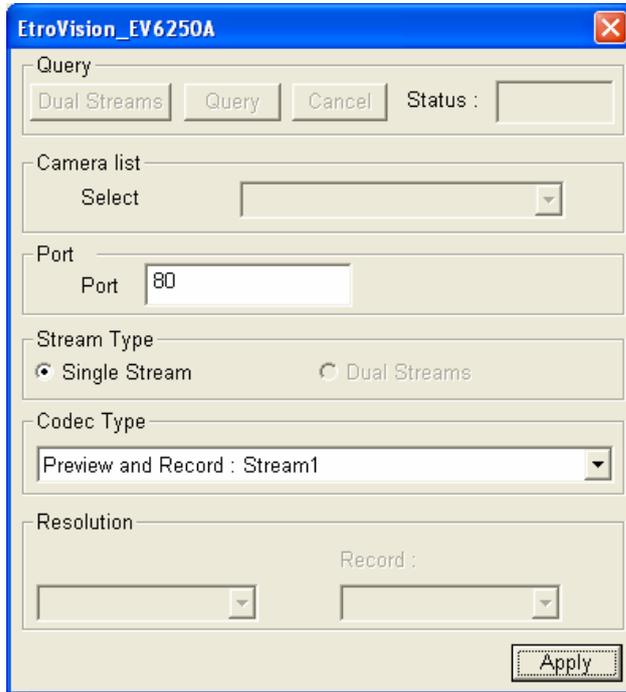


Figure 3-17

7. For third-party IP cameras, the settings accessible on this interface may vary depending on the camera brand.
 - **Port:** Video streaming port number.
 - **Stream Type:** The GV-NVR System Lite V2 only supports a single stream when connecting to a third-party IP camera.
 - **Codec Type:** It is highly recommended to choose H.264 codec type for best performance.
8. Click **Apply**. The IP camera will be added to the IP Device Setup window (Figure 3-13).
9. Click the listed camera, and select **Display position** to map the IP camera to a channel on the GV-NVR System Lite V2.



Figure 3-18

- The Status column now should display “Connected”. Click **OK**. The channel should be displayed on the main screen.

Using the Add Camera function

- On the main screen of GV-NVR Lite V2, click the **Configure** button, select **System Configure**, and click **IP Camera Install**. This dialog box appears.

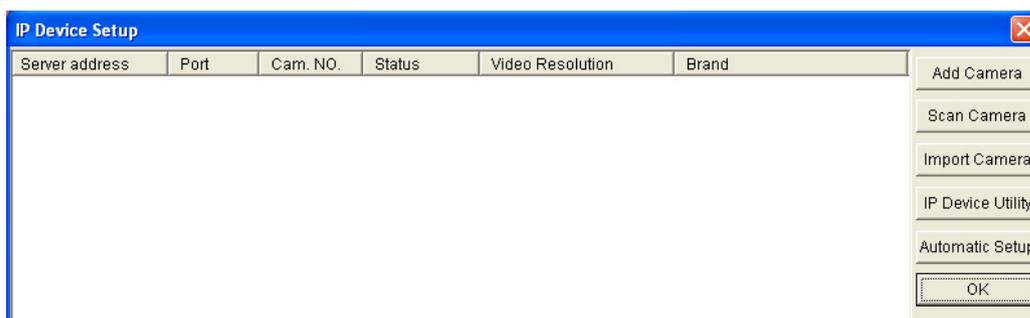


Figure 3-19

- On the IP Device Setup window, click **Add Camera**. This dialog box appears.

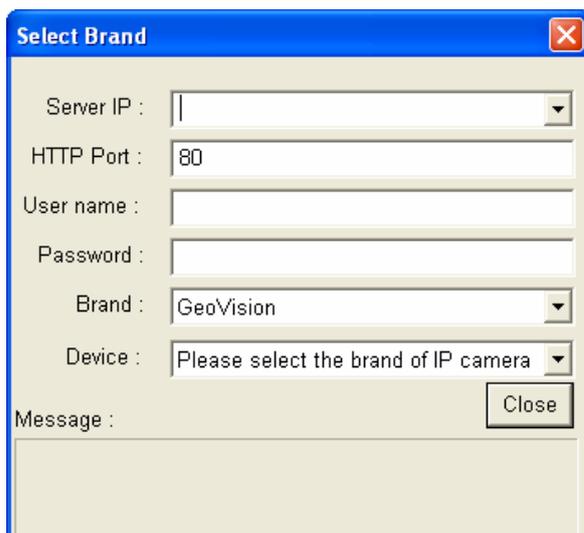


Figure 3-20

- Type the IP address, Username and Password of the camera. Select the camera brand and device from the drop-down lists.
- The GV-NVR System will automatically query for the IP camera, and the status will be indicated as “Standby”. If not, modify the HTTP port and streaming port (Figure 3-19) to match those of the IP camera, and click the **Query** button.
- Follow steps 6 to 9 in the *Using the Scan Camera Function* section to add the IP camera.

3.5 Changing IP Address of GV-NVR System Lite V2

The GV-NVR System Lite V2 has a default IP address of 192.168.0.200 for connecting with GV IP cameras automatically. You can also change the IP address of GV-NVR System Lite V2 by following the steps below.

Note:

1. If you want to install more than one unit of GV-NVR System Lite V2 under the same LAN, you need to change the IP addresses of the first GV-NVR System Lite V2 and its connected GV IP cameras before installing the second GV-NVR System Lite V2 to avoid IP address conflict.
 2. After you change the IP address of GV-NVR System Lite V2, you should also change the IP addresses of GV IP cameras to the same network; otherwise, the GV-NVR System Lite V2 will not detect the cameras for automatic connection.
-

1. On the GV-Desktop, click the **Programs** button, and select **Control Panel**.



Figure 3-21

2. Type the ID and password. The default ID and password are “0000”. The Control Panel window appears. Click the **View network status and tasks** option under the **Network and Internet** setting.

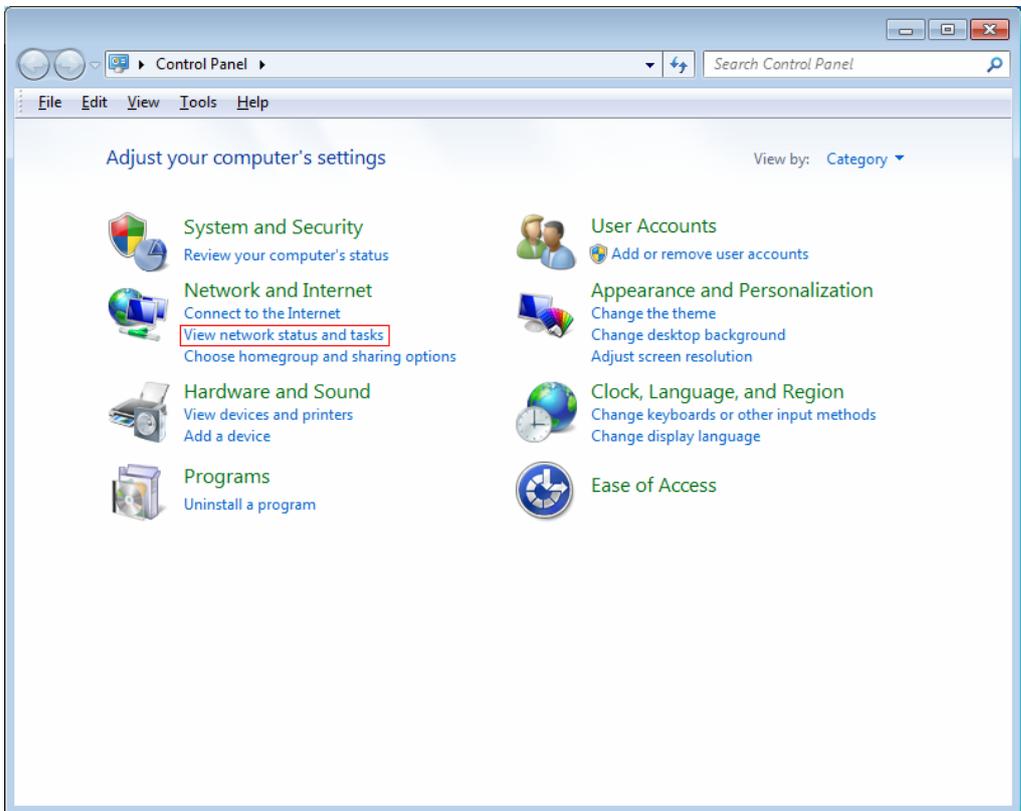


Figure 3-22

3. Click the **Change the adapter settings** option.

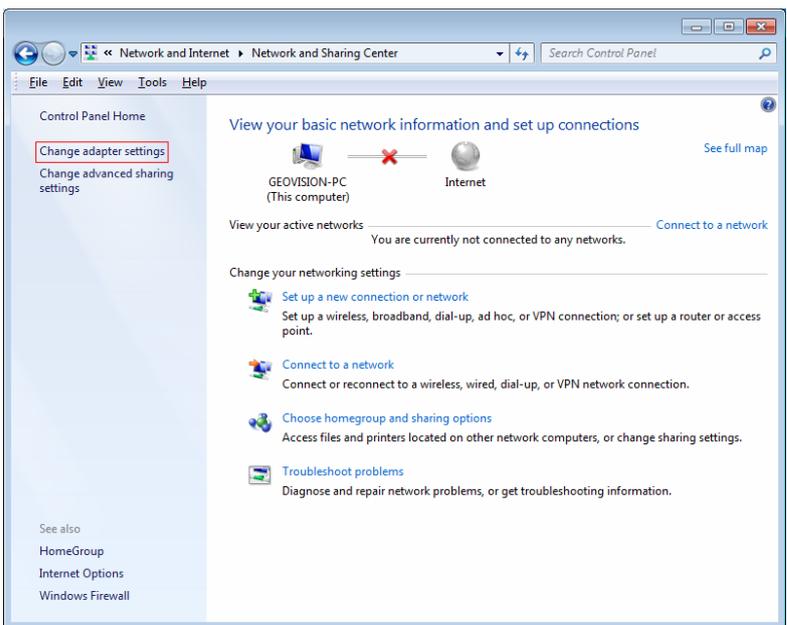


Figure 3-23

4. Right-click **Local Area Connection** and select **Properties**.

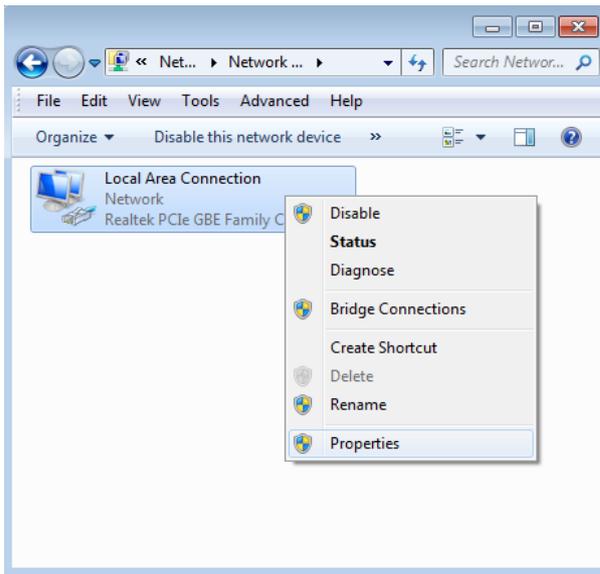


Figure 3-24

5. In the Local Area Connection Properties dialog box, select **Internet Protocol (TCP/IP)** and click **Properties**.

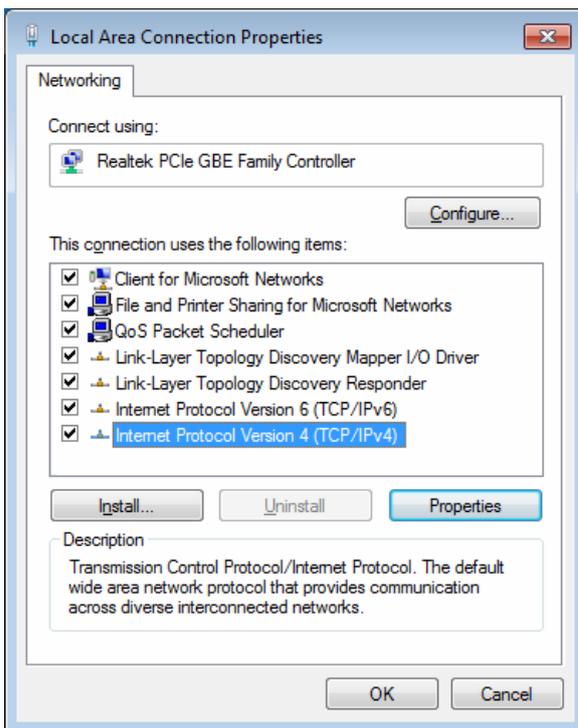


Figure 3-25

6. Select **Use the following IP address**, type the new IP information, and click **OK** to finish the setting.

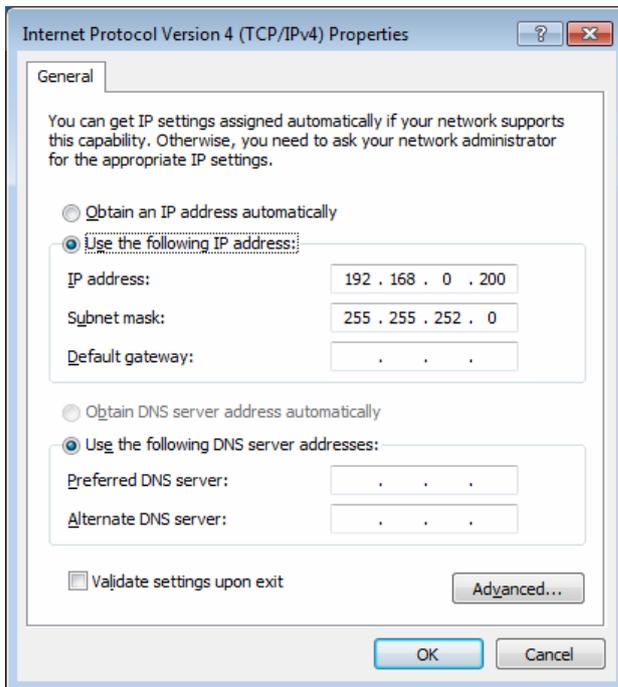


Figure 3-26

3.6 Formatting the External Hard Drive

The GV-NVR System Lite V2 records audio and video to the internal hard drive. You can also use an external hard drive to expand recording space. You must format the hard drive before you can use it.

1. On the GV-Desktop, click the **Programs** button, and select **Disk Management**.

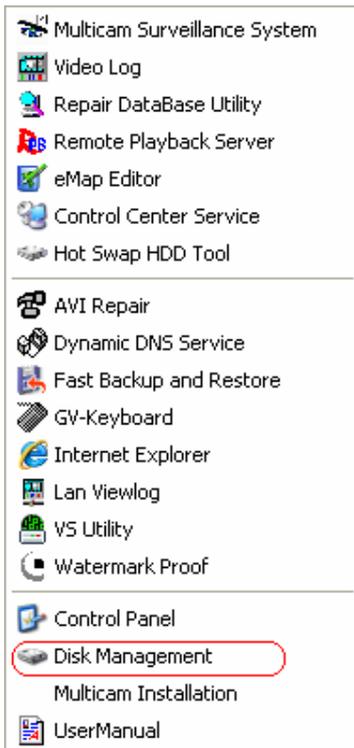


Figure 3-27

2. Type the ID and password in the dialog box. The default ID and password are “0000”.



Figure 3-28

- The Initialize and Convert Disk Wizard appears. Click **Next** to continue.



Figure 3-29

Note: If the Wizard does not appear, you need to initialize the drives one by one. To manually initialize a drive, right-click on the name of the drive and select **Initialize Disk**.

- The screen shows the drives you selected to initialize. Make sure all drives are checked, and click **Next** to continue.



Figure 3-30

- The screen gives you the option to convert the drives from basic to dynamic storage. Leave all drives unchecked, and click **Next** to continue.

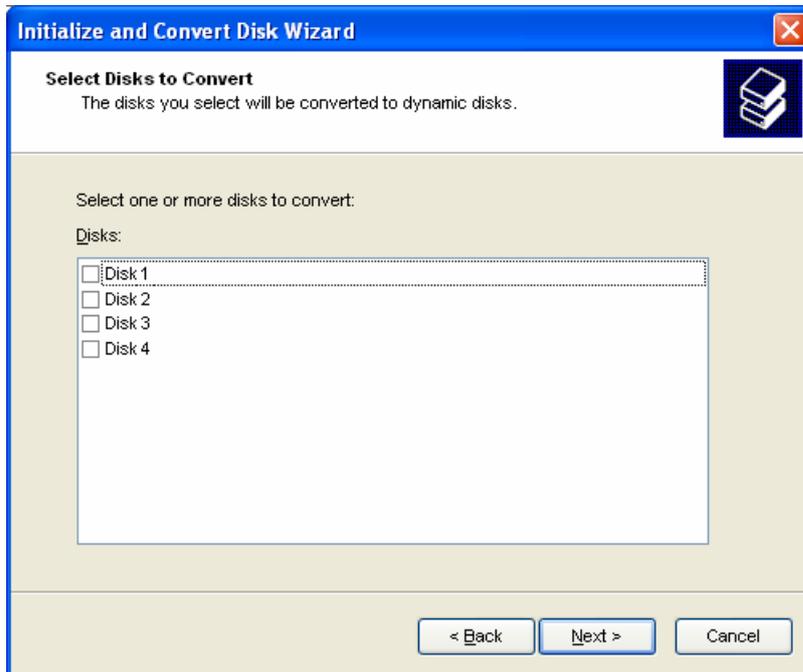


Figure 3-31

- When the initialization is complete, click **Finish** to close the wizard.

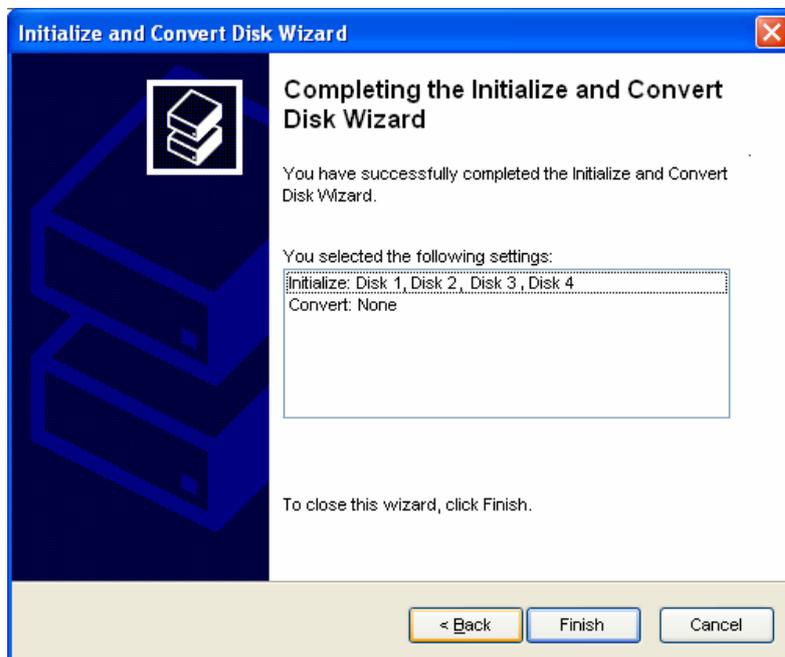


Figure 3-32

7. Right-click in the unallocated space of a new drive, and select **New Partition**.



Figure 3-33

8. The New Partition Wizard appears. Click **Next** to continue.

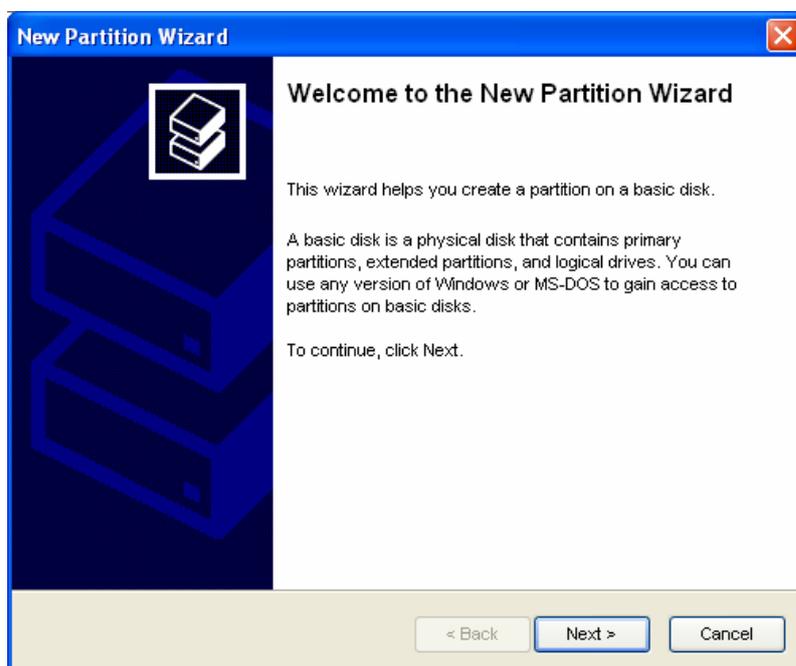


Figure 3-34

9. Select **Primary partition**, and click **Next** to continue.

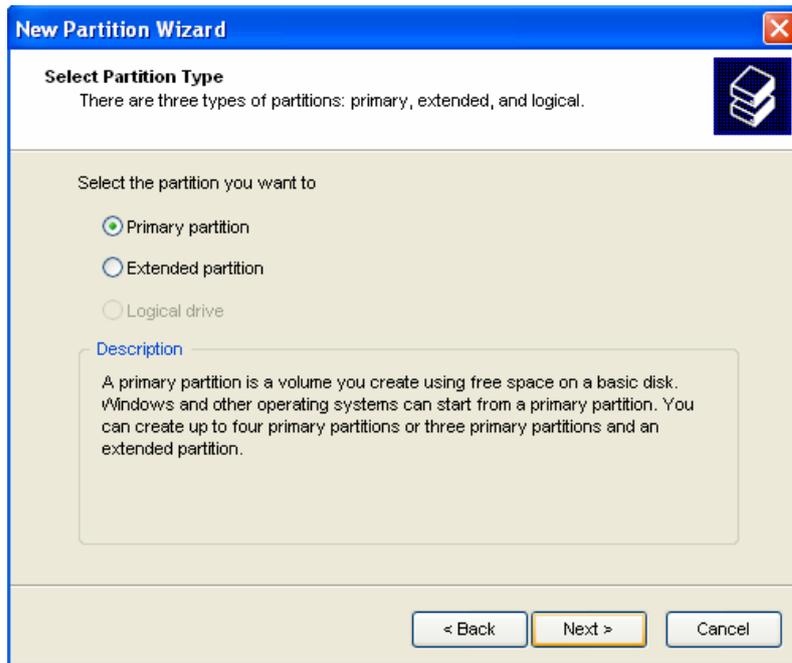


Figure 3-35

10. The default partition size is the same as the maximum disk space. Make changes if necessary. Click **Next** to continue.



Figure 3-36

11. Assign a drive path that is not in use by other devices, and click **Next** to continue.

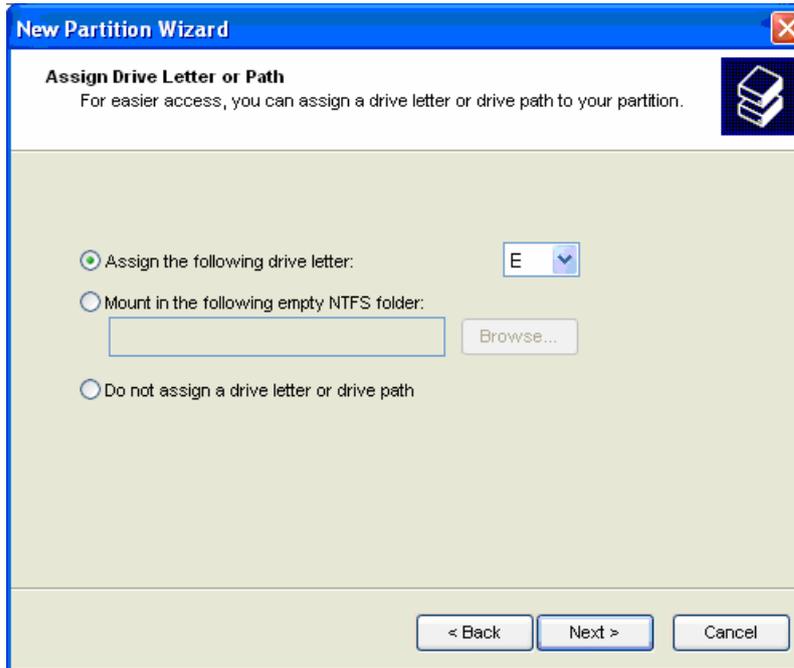


Figure 3-37

Note: The default drive path starts from **E:**.

12. Type a name in the **Volume label** box, ex. HDD1, and click **Next** to continue.

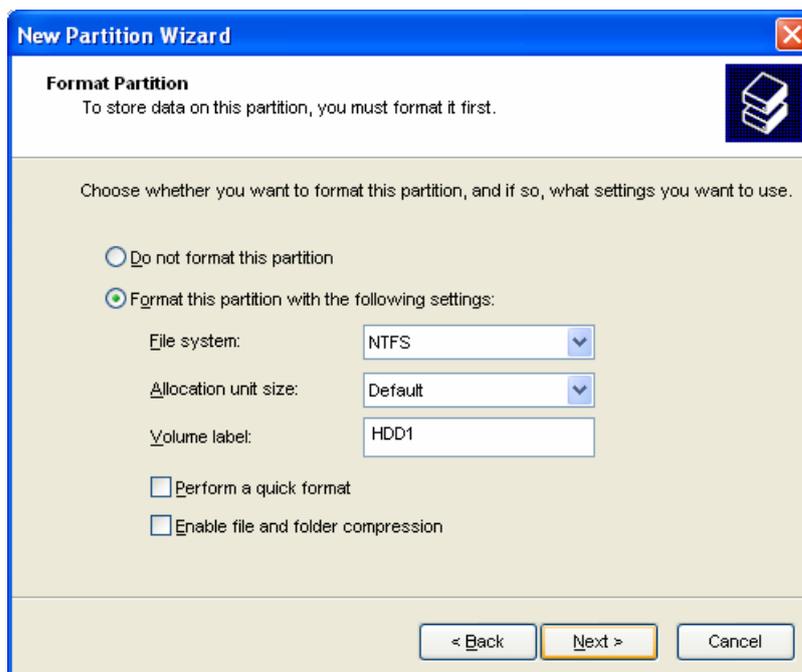


Figure 3-38

13. When the formatting is complete, click **Finish** to close the wizard.

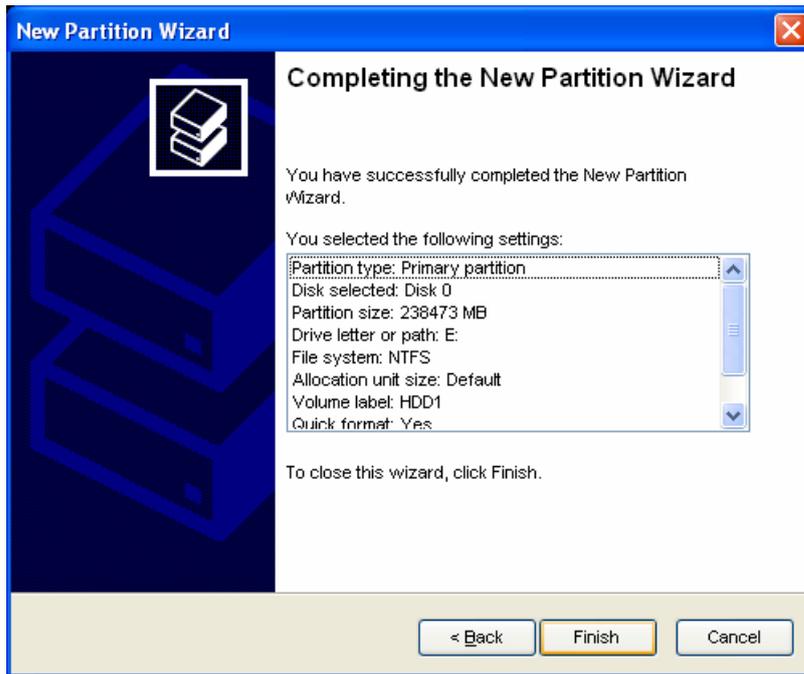


Figure 3-39

14. When the drive is successfully initialized, partitioned, and formatted, its status description should display “Healthy.”

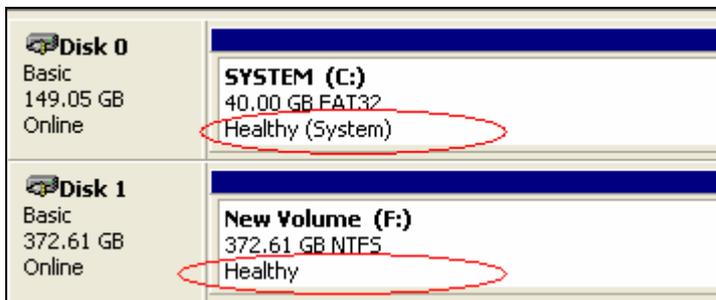


Figure 3-40

3.7 Adding the External Hard Drive to the Recording Path

Before you start recording to the external hard drive, you need to add the formatted external hard drive to the recording path.

1. On the GV-Desktop, click the **Programs** button, and select **Hot Swap HDD Tool**. The MediaMan Tools window appears.



Figure 3-41

2. Right-click the hard drive in the MediaMan Tools window, select **Add for recording**, and then select the storage group from the drop-down list. The Storage 1 is created by default.
3. Click **OK** to automatically configure the hard drive to the recording path.
4. In the MediaMan Tools window, if the hard disk drive is successfully added to store data, its Status field will display “Standby”.

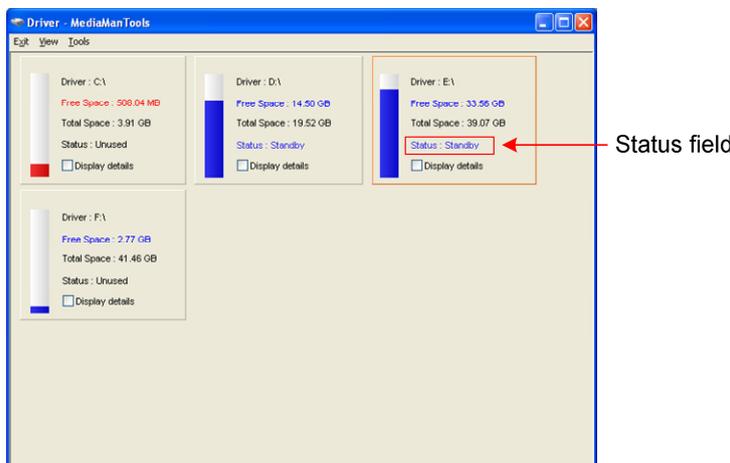


Figure 3-42

5. To add another formatted hard disk drive for storage, repeat the above steps.

3.8 Changing Video Codec and Resolution of GV IP Camera

Several resolution, aspect ratio and codec options are available for GV IP cameras, except GV-Fisheye cameras. Once the video resolution and codec of GV IP cameras are changed on the GV-NVR System Lite V2, these configurations will override those set on the camera's Web interface.

Note: These instructions are only applicable for GV IP cameras.

1. On the main screen, click the **Configure** button, select **System Configure**, and click **IP Camera Install**. This dialog box appears.

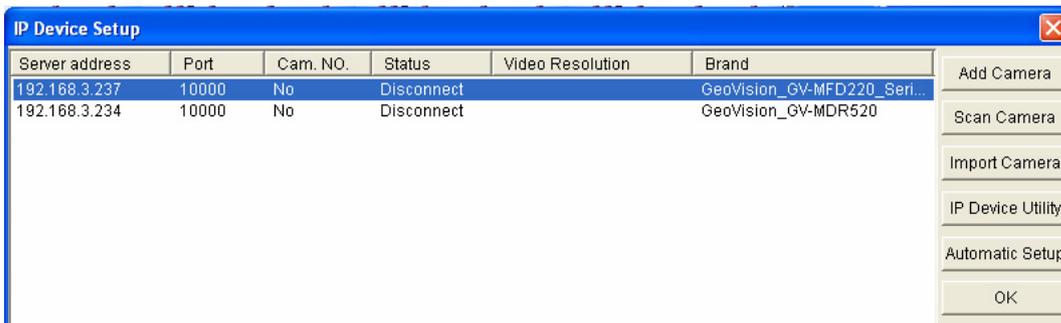


Figure 3-43

2. Click the listed camera, and select **Change live view codec**, **Change record codec** or **Change Resolution** to change the Live View codec or Recording codec and Recording resolution.

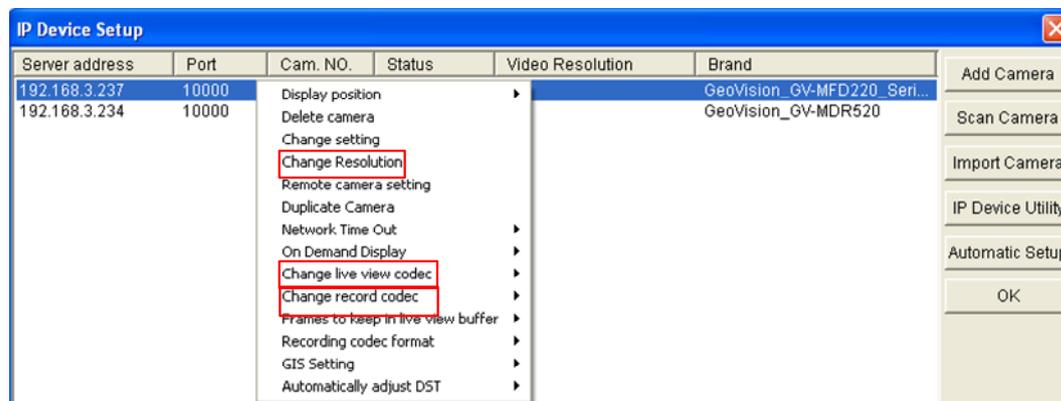


Figure 3-44

3.9 Exiting to Windows

The GV-NVR System Lite V2 is protected by GV-Desktop that is limited to run the selected programs. If you need to exit to Windows desktop, follow these steps.

1. On the GV-Desktop, click the **Settings** button, and type the valid ID and password. The default ID and Password are “0000”. The Settings dialog box appears.
2. Under Desktop Type, select **Windows** from the drop-down list, and click **OK**.
3. Click the **Log Off** button, and enter the valid ID and Password. The Windows desktop appears.



Figure 3-45 The GV-Desktop

3.10 Returning to GV-Desktop

Click the Windows **Start** button, select **All Programs**, click **GV-NVR**, and click **Key Lock Utility**.

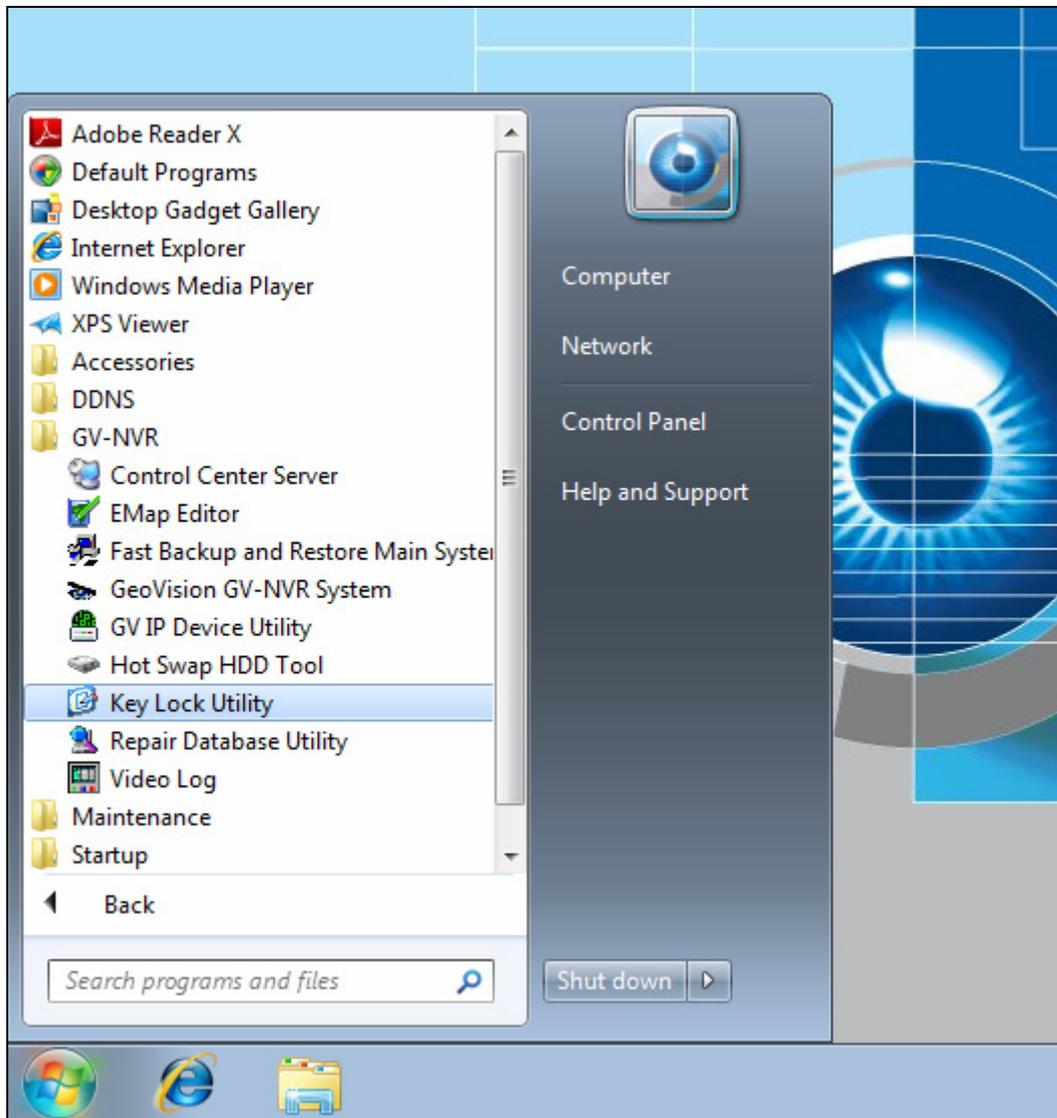


Figure 3-46 Windows 7 desktop

3.11 Restoring System

You can restore preinstalled files once they are damaged by running the recovery from the hidden partition. To restore the operating system and all preinstalled software, follow the steps below.

Note: After recovery, you need to re-install all settings and passwords. But the recovery will not delete your recording files saved in the partition D since it only reformats the partition C.

1. On the GV-Desktop, click the **Program** button and select **Recovery**. The system will run this command by itself.

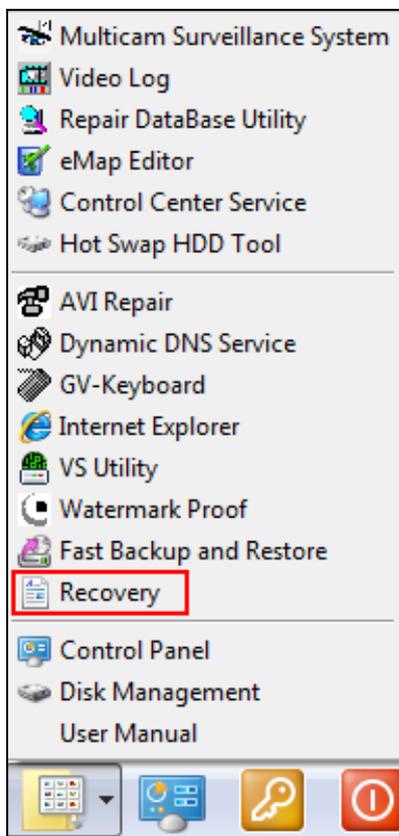


Figure 3-47

2. Restart the GV-NVR System Lite V2.
3. Press **F11** button several times to avoid accessing the system.

4. When the below screen appears, press the **Recovery** button.

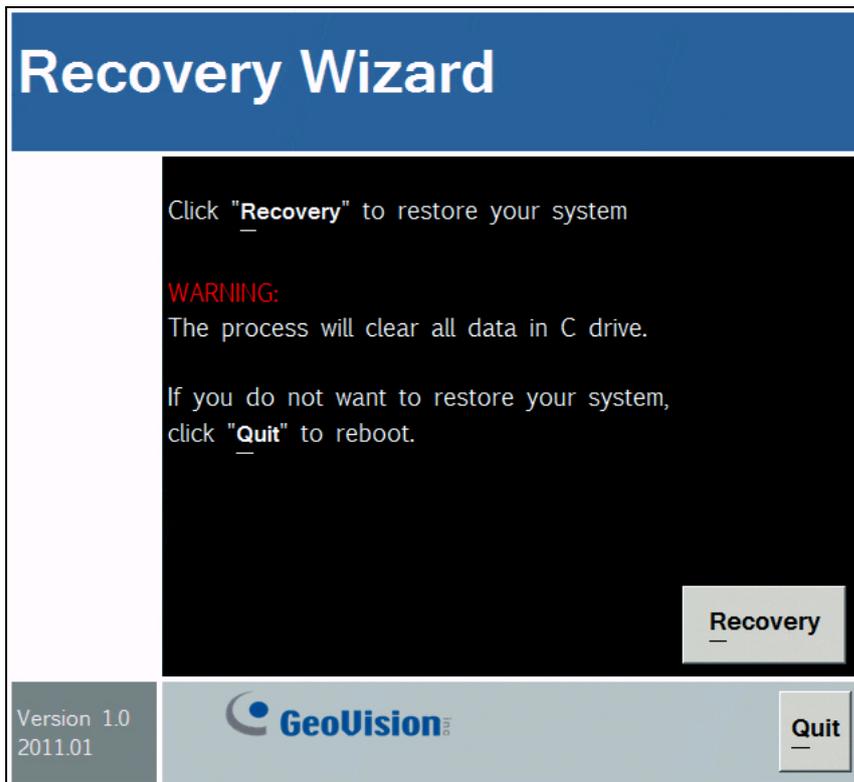


Figure 3-48

5. If you can't successfully start the Recovery Wizard, you may see the below screen. Select **SATA PM** to start the Recovery Wizard.



Figure 3-49

6. When the restoring process is completed, the screen will automatically show the GV-Desktop. And the system will restore the default values.

3.12 Updating GV-NVR System Lite V2

If you like to update your GV-NVR System Lite V2, contact your dealer for more information.

Before contacting your dealer, you may check software update news at our website:

<http://www.geovision.com.tw>

Chapter 4 Firmware Upgrade for GV IP Cameras

GeoVision will periodically release the updated firmware of GV IP camera on the website. The new firmware can be simply loaded into the GV IP camera by using the Web interface of GV IP camera or IP Device Utility of the GV-NVR System Lite V2.

Important Notes before You Start

Before you start updating the firmware, please read these important notes:

1. While the firmware is being updated,
 - A) the power supply of the camera must not be interrupted, and
 - B) do not unplug the Ethernet cable of the camera if the cable is the source of power supply (Power over Ethernet or PoE supported).
2. Do not turn the camera power off in 10 minutes after the firmware is updated.
3. If you use the IP Device Utility for firmware upgrade, the GV-NVR System Lite V2 used to upgrade firmware must be under the same network of the camera.

WARNING: The interruption of power supply during updating causes not only update failures but also damages to the camera. In this case, please contact your sales representative and send your device back to GeoVision for repair.

4.1 Using the Web Configuration Interface of GV IP Camera

1. In the Live View window, click the **Show System Menu** button and select **Remote Config**. The **Remote Config** dialog box appears.

Live View

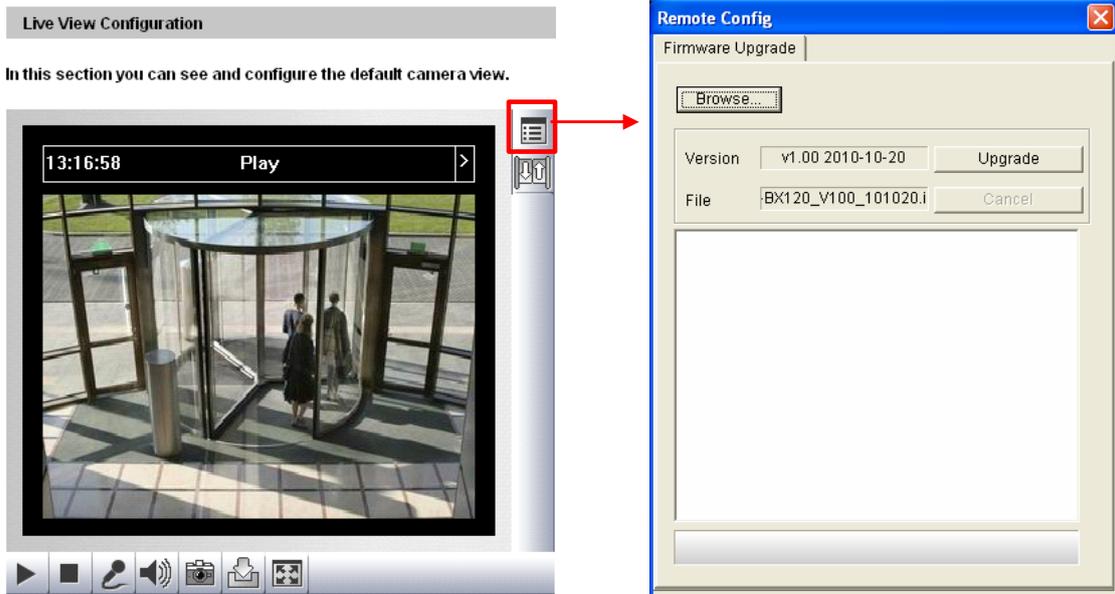


Figure 4-1

2. Click the **Browse** button to locate the firmware file (.img) saved at your GV-NVR System Lite V2.
3. Click the **Upgrade** button to start the upgrade.

4.2 Using the IP Device Utility

The IP Device Utility provides a direct way to upgrade the firmware to multiple units of GV IP camera. Note GV-NVR System Lite V2 used to upgrade firmware must be under the same network of the camera.

1. On the GV-Desktop, click the **Programs** button. This dialog box appears.



Figure 4-2

2. Select **VS Utility**. This dialog box appears.

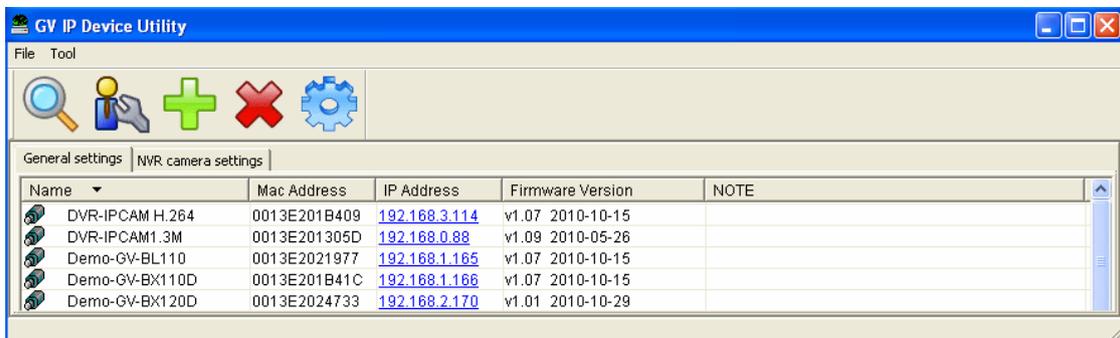


Figure 4-3

3. Click the **Search** button to locate available cameras on the same LAN. Or click the **New** button and assign the IP address to locate the camera over the Internet. Or highlight one camera in the list and click the **Delete** button to remove it.

4. Double-click one camera in the list. This dialog box appears.

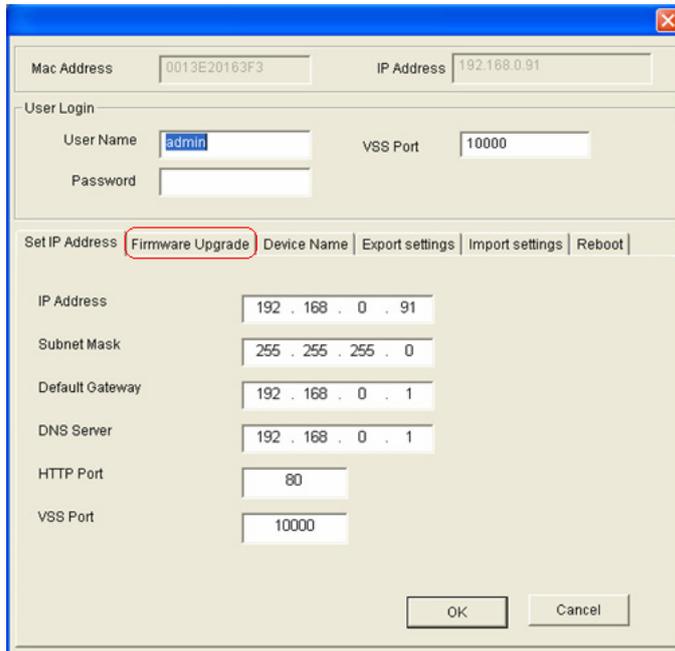


Figure 4-4

5. Click the **Firmware Upgrade** tab. This dialog box appears.

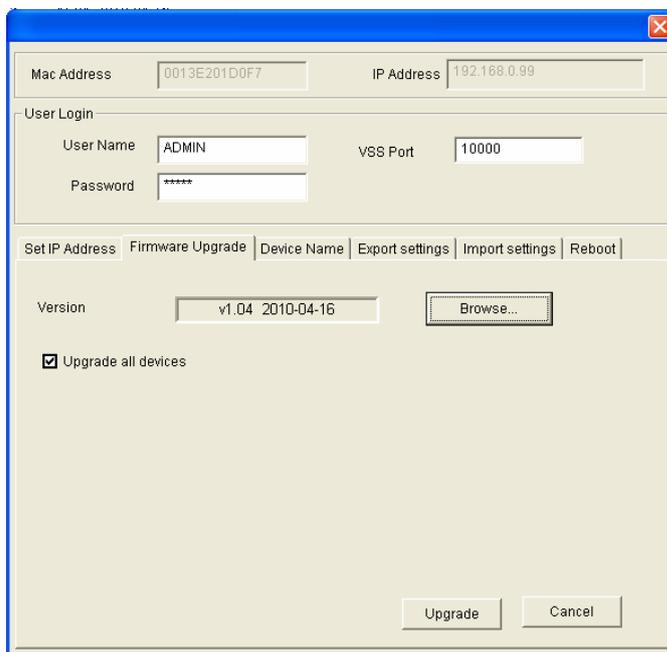


Figure 4-5

6. Click the **Browse** button to locate the firmware file (.img) saved at your GV-NVR System Lite V2.
7. If you like to upgrade all the cameras in the list, select **Upgrade all devices**.
8. Type **Password**, and click **Upgrade** to start the upgrade.

Chapter 5 Mobile Phone Connection

You can receive live video streaming from the GV-NVR System Lite V2 by using a PDA, Smartphone or 3G-enabled mobile phone. The GV mobile phone applications and their major features are listed as below.

Overview of GV Mobile Phone Applications

Handheld Device View	GV-GView V2 for Windows PDA
OS Supported	Windows Mobile 5.0 and 2003 for Pocket PC Windows Mobile 6.0 / 6.1 / 6.5 Classic and Professional
Port	Live View Port: 8866, RPB Port: 5511
Protocol	TCP/IP (Streaming)
Functions	Video streaming, PTZ control, I/O device control, Remote playback (RPB) and etc.
Handheld Device View	GV-MSView V2 for Windows Smartphone
OS Supported	Windows Mobile 5.0 and 2003 for Smartphone Windows Mobile 6.0 / 6.1 / 6.5 Standard and Professional
Port	Live View Port: 8866, RPB Port: 5511
Protocol	TCP/IP (Streaming)
Functions	Video streaming, PTZ control, I/O device control, Remote playback (RPB) and etc.
Handheld Device View	GV-MSView V3 for Windows Smartphone
OS Supported	Windows Mobile 6.0 / 6.1 / 6.5 Standard and Professional
Port	Live View Port: 8866, RPB Port: 5511
Protocol	TCP/IP (Streaming)
Functions	Video streaming, PTZ control, I/O device control, Remote Playback (RPB) and etc.
Handheld Device View	GV-SSView V3 for Symbian Smartphone
OS Supported	Nokia S60 2nd Edition and 3rd Edition
Port	Live View Port: 8866, RPB Port: 5511
Protocol	TCP/IP (Streaming)
Functions	Video streaming, PTZ control, I/O device control, Remote playback (RPB) and etc.
Handheld Device View	3GPP Viewer for 3GPP Phone
OS Supported	Mobile phones with players supporting RTSP (Real Time Streaming Protocol)
Port	TCP Port: 8554, UDP Port: 17300-17380
Protocol	TCP/IP (Streaming)
Functions	Video streaming, Remote playback (RPB), Audio and etc.

Handheld Device View	GV-Remote View V1.1 / V1.2 for BlackBerry Smartphone
OS Supported	V1.1: BlackBerry OS 4.2.1 to 5.0 V1.2: BlackBerry OS 5.0 to 6.0
Port	Live View Port: 8866, Http Port: 80
Protocol	TCP/IP
Codec	MJPEG
Functions	Live view, I/O device control, PTZ control (for V1.2 only)
Handheld Device View	GV-iView V2.2.0 for iPhone and iPod Touch
OS Supported	iPhone with iPhone OS 4.3.3 to 5.1 iPod Touch with iPhone OS 4.3.3 to 5.1
Port	Live View Port: 8866, RPB Port: 5511, HTTP Port: 80;
Protocol	TCP/IP
Codec	MJPEG
Functions	Live view, PTZ control, I/O trigger, Remote playback (RPB) , Multiple camera views, and Snapshots
Handheld Device View	GV-iView HD V1.1.0 for iPad
OS Supported	iPad OS 4.3.3 to 5.1
Port	Data Port: 8866, RPB Port: 5511, HTTP Port: 80
Protocol	TCP/IP
Codec	MJPEG
Functions	Live view, PTZ control, I/O trigger, Remote playback (RPB) , Multiple camera views, and Snapshots
Handheld Device View	GV-AView V1.3.0 for Android Smartphone
OS Supported	Android version 2.2 to 4.0.2
Port	Data Port: 8866, HTTP Port: 80, RPB Port: 5511
Protocol	TCP/IP
Codec	MJPEG
Resolution Supported	704 x 480 or below
Functions	Live view, PTZ control, I/O trigger, Remote playback (RPB) , Multiple camera views, and Snapshots

Note:

1. For the 3G-enabled mobile phone, you can receive live video from GV-NVR System Lite V2 without installing any GV mobile applications.
2. To access live view on your mobile phone, enter the **Live View Port** on your mobile phone. To play video back, enable **Run ViewLog Server** on the WebCam Server and enter the **RPB Port** on your mobile phone.

Enabling Mobile Phone Connection

To connect GV-NVR System Lite V2 through your mobile phone devices, you must enable **Mobile** option in the GV-NVR System Lite V2 beforehand.

1. Click the **Network** button .
2. Select **WebCam Server**.
3. Click the **Mobile** tab and activate the settings of communication ports. Then, click **OK**.

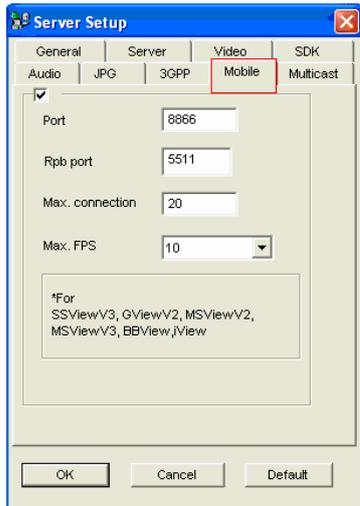


Figure 5-1

Note: If there is a router or firewall installed, ensure these communication ports required by the WebCam server are open: HTTP Port 80, HTTPS Port 443 (if SSL is enabled), Live View Port 8866 and RPB Port 5511.

5.1 Windows PDA

GV-GView V2 is a remote view application for Microsoft PDA. For the supported Windows version, see the *Overview of GV Mobile Phone Applications* chart earlier in this chapter.

When GV-GView V2 detects the big screen panel of the mobile phone, images from the connected GV-NVR System Lite V2 will be horizontally rotated for a better view. Resolution is set to be CIF by default.

Installing GV-GView V2

1. To download GV-GView V2, please go to http://www.geovision.com.tw/english/5_4_gview.asp.
2. Click the **Download** button.
3. Consult your PDA user's manual for how to install a program to the PDA.

Connecting to GV-NVR System Lite V2

Once GV-GView V2 is installed on your PDA, you can use it to monitor your GV-NVR System Lite V2. Make sure your PDA has wireless LAN adapter properly in place with access to the Internet.

1. Run **GView V2** on your PDA.

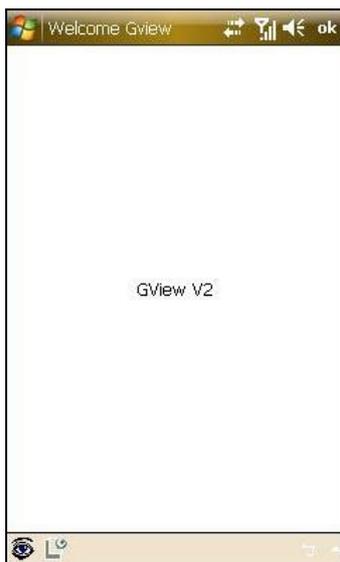


Figure 5-2

2. Click the  button located at the lower left corner. The login screen appears.



Figure 5-3

3. Enter the IP address of your GV-NVR System Lite V2, port value (default value is 8866), a username and a password. Then click **OK**.
4. Once the connection is established, the live video will appear.

Playing Back the Recordings

To play back the recordings, follow these steps:

1. On the main screen, click the **Network** button, select **Run ViewLog Server**, and click **OK** to allow the remote playback access.

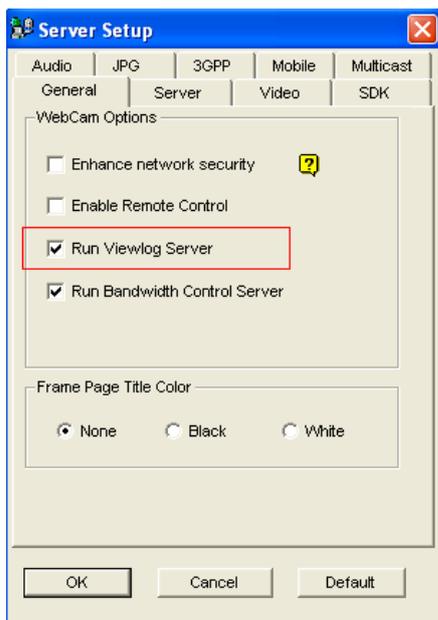


Figure 5-4

2. Run **GView V2** on your PDA.

3. Click the  button located at the lower left corner (Figure 5-2). The login screen appears.

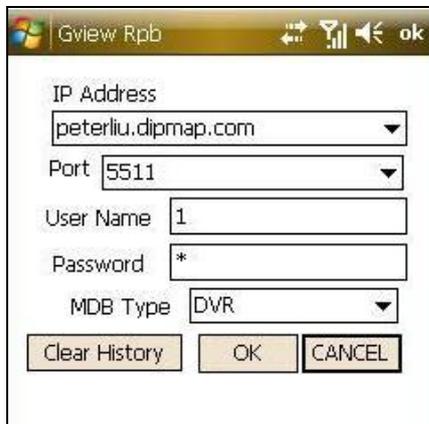


Figure 5-5

4. Enter the IP address of the GV-NVR System Lite V2, port value (default value is 5511), a username and a password. Then click **OK** to connect.
5. Select the desired recording on the event list for playback.

Other Functions

In addition to live view and playback, GView V2 offers these functions: viewing and controlling I/O devices, adjusting image quality, starting and stopping recording.

On the live view screen, click the buttons on the toolbar to have the desired functions.

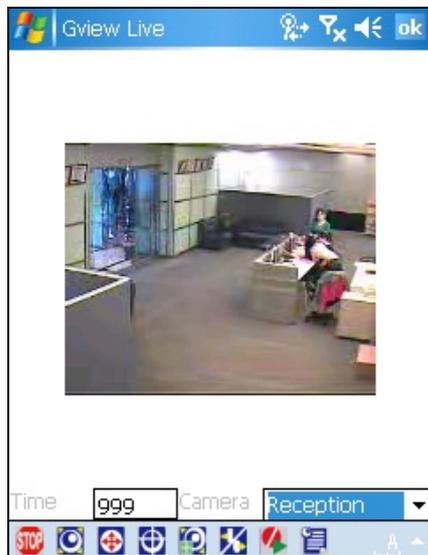


Figure 5-6

Button	Description
	Click it to stop the connection.
	Click it to adjust the image quality.
	Click it to access the connected I/O devices. For details, see <i>Accessing I/O Devices</i> later in this chapter.
	Click it to start or stop recording.
	Click it to display the camera status. For details, see <i>Viewing Camera Status</i> later in this chapter.
<input type="text" value="Reception"/>	Use this drop-down list to switch cameras.

Accessing I/O Devices

To access the connected I/O devices, use the drop-down list to select the desired camera and click the  button. The I/O module button appears on the toolbar.



Figure 5-7

The number on the toolbar indicates the connected module. Click the desired number to access its I/O devices. The I/O control buttons appear on the toolbar.



Figure 5-8

Button	Description
I	Click it to view the log of input triggers.
O	Click it to display and force the connected output devices.

Viewing Input-Triggered Events

All input triggers are logged on the Alarm list. Click the “**I**” button (Figure 5-8) to view the list of trigger events.

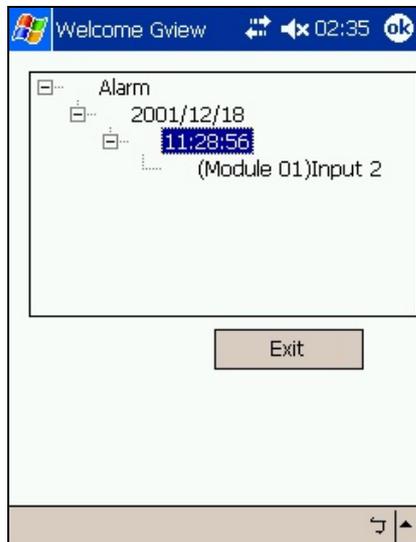


Figure 5-9

Forcing Outputs

To force any connected output devices, click the “**O**” button (Figure 5-8), and click the desired number. The numbers on the toolbar indicate the connected output devices.



Figure 5-10

Controlling PTZ Cameras

To control the PTZ camera, use the drop-down list to select the desired camera, and click the button  on the live view screen (see Figure 5-6).

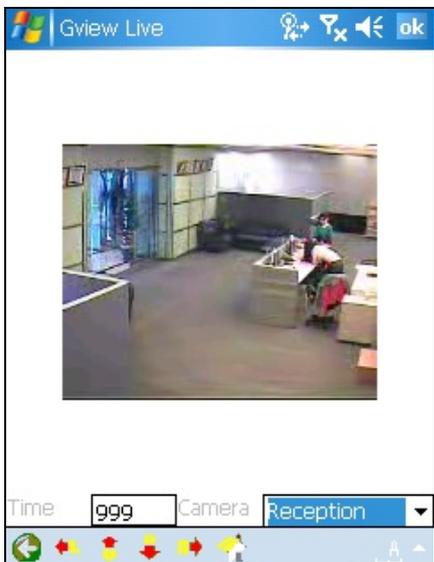


Figure 5-11

Button	Description
	Click it to return to the previous page.
	Use these buttons to move the PTZ camera to the left, up, down and right
	Click it to return to home.

Viewing Camera Status

To view the camera status, click the  button on the live view screen (Figure 5-6).

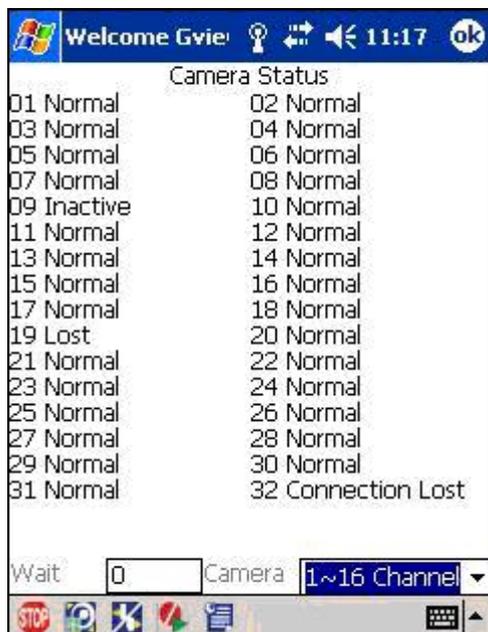


Figure 5-12

This screen displays the status of camera activity. Three messages indicate the current camera status.

Message	Description
Normal	The camera is turned on and not recording.
Inactive	The camera is turned off.
Recording	The camera is recording.

5.2 Windows Smartphone

With the GV-MSView V2 / V3 applications, you can monitor your GV-NVR System Lite V2 remotely through a Windows-based Smartphone. For the supported Windows version, see the *Overview of GV Mobile Phone Applications* chart earlier in this chapter.

Installing GV-MSView V2 / V3

1. To download GV-MSView V2 / V3, please go to http://www.geovision.com.tw/english/5_4_msview.asp.
2. Click the **Download** button.
3. Consult your smartphone user's manual for how to install a program to the smartphone.

Connecting to GV-NVR System Lite V2

The following operations may vary slightly for different modules.

1. Run **MSViewV2.exe** or **MSViewV3.exe** on your smartphone.

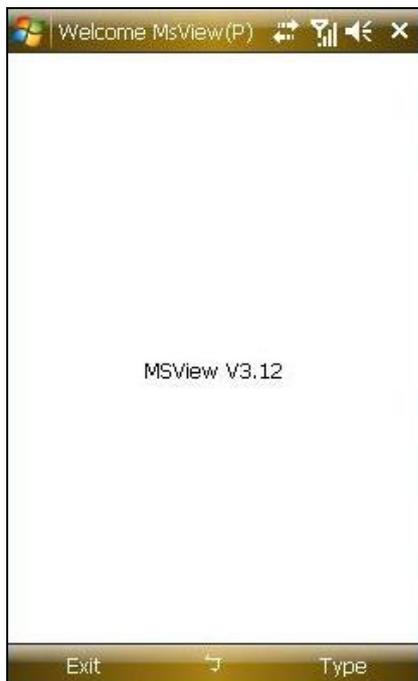


Figure 5-13

2. Click **Type** and select **Live**.



Figure 5-14

3. On the login screen, enter the IP address of the GV-NVR System Lite V2, port value (default value is 8866), a username and a password. Then click **Control** and select **Connect**.

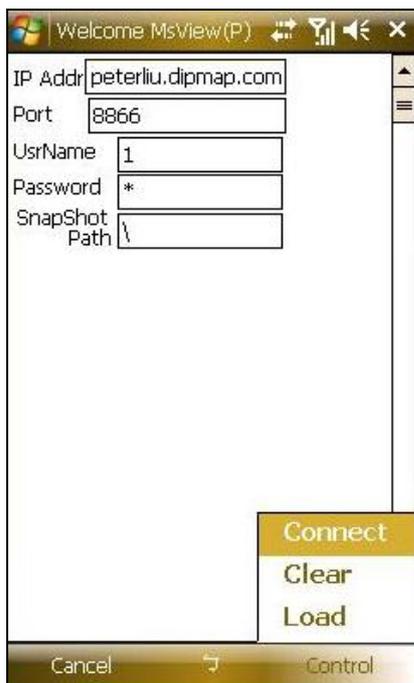


Figure 5-15

4. Once the connection is established, the live video will appear. You can use the scroll key on your Smartphone to navigate camera channels.



Figure 5-16

Playing Back the Recordings

To play back the recordings, follow these steps:

1. On the main screen, click the **Network** button, select **Run ViewLog Server**, and click **OK** to allow the remote playback access (Figure 5-4).
2. Run **MSView V2** or **MSView V3** on your Smartphone.
3. Click **Type** and then select **RPB** (Figure 5-14). If you want to search the recordings within a specific period of time for playback, select **RPB with time**.

4. On the Login screen, enter the IP address of the GV-NVR System Lite V2, port value (default value is 5511), a username and a password. Then click **Select** and click **GV DVR** to start the connection.

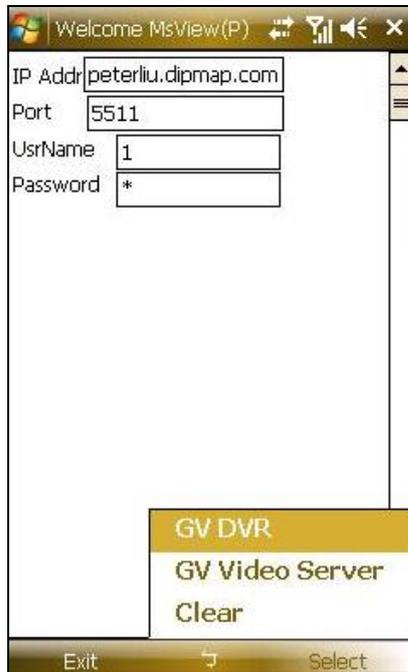


Figure 5-17

5. Select the desired video recording on the event list for playback.

Other Functions

In addition to live view, GV-MSView V2 or GV-MSView V3 offers these functions: rotating images and controlling outputs. Select the **Control** option to have these features.

5.3 Symbian Smartphone

With the GV-SSView V3 application, it's also possible to monitor your GV-NVR System Lite V2 through a Symbian-based Smartphone. For the supported Symbian version, see the *Overview of GV Mobile Phone Applications* chart earlier in this chapter.

Installing GV-SSView V3

1. To download GV-SSView V3, please go to http://www.geovision.com.tw/english/5_4_sview.asp.
2. Click the **Download** button.
3. Consult your smartphone user's manual for how to install a program to the smartphone.

Connecting to GV-NVR System Lite V2

The following operations may vary slightly for different modules.

1. Run **GV-SSView V3** on your Smartphone.

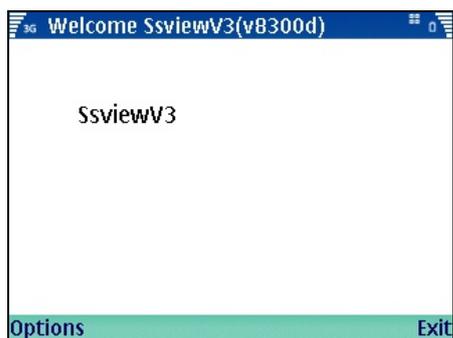


Figure 5-18

2. Click **Options**, and select **Live Connect**.

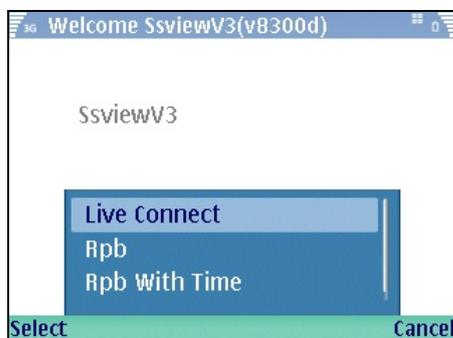


Figure 5-19

3. On the Login screen, enter the IP address of the GV-NVR System Lite V2, port value (default value is 8866), a login username and a password. Then click **Options** and select **Connect**.



Figure 5-20

4. Once the connection is established, the live video will appear.



Figure 5-21

Quick Connection

The IP addresses of connected servers can be stored for quick connection in the future. Press the [**<**] and [**>**] buttons on the mobile device to select the desired server for connection.

Playing Back the Recordings

To play back the recordings from the GV-NVR System Lite V2, follow these steps:

1. On the main screen, click the **Network** button, select **Run ViewLog Server**, and click **OK** to allow the remote playback access (Figure 5-4).
2. Run **GV-SSView V3** on your Smartphone.

3. Click **Options**, and select **RPB** (Figure 5-19). If you want to search the recordings within a specific period of time for playback, select **RPB With Time**.



Figure 5-22

4. On the Login screen, enter the IP address of your GV-NVR System Lite V2, port value (default value is 5511), a username and a password. Then click **Options** and select **Video Server**.
5. Select the desired recording on the event list for playback.

Other Functions

In addition to live view, SSView offers other useful functions, such as changing camera channels, rotating images and seeing Server and WebCam information. Select **Options** to have these features.

5.4 BlackBerry Phone

With the GV-Remote View V1.1 and V1.2 phone applications, you can remotely view live video, force output devices to be triggered, and start and stop monitoring from your BlackBerry phone.

Installing GV-Remote View

1. To download GV-Remote View V1.1 or V1.2, please go to:
http://www.geovision.com.tw/english/5_4_bbview.asp
2. Download GV-Remote View from BlackBerry App World.

Activating the GV-Remote View Function

To allow remote access to GV-NVR System Lite V2, enable the function on the WebCam Server:

On the main screen, click the **Network** button, select **WebCam Server**, click the **JPG** tab, and select **Create JPEG/GIF file(s)**.

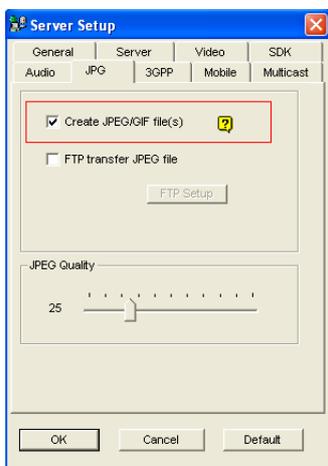


Figure 5-23

Connecting to GV-NVR System Lite V2

To connect your BlackBerry phone to GV-NVR System Lite V2, follow these steps:

1. Click the **GV-Remote View** icon  on your phone, the welcome page appears.
2. Select **Create Live Connection**. The Login page appears.

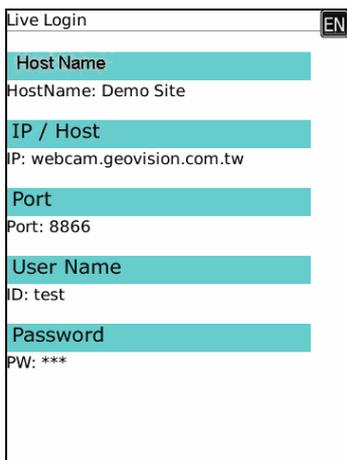


Figure 5-24

3. Enter the IP address, port value (default value is 8866), a username and a password to log in GV-NVR System Lite V2.
4. Select **Connect** to start. Once the connection is established, the Camera List appears.



Figure 5-25

5. Select the desired camera and select **OK** to access the live view.
6. To change to another camera, select **Change Camera**, and follow Step 3.

Other Functions

Forcing Outputs

1. To force any connected output devices, select a camera from the Camera List and select **IO Module**. The IO Module List appears.



Figure 5-26

2. Scroll down to select the desired output device on the list, and push in the scroll wheel to select **Force Output**.
3. To force another output device, select **IO Module** again and repeat Step 2.

PTZ Control

1. To access the PTZ functions, select a camera from the Camera List and select **PTZ control**. The PTZ control panel appears.

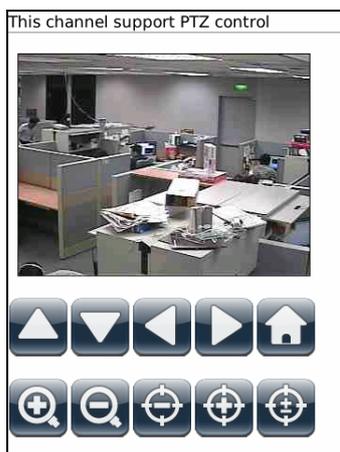


Figure 5-27

2. You can tap the direction buttons  and the zoom buttons  to control the camera. Tap the home button  to return to home position. You can also adjust the focus of the camera using the focus buttons  or tap the autofocus button .

Note: The PTZ control function is only supported in GV-Remote View V1.2.

5.5 3G Mobile Phone

Without installing any GV applications, you can directly access live video or recordings from a 3G-enabled mobile phone.

Activating the 3G Mobile Phone Function

To allow remote access to GV-NVR System Lite V2, you must enable the **3GPP** function on the **WebCam Server**.

On the main screen, click the **Network** button, select **WebCam Server**, click the **3GPP** tab, activate the settings of communication ports, and then click **OK**.

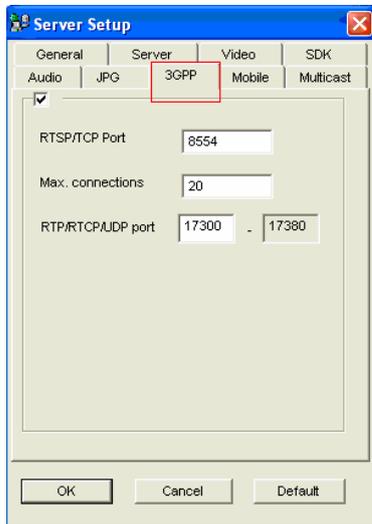


Figure 5-28

Connecting to GV-NVR System Lite V2

1. On the mobile phone, open the Internet browser, and enter the IP address of the GV-NVR System Lite V2 to establish the connection.
2. On the Login page, enter a username and a password, select **3G**, and click **Submit**.



Figure 5-29

3. Select **Live**. If you want to change the video settings, use the drop-down lists to configure video size, quality and audio codec. Then scroll down the page to click **Submit**.

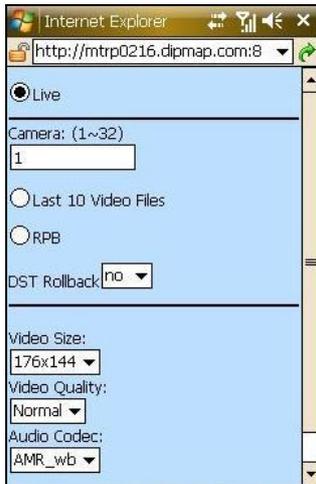


Figure 5-30

4. On the camera list, click the desired camera to access its live view, and then click **Next**.



Figure 5-31

5. The default player is called up and the live video appears. Note the players on the mobile phones may be different.



Figure 5-32

Playing Back the Recordings

You can play back the recordings on the 3G mobile phone. Note that only the videos recorded in the CIF resolution are available for playback.

To search the recordings of the specific time, follow these steps:

1. On the Settings page (Figure 5-30), select **RPB** and click **Submit**. This page appears.

The image shows a screenshot of an Internet Explorer browser window. The address bar displays the URL 'http://peee1932.dipmap.com:8'. The main content area contains a search form with the following fields: 'Year' with a dropdown menu showing '2019', 'Month' with a dropdown menu showing '5', 'Day' with a dropdown menu showing '21', 'Hour' with a dropdown menu showing '12', and 'Minute' with a dropdown menu showing '0'. At the bottom of the form is a 'Submit' button.

Figure 5-33

2. Use the drop-down lists to define the specific time for search, and then click **Submit**.
3. The event list will display the 10 recordings after the defined time. Select the desired recording on the event list for playback.

To play back the last ten recordings, follow these steps:

1. On the Settings page (Figure 5-30), select **Last 10 Video Files** and click **Submit**.
2. The event list will display the last 10 recordings. Select the desired recording on the event list for playback.

5.6 I-Mode Phone

You can monitor your GV-NVR System Lite V2 remotely with

- I-Mode phone, or
- Mobile phone supporting xhtml, chtml, or html and capable of GPRS.

When using i-Mode services, you do not pay for the connection time, but will be charged by the volume of data transmitted and/or received. Therefore, i-Mode will NOT receive live video streaming; instead, it will receive one image at a time and will not receive another unless it is requested to do so. To request another image, simply press the **Enter** key on your i-Mode phone. The images are in GIF or JPEG format with resolution of 96 x 72 pixels.

Activating the i-Mode Function

To allow the remote access to GV-NVR System Lite V2, you must enable the **Create JPEG/GIF file(s)** function on the WebCam Server (Figure 5-23).

Connecting to GV-NVR System Lite V2

The following operations may vary slightly for different modules.

1. Open the i-Mode menu, and select **Input Web Address**.



Figure 5-34

2. Enter the IP address of your GV-NVR System Lite V2 in the Address column, and then press **OK**.



Figure 5-35

3. Type a valid username and password, and then press **Submit**.



Figure 5-36

4. Select the desired camera channel, and then press **Enter**.



Figure 5-37

5. If you log in successfully, the i-Mode phone will start receiving live video from the GV-NVR System Lite V2.

5.7 iPhone, iPod Touch and iPad

GV-iView function is introduced to support iPhone, iPod Touch and iPad for the mobile surveillance application. For the supported operating system version, see the *Overview of GV Mobile Phone Applications* chart earlier in this chapter.

Note: GV-iView is for iPhone and iPod Touch users, while GV-iView HD is for iPad users. The following installation is using GV-iView as an example.

Installing GV-iView

Download **GV-iView** from App Store, and after installing the application, the **GV-iView** icon will appear on the desktop.

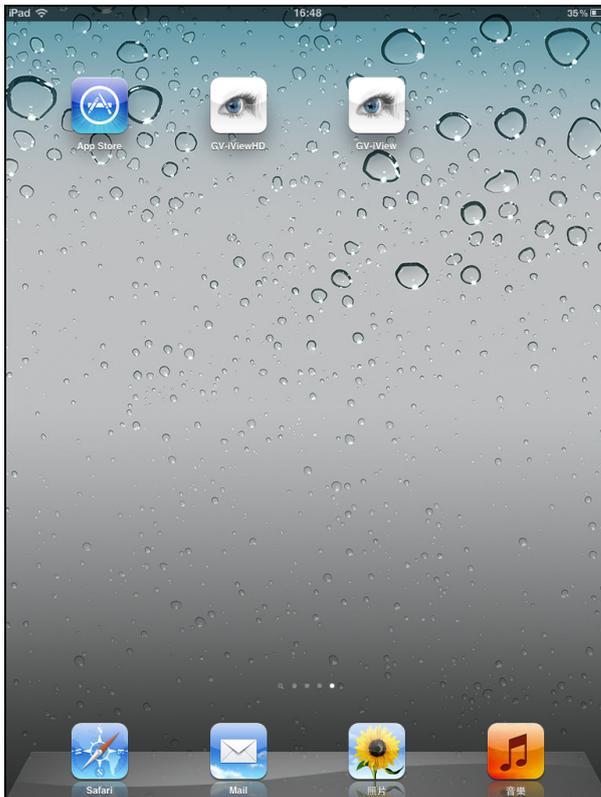


Figure 5-38

Activating the GV-iView Function

To allow remote access to GV-NVR System Lite V2, you must enable the **Create JPEG/GIF file(s)** function on the WebCam Server (Figure 5-23).

Connecting to GV-NVR System Lite V2

1. Activate **GV-iView** on the mobile device.
2. On the login screen enter the IP address of the GV-NVR System Lite V2, port value (default value is 8866), ID and Password.
3. Press **Connect**. Once the connection is established, the live display of 6 cameras will appear.
4. Select **ON** for HTTPS if SSL is enabled for WebCam Server. If the default SSL port of 443 on the WebCam Server is modified, specify the new port number used for HTTPS connection at the end of the IP address, e.g., webcam.geovision.com.tw:445.



Figure 5-39

Note: If the default HTTP port of 80 on the WebCam Server is modified, specify the new port number used for HTTP connection at the end of the IP address, e.g., webcam.geovision.com.tw:81.

Playing Back the Recordings

To retrieve the events recorded on the GV-NVR System Lite V2 and play them back:

Note: The remote playback (RPB) function is only supported if the video was recorded with a resolution of CIF or lower.

1. On the main screen, click the **Network** button, select **Run ViewLog Server**, and click **OK** to allow the remote playback access (Figure 5-4).
2. Run GV-iView on your mobile device.
3. On the login screen, tap **RPB View** .
4. Enter the IP address of the GV-NVR System Lite V2, port value (default value is 5511), ID and Password. You can also search the recordings after a specified date and time by selecting **RPB Time Setting** and entering the date and time. Then, tap **Connect**.



Figure 5-40

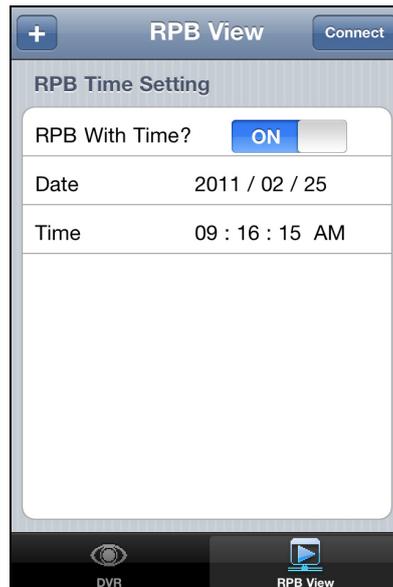


Figure 5-41

5. Select the desired recordings from the event list for playback. Tap the **Change cam** button at the top right corner to switch cameras.

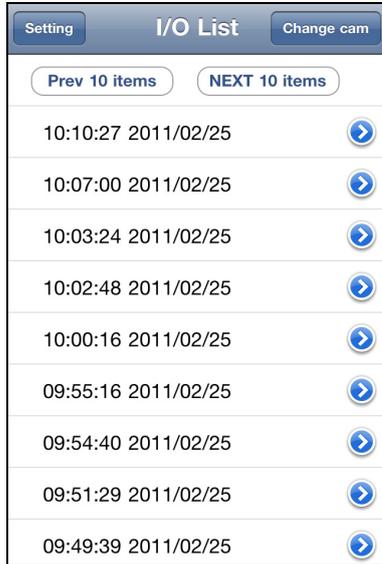


Figure 5-42

Other Functions

After you enlarge one channel, you can find the following buttons for control.

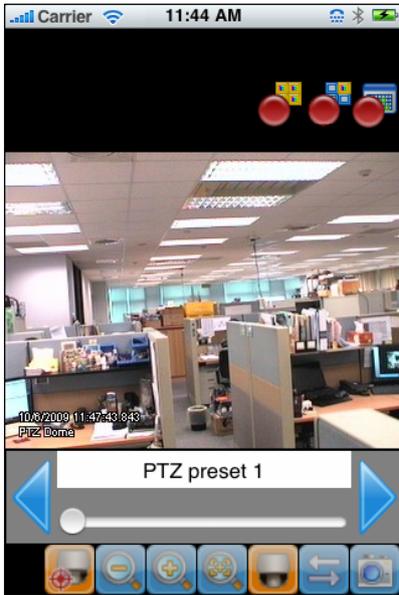


Figure 5-43

Button	Name	Function
	Enable Record	Activates recording controls.
	Record One Channel	The button is available when you tap the Enable Record button. Starts / stops recording the current channel.
	Record All Channels	The button is available when y he Enable Record button. Starts / stops recording all channels.
	Enable PTZ	Activates PTZ controls. A swipe of a finger to control the camera's direction. Two finger pinch to zoom in and out.
	Focus Far / Focus Near	The two buttons are available when you tap the Enable PTZ button. Use the two buttons to focus in or out the image.
	PTZ Preset	The button is available when you tap the Enable PTZ button. It allows you to remotely move the PTZ to the preset points.
	Auto Focus	The button is available when you tap the Enable PTZ button.
	Enable I/O	Activates the output controls.
	Snapshot	Takes a snapshot of image.

PTZ Speed Control for PTZ Cameras

Tap anywhere on the Live View screen of PTZ camera to bring up the PTZ Speed Setting panel. Select your desirable level of PTZ speed. Higher value means higher speed.



Figure 5-44

Accessing I/O Devices

1. Press the **Enable I/O** button. The screen, similar to the following image, appears.
2. Use the left and right buttons to change the I/O module, and use the scrollbar to change the output device.
3. Tap **IO Module 1 (output: 1)** to manually force the output to be activated.



Figure 5-45

My Favorite

On the login screen you can find the My Favorite option, allowing you to add several links of GV-NVR System Lite V2 servers for quick connections. Up to 50 links can be created.

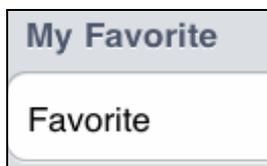


Figure 5-46

Import / Export

This function allows you to export **My Favorite** list to iPhone / iPad / iPod Touch device or import **My Favorite** list from iPhone / iPad / iPod Touch device. The maximum number of import / export items is 100 connections. Find the **Import / Export** option on the login screen and operate.

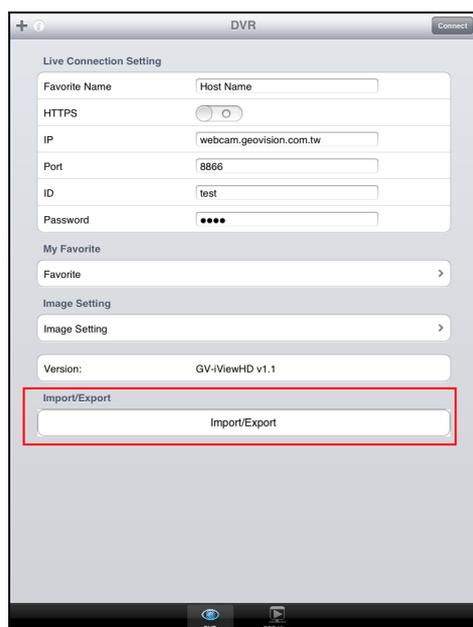


Figure 5-47

5.8 Android Smartphone

GV-AView function is introduced to support Android Smartphone for the mobile surveillance application. For the supported operating system version, see the *Overview of GV Mobile Phone Applications* chart earlier in this chapter.



Figure 5-48

Activating the GV-AView Function

To allow remote access to GV-NVR System Lite V2, you must enable the **Create JPEG/GIF file(s)** function on the WebCam Server (Figure 5-23)

Connecting to GV-NVR System Lite V2

1. On your mobile phone, tap the **GV-AView** icon  on the main page. This page appears.

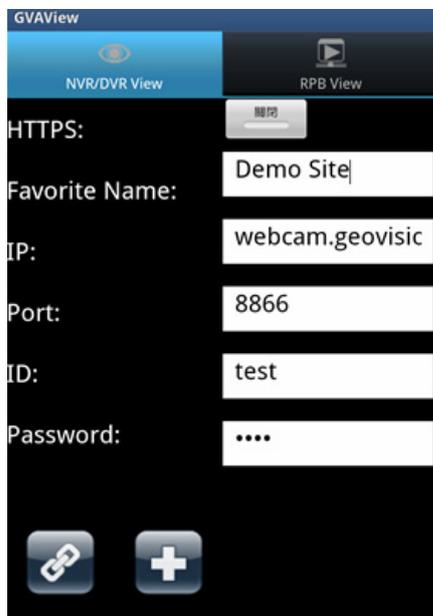


Figure 5-49

2. Type the IP address, port number (default value is 8866), user name and password of the GV-NVR System Lite V2 you want to access. And then tap the **Add** button  to save the connection information in the address book.

Note: If the default HTTP port of 80 on the WebCam Server of the GV-NVR System Lite V2 is modified, specify the new port number used for HTTP connection at the end of the IP address, e.g., webcam.geovision.com.tw:81.

- 3. Tap the created link in the address book.

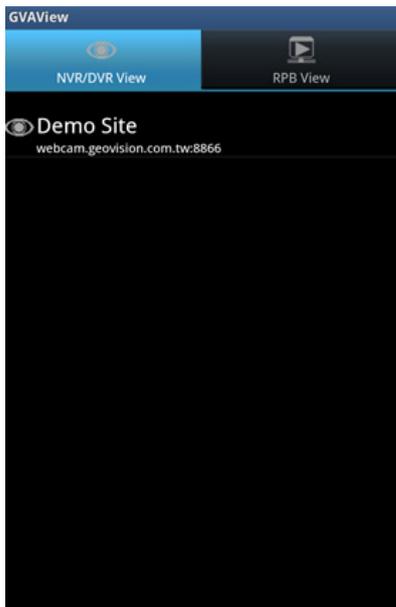


Figure 5-50

- 4. Tap the **Connection** button  to access the GV-NVR System Lite V2.

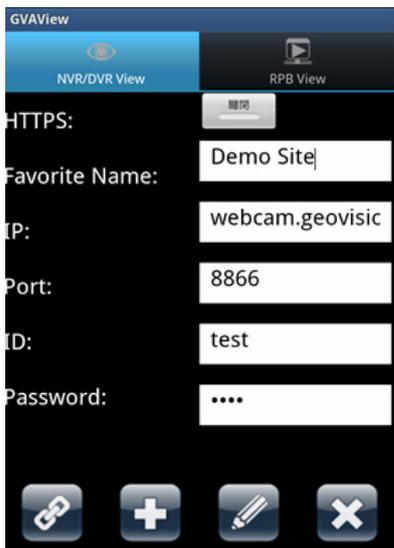


Figure 5-51

5. Tap the Menu button on the mobile phone to see the following options:



Figure 5-52

- **I/O Trigger** : Forces I/O devices to be triggered.
 - **Record Event** : Starts or stops recording the current channel or all channels.
 - **Image setting** : Changes the image quality between **Normal** and **Good**.
6. Double-tap the live view to see it in single view. You can tap the **Snapshot** button  to capture the current image.
7. If the camera supports PTZ functions, tap the **PTZ** button  and use the touch screen to control the camera. The following control buttons are also available:
- : Moves the camera toward different directions.
 - : Zooms in and out.
 - : Adjusts the focus.
 - : Moves the camera back to Home position.
 - : Auto focus.
 - : Moves the camera to a preset point by typing the preset number.

Playing Back the Recordings

1. On the main screen, click the **Network** button, select **Run ViewLog Server**, and click **OK** to allow the remote playback access (Figure 5-4).
2. Run GV-AView on your mobile device.
3. On the main page, tap the **RPB View** tab.

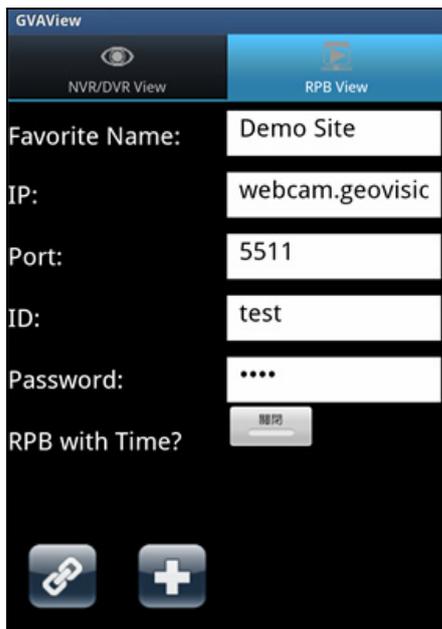


Figure 5-53

4. Type the IP address, port number (default value is 5511), user name and password of the GV-NVR System Lite V2 you want to access.
5. You can tap the button next to **RPB with Time** and specify a time to see videos recorded after the specified time.
6. On the bottom of the screen, tap the **Add** button  to save the connection information.

7. Tap the connection you just created.

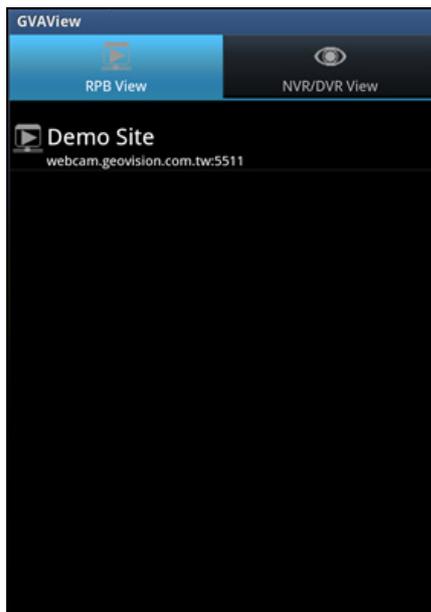


Figure 5-54

8. Tap the **Connect**  button to view the playback.

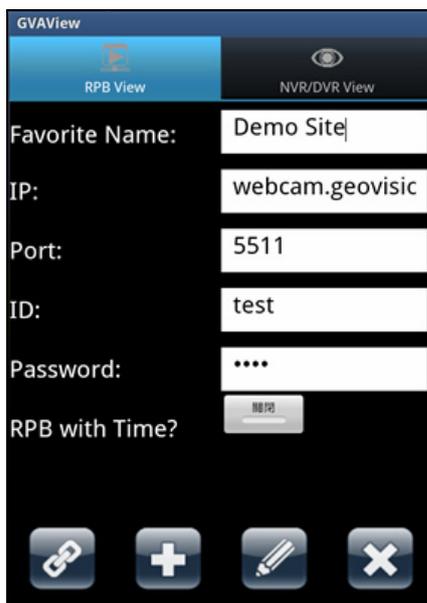


Figure 5-55

- 9. Tap the **Connect** button  to connect to the GV-NVR System Lite V2. The videos recorded from camera 1 will be displayed.

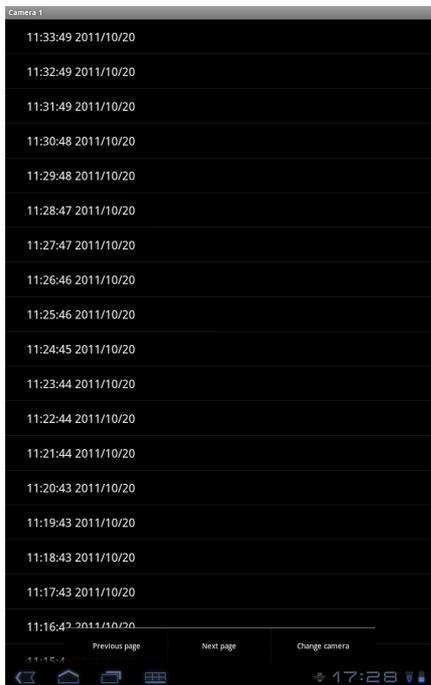


Figure 5-56

- 10. To play back a recording, tap on the time of the recording.
- 11. To see more recordings from the same camera, press the Menu button on the mobile phone device and tap **Previous page** to see more recent recordings or tap **Next Page** to view older recordings.
- 12. To switch to a different camera, press the Menu button on the mobile phone device, tap **Change Camera** and select a camera.

Other Functions

Menu Options in the Address Book

Tap the **NVR/DVR View** tab and then tap the Menu button on the mobile phone device. This page appears.



Figure 5-57

- : Add the connection information of a GV-NVR System Lite V2 to the address book.
- : Delete all entries in the address book.
- : Displays the **Installation Guide** in two ways—Manual and URL Link.
- : Exit the application.
- : Import or Export the address book.

Chapter 6 NVR Health Analysis

GeoVision offers health analysis to GV-NVR System Lite V2. The service is intended to give diagnosis for early and immediate detection of problems.

It is recommended to have the health analysis during the first week after you install the GV-NVR System Lite V2, and then have the checkup every three months. It will take 5 working days for response.

Please prepare the following data for analysis, and send to dvrssystem@geovision.com.tw

- **System Settings**
- **System Log**
- **Information of your computer system (Processor; Drives; Voltage, Temperature and Fans)**

6.1 System Settings

Please back up your system configurations using the **Fast Backup and Restore** application.

1. Run **Fast Backup & Restore Main System** from the Start menu.

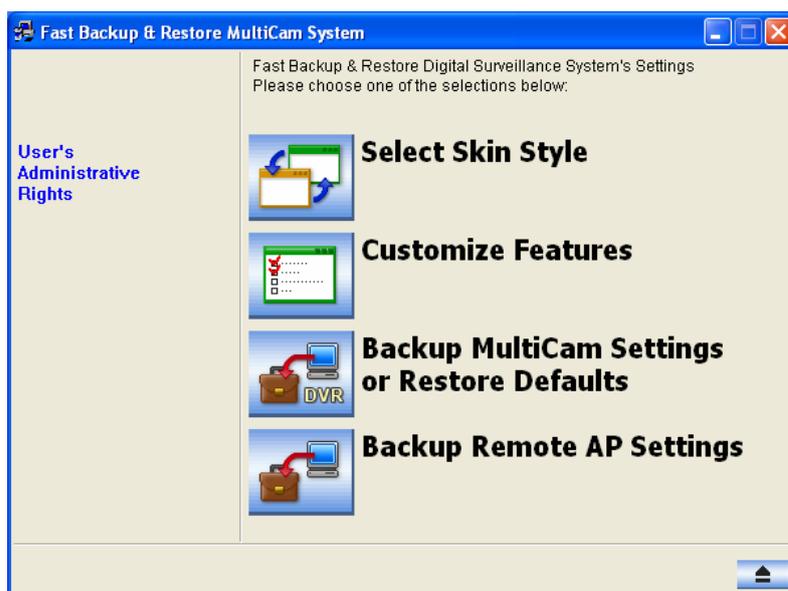


Figure 6-1

2. Select **Backup MultiCam Settings or Restore Defaults**, and select **Backup Current System**. This dialog box appears.

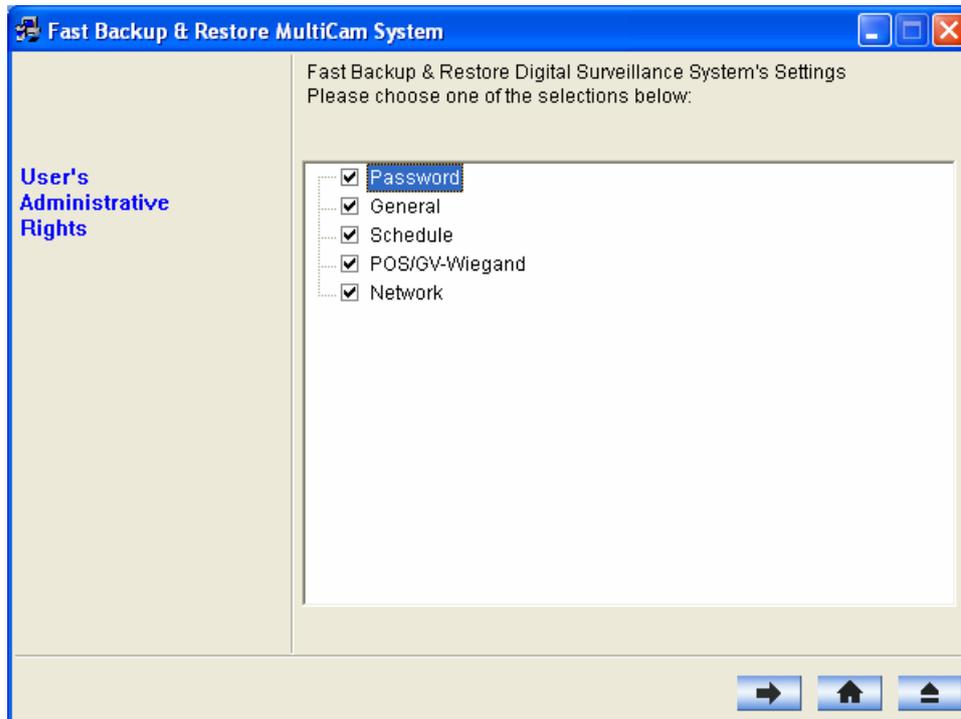


Figure 6-2

3. Press the **Next Step** button  to back up all your system settings. The Save As dialog box appears.
4. Select the destination drive to store the backup file. When the backup is complete, this message "*Successfully Backup MultiCam System Settings*" will appear.

6.2 System Log

Please provide the **sys*.mdb** files of system log. The files by default are saved at **D:\Log\database**. If you have modified the default location, you can check the path on the following System Log Setting dialog box.

To open this dialog box, click the **Configure** button on the Main System, point to **System Configure**, and then select **System Log Setting**.

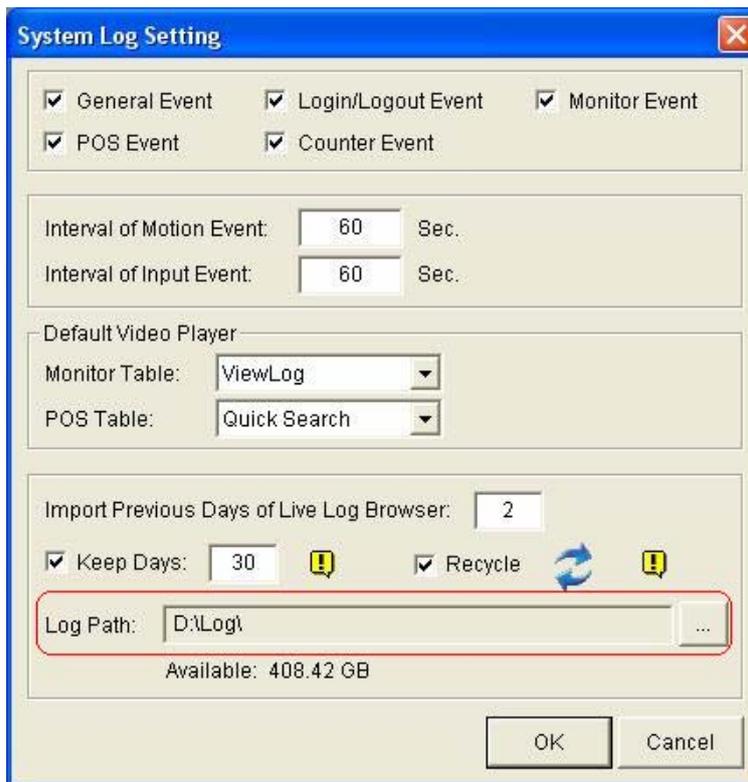


Figure 6-3

6.3 Information of Your Computer System

To get the information of your computer system, please follow the steps below to install the free software PC WIZARD. By using the software, the following computer information can be easily collected and saved for analysis:

- **Processor:** includes Type, Frequency, Data Cache L1, Trace Cache L1, Cache L2, Voltage, Processor Temperature, FPU Coprocessor.
- **Drives:** includes Number of Hard Disk, Number of Drive, Total Size and Free Space of Drive.
- **Voltage, Temperature and Fans:** includes Monitoring Chip, Voltage CPU, Chassis Fan, Processor Temperature, Mainboard Temperature, Hard Disk Temperature.

1. Download and install **PC WIZARD** from <http://www.cpuid.com/pcwizard.php> .
2. After installation, run the program.
3. Right-click the **Processor** icon  and click **Save as**.

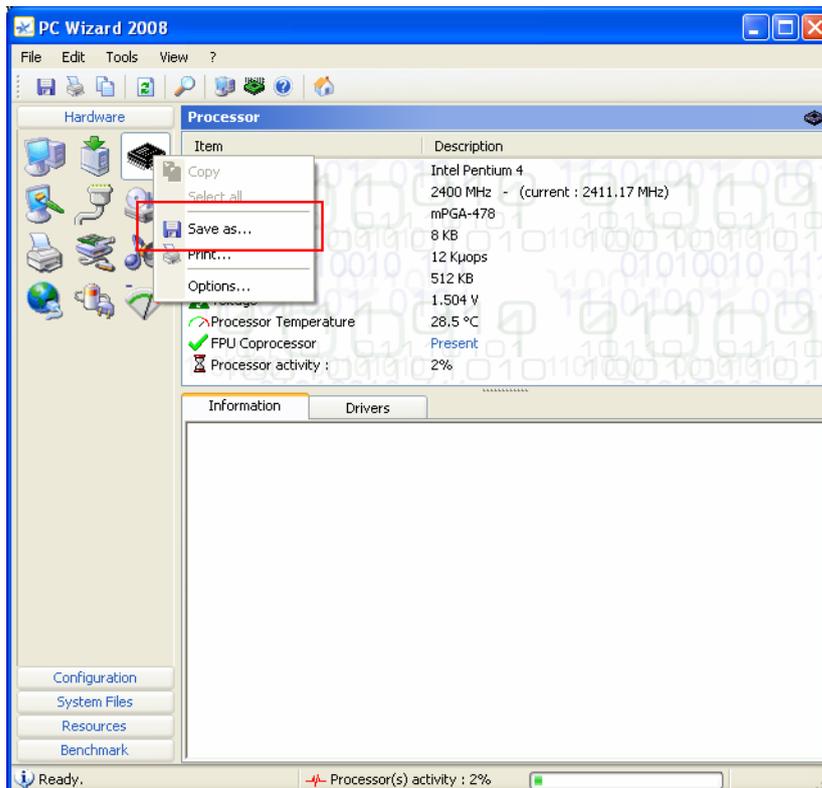


Figure 6-4

4. In the Save As dialog box, select **Format HTML** and click **OK**.

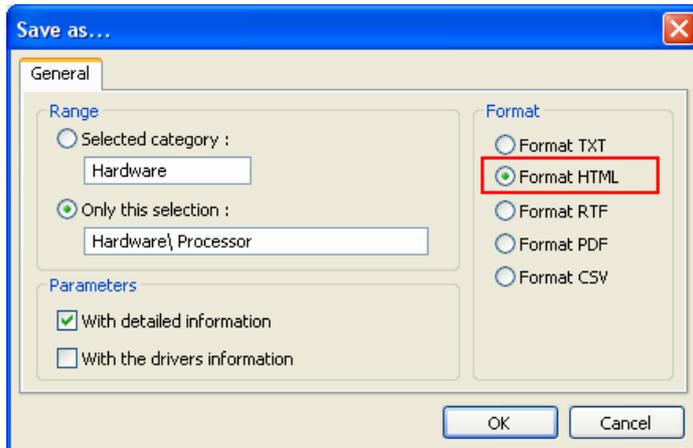


Figure 6-5

5. Select the Save location, type the file name, and then click **Save** to save the Processor information as HTML file.
6. Repeat Steps 3-5 to save the **Drives** information  as HTML file.
7. To save the **Voltage, Temperature and Fans** information , please follow these steps:
- Click the **Voltage, Temperature and Fans** icon. The related data is displayed at the right window.
 - Click the first item **Monitoring Chip**.
 - Click **Edit** on the menu bar and click **Select All** to highlight all the contents.
 - Click **Edit** on the menu bar and select **Copy**.
 - Open a Notepad. Paste and save the information to TXT file.

6.4 Health Analysis Form

Please send the related data for analysis along with this Health Analysis Form to dvrssystem@geovision.com.tw.

Health Analysis of GV-NVR System Lite V2	
Contact Person:	Title:
Company Name:	
Telephone: (O)	(H)
Fax:	
E-Mail:	
Model:	
Bar Code:	

6.5 Check List

Read this check list before submitting the health analysis request:

- System Settings- **EXE file**
- System Log- **sys*.mdb**
- Computer System- Processor information of **HTML file**
- Computer System- Drives information of **HTML file**
- Computer System- Voltage, Temperature and Fans information of **TXT file**
- Health Analysis Form

Chapter 7 Troubleshooting

GV-NVR System Lite V2 is designed for durability. However, should problems occur, following the procedures here can help determine the cause.

GV-NVR System Lite V2 won't turn on.

If your GV-NVR System Lite V2 won't turn on or you don't hear a startup sound or any fan or drive noise, try these steps:

1. Make sure that you press the **Power** button. The power LED will turn blue when the GV-NVR System Lite V2 is turned on.



Figure 7-1

2. Make sure that the power cord is properly connected to both GV-NVR System Lite V2 and power outlet. If you are using a power strip, make sure that the strip is powered on.
3. If the problem persists, consult your dealer.

GV-NVR System Lite V2 stops responding (aka “crashed” or froze”).

If your GV-NVR System Lite V2 is not responding to your clicking, typing, or mouse movements, try to press the **Power** button on the GV-NVR System Lite V2 to turn it off. Wait 30 seconds and then press the **Power** button again to turn it on.

GV-NVR System Lite V2's hard disk corrupts

If you are experiencing file system corruption problems, such as lost clusters, cross-linked files or invalid files or directories, try these steps:

1. Use the **HD Tune** utility to scan the external hard disk for errors. Follow these steps:
 - A. Download and install **HD Tune** from <http://www.hdtune.com/>
 - B. Click the **Error Scan** tab and click **Start** to scan. Any found defects will be shown as red blocks (Figure 7-3).

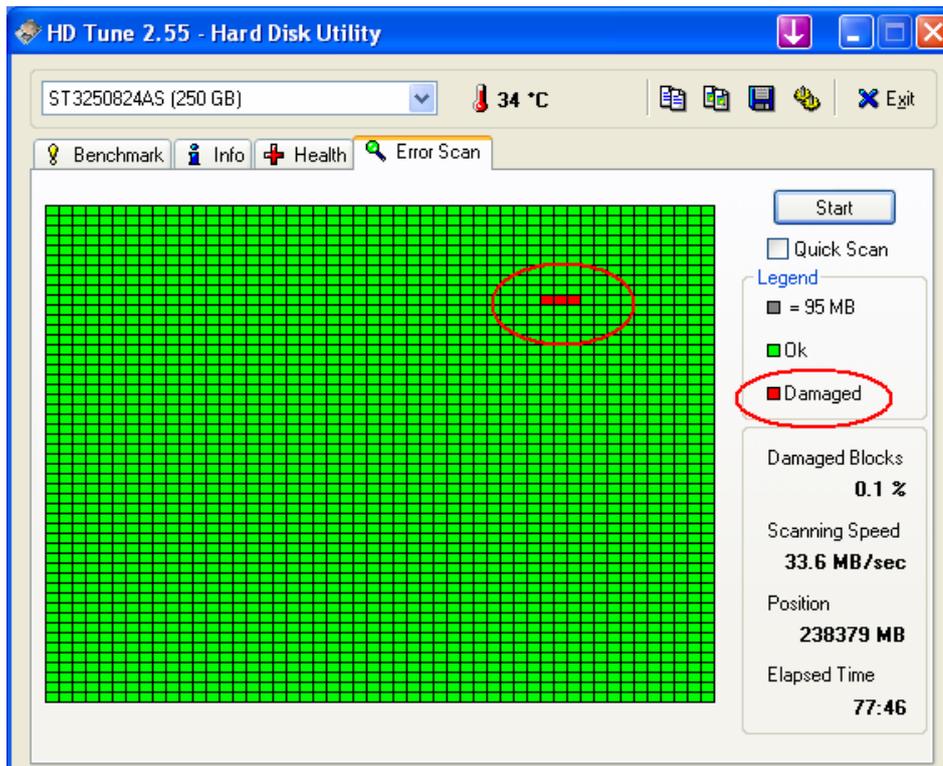


Figure 7-2

- C. If your hard disk drive is damaged, replace a new one.
2. If the HD Tune utility does not find any defects, use the Windows built-in utility to attempt to fix the errors. Follow these steps:
 - A. On the GV-Desktop, click the **Programs** button, and select **Disk Management** (Figure 3-27).

- B. Right-click the desired hard disk and select **Properties** from the file menu to display the Properties window.

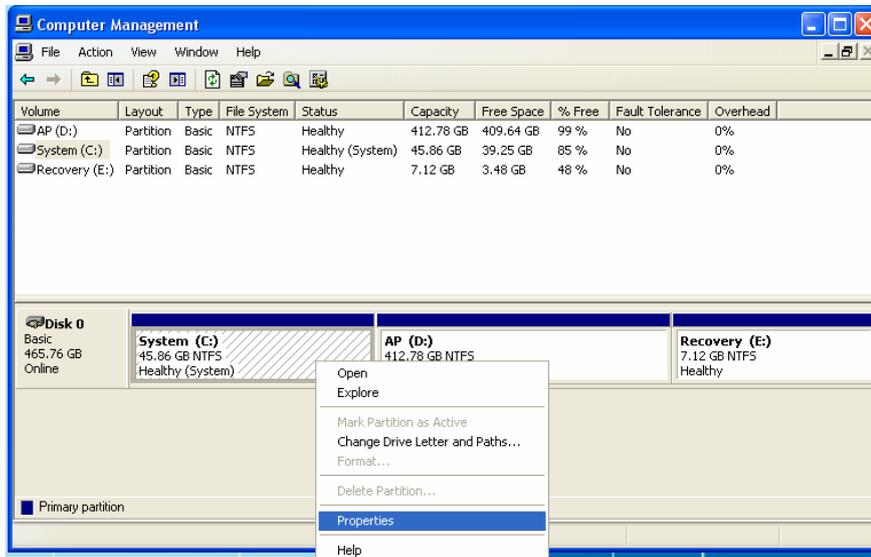


Figure 7-3

- C. Click the **Tools** tab in the upper portion of the window.
 D. Under Error-checking, click the **Check Now** button.



Figure 7-4

- E. Select **Automatically fix file system errors** and **Scan for and attempt recovery of bad sectors**.

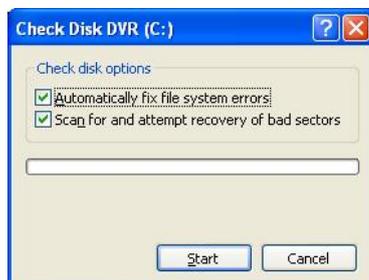


Figure 7-5

- F. Click **Start**.
- If the Windows hard disk utility still cannot fix the problem in Partition C, try rebuilding the operating system and GV-System Software. Refer to 3.11 Restoring System.
 - If the problem persists, replace an external hard drive.

GV-NVR System Lite V2 suffers virus attack.

GV-NVR System Lite V2 is designed and optimized for Windows 7 platform. It may be vulnerable to newly created worms and exploits that attack any of the underlying operating system's previously undocumented flaws. If your GV-NVR System Lite V2 suffers virus attack, try rebuilding the operating system and GV-System Software. Refer to *3.11 Restoring System*.

Live video is not displayed smoothly.

If some of live videos are not displayed smoothly, check the following status:

1. Check the bandwidth status of the network that is connected to the GV-NVR System Lite V2.
2. Check if several users are accessing the Web interface of the GV IP camera. Try to close some of open Web interfaces.

Unable to locate all the GV IP cameras by using the IP Device Utility.

If you can not locate all the GV IP cameras by using the IP Device Utility, try the following instructions:

1. Ensure all the GV IP cameras are connected to the same LAN with the GV-NVR System Lite V2 and check the network connectivity.
2. Ensure you have powered on all the GV IP cameras.
3. Click the **Search** button of the IP Device Utility again to detect the GV IP cameras.

Black images are displayed

If there is no image displayed after the GV IP cameras are connected to GV-NVR System Lite V2, check if these GV IP cameras are compatible. For compatible GV IP cameras, see *Bundled Software and Supported Cameras*.

How can I find more help?

1. Visit our website at http://www.geovision.com.tw/english/4_1.asp
2. Write us at dvrssystem@geovision.com.tw

Specifications

System

CPU	Intel Processor
RAM	2 GB
Storage	1 TB
OS	Microsoft Windows 7 Embedded 32-Bit
DirectX	10.0c
Power	Output: 65W, 19V, 3.42A; Input: 100~240V, 50~60Hz

System Monitoring and Recovery

Power Restoration	Power restored after AC power loss
Monitoring	Software Watchdog
Recovery	Automatic system rebuild from internal hard disk.

Connector

Ethernet	RJ-45, 10 / 100 / 1000 Mbps	
Video Output	VGA and HDMI	
USB 2.0	Right Side	1 port
	Left Side	2 ports
USB 3.0	Right Side	1 port

Sensor and Alarm

Sensor and Alarm	GV-IO Box 16 ports (Optional)	16 inputs, 16 outputs
	GV-IO Box 8 ports (Optional)	8 inputs, 8 outputs
	GV-IO Box 4 ports (Optional)	4 inputs, 4 outputs
Motion Detection	16 channels	

Audio

Audio Input	16 channels
Compression	AAC (16 kHz / 16 bit)

Video

Video Input	16 channels
Compression	MJPEG / MPEG4 (ASP) / H.264
Live Resolution	CIF for 16 screen divisions
Recording Mode	Round the Clock / Motion Detection / Sensor Detection / Pre & Post Recording / Schedule Recording
Instant Playback	10 sec. / 30 sec. / 1 min. / 5 min.
Water Marking	Support

Searching and Playback

Search Method	Date / Time
Date / Time / Event Search	Selectable on the tree list and calendar
Log Search	Through the log data to find the video event / time
Backup Type	DVD+R (DL) / DVD-R (DL) / DVD+R / DVD+RW / DVD-R / DVD-RW / CD-R / CD-RW
Note: For backup function, you need to connect an external USB DVD/CD burner.	

Remote Client Software

Monitoring Environment	WebCam / CenterV2 / VSM / Control Center / IP Multicast / GView for Windows PDA / MSView for Windows Smartphone / SSView for Symbian Smartphone/ Remote View for BlackBerry Smartphone / 3GPP for 3GPP phone/ AView for Android Smartphone / iView for iPhone and iPod Touch / iView HD for iPad
WebCam Live View	Max. 16 channels transmission
Remote Search	WebCam's Remote Playback

Networking

Type	TCP/ IP, LAN, WAN, Internet, ISDN
-------------	-----------------------------------

Environment

Operating Temperature	0°C ~ 35 °C / 32 °F ~ 95 °F
Humidity	0% ~ 80% RH (non-condensing)

Physical

Color	Black
Dimensions (W x H x D)	153.6 x 25.2 x 172.6 mm / 6.04 x 0.99 x 6.8 in
Weight	800 g / 1.77 lbs

Language

Type	Arabic / Bulgarian / Czech / Danish / Dutch / English / Finnish / French / German / Greek / Hebrew / Hungarian / Italian / Japanese / Lithuanian / Norwegian / Polish / Portuguese / Romanian / Russian / Serbian/ Simplified Chinese / Slovakian / Slovenian / Spanish / Swedish / Thai / Traditional Chinese / Turkish
-------------	--

Product design and specifications are subject to change without notice.

Warranty Policy

GeoVision, Inc. ("GeoVision") hereby provides three types of Limited Warranty as below:

■ **One (1) Year - Limited Warranty**

Including:

GV-Pad / GV-PadT series

■ **Two (2) Year - Limited Warranty**

Including:

1. **All hardware products (except all GV-series capture cards) and;**
2. **Pan Tilt Camera GV-PT110D within max 500,000 times of pan or tilt movement and;**
3. **PTZ Camera GV-PTZ010D within max 500,000 times of pan or tilt movement and lens zoom in/out.**

■ **Three (3) Year - Limited Warranty**

Including:

All GV-series capture cards

■ **No Warranty Coverage**

The cover of GV-series IP cameras is a consumable item and thus not included under these Limited Warranties.

All aforementioned products, **EXCLUDE OTHER PACKAGED ACCESSORIES AND ALL SOFTWARE**, (hereinafter called "Products") will be free from defects in materials/workmanship during the terms of these Limited Warranties ("Limited Warranties") from the date of purchase. These Limited Warranties parts and labor warranty are applicable to Products purchased via authorized distribution and sales channels.

If a defect arises and a valid claim is received by GeoVision within Limited Warranties Period, at its option, GeoVision will (1) repair Products at no charge, using new or refurbished replacement parts, or (2) exchange Products with a Product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original Products.

GeoVision warrants replacement parts or repairs for thirty (30) days from the date of GeoVision shipment or for the remainder of Limited Warranties Period, whichever provides longer coverage for you. When a Product or part is exchanged, any replacement item becomes your property and the replaced item becomes GeoVision's property.

It is customer's sole responsibility and requirement to prove these Products are under warranty (by submit your sales invoice and bar code), otherwise GeoVision will determine these Products' warranties period at its option. GeoVision reserves the right, at its sole discretion and any time, to modify and adjust the scope and content of Products and its

warranty without prior notice, however, any modification and adjustment thereafter will not affect or interrupt any rights belonging to Products you purchased already.

Limitations of Warranties

Limited Warranties apply only to Products manufactured by or for GeoVision that can be identified by the "GeoVision" trademark, trade name, or logo affixed to them. Limited Warranties do not apply to any non-GeoVision products including counterfeited products. GeoVision is not liable for any damage to or loss of any profit, programs, data, or other information stored on any media, or any non-GeoVision Products or part not covered by these warranties. Recovery and reinstallation of system and application software and user data are not covered under Limited Warranties. Limited Warranties do not apply if:

- a) Products have been subjected to abnormal use, improper storage, unauthorized modifications, unauthorized repair, misuse, neglect, abuse, accident, alternation, removal of any stickers or labels on the hardware, improper hardware/software installations, or other acts that are not the faults of GeoVision, including damage caused by shipping;
- b) Products have been damaged from exposure under circumstances which is over weatherproof specification of the product, an Act of God, or improper use of any electrical source, or the connection to other products not recommended for interconnection by GeoVision;
- c) Products have defects or damage caused due to computer virus attack, internet or technical issues;
- d) Products serial number have been removed, defaced or altered;
- e) Products have been sold by an unauthorized distributor or retailer; or
- f) The system case, including GV-Hot Swap DVR System, GV-Storage System and GV-NVR System Lite V2, has been opened.

Disclaimer of Warranties

Except as specified in these Warranties, all express or implied conditions, representations, and warranties including, without limitation, any implied warranties or condition of merchantability, fitness for a particular purpose, non-infringement, satisfactory quality, non-interference, accuracy of informational content, or arising from a course of dealing, law, or trade practice, are hereby excluded to the extent allowed by applicable law and are expressly disclaimed by GeoVision. To the extent implied warranties cannot be excluded, such warranties are limited in duration to the express warranties period. Because some states or jurisdictions do not allow limitations on how long implied warranties lasts, the above limitation may not apply. These warranties give customers specific legal rights, and customer may also have other rights which vary from jurisdiction to jurisdiction. This disclaimer and

exclusion shall apply even if the express warranties set forth above fails of its essential purpose.

Limitation of Liability

Regardless whether any remedy set forth herein fails of its essential purpose or otherwise, in no event will GeoVision or its suppliers be liable for any lost revenue, profit or lost or damaged data, business interruption, loss of capital, or for special, indirect, consequential, incidental, or punitive damages however caused and regardless of the theory of liability or whether arising out of the use or inability to use the GeoVision Products or otherwise and even if GeoVision has been advised of the possibility of such damages. In no event shall GeoVision's liability to customer, whether in contract, tort (including negligence), breach of warranty, or otherwise, exceed the price paid by customer for the Software that gave rise to the claim or if the Software is part of another Products, the price paid for such other Products. Because some states or jurisdictions do not allow limitation or exclusion of consequential or incidental damages, the above limitation may not apply to you. In no event shall GeoVision's total liability to you for all damages (other than as may be required by applicable law in cases involving personal injury) exceed the amount of two hundred dollars (U.S. \$200.00). The foregoing limitations will apply even if the above stated remedy fails of its essential purpose.

Customer agrees that the limitations of liability and disclaimers set forth herein will apply regardless of whether customer has accepted any other Products or service delivered by GeoVision. Customer acknowledges and agrees that GeoVision has set its prices in reliance upon the disclaimers of warranties and the limitations of liability set forth herein, that the same reflect an allocation of risk between the parties, and that the same form an essential basis of the bargain between the parties.

These Warranties shall be governed by and construed in accordance with the laws of Taiwan, Republic of China and United State, without reference to or application of choice of law rules or principles. The United Nations Convention on the International Sale of Goods shall not apply. If any portion hereof is found to be void or unenforceable, the remaining provisions shall remain in full force and effect.

GeoVision Inc. Warranty Policy last updated on December 26, 2011.

Warranty Requirements

To validate your purchase, you shall complete the online Product Registration **within 30 days from the date of purchase** at http://www.geovision.com.tw/english/4_6.asp. Or click **GeoVision Online Registration** in My Favorite for a direct link.

If you fail to complete the Product Registration, the warranty period will start **from the date of shipment**.

Before you return the product

Some problems you experience may be related to software or the operating system. It is important to investigate other sources of assistance first. Before returning the product, try the following:

1. Review troubleshooting sections in the documentation for software and peripheral devices.
2. Try rebuilding the operating system and GV-NVR System Lite V2 from the hidden partition.
3. Consult your dealer. They are your best sources for current information and support. Or you can call or email GeoVision offshore offices for assistance.

When you call or e-mail, please inform us the following:

- Model name
 - Bar Code
 - Details of the defect or problem
 - Attempted solutions
 - Your contact information
 - Reseller's contact information
4. If you find it is the software problem, please check our website or your dealer for software updates.

Obtaining Warranty Service

If you are still unable to solve the problem and suspect that it is hardware related, follow these:

1. Send an e-mail to GeoVision to start Return Merchandise Authorization (RMA) process.
E-Mail: sales@geovision.com.tw or dvrssystem@geovision.com.tw
2. Securely pack the product in its original carton using the original packing material, or in equivalent packaging.
3. The product shall be returned to **GeoVision, Taiwan** at your expense for shipping and insurance costs.

BEFORE YOU DELIVER YOUR GV-NVR SYSTEM LITE FOR WARRANTY SERVICE, IT IS YOUR RESPONSIBILITY TO BACK UP YOUR DATA. YOU WILL BE RESPONSIBLE FOR REINSTALLING ALL DATA, SETTINGS AND PASSWORDS. DATA RECOVERY IS NOT INCLUDED IN THE WARRANTY SERVICE AND GEOVISION IS NOT RESPONSIBLE FOR DATA THAT MAY BE LOST OR DAMAGED DURING TRANSIT OR A REPAIR.

Warranty Form

User's Manual for GV-NVR System Lite V2

Thank you for purchasing the GV-NVR System Lite V2. To help us validate your purchase and better serve you in the future, please go to http://www.geovision.com.tw/english/4_6.asp or click **GeoVision Online Registration** in My Favorite for a direct link to register online **within 30 days from the date of purchase**. Please keep this copy for your records.

Name: First (given)	Surname (family name)
Company Name (only if the product is owned by company):	
Mailing Address:	
City/Town:	Province/State:
Country:	Postal Code:
Telephone: (O)	(H)
Fax:	
E-Mail:	
Date of Purchase: (e.g. 16-APR-2008)	
Bar Code:	
Shipment Date:	

GeoVision, Inc.

9F, No. 246, Sec. 1, Neihu Rd.,
Neihu District, Taipei, Taiwan

Tel: +886-2-8797-8376

Fax: +886-2-8797-8335

Email: sales@geovision.com.tw

dvrssystem@geovision.com.tw

<http://www.geovision.com.tw>